WW10H9*****
WW90H9*****

Washing Machine

User manual

Imagine the possibilities

Thank you for purchasing this Samsung product.

Samsung
Smart Home

SAMSUNG

Untitled-46 1 2015-01-26 3:25:34

Content

Safety information 3

What you need to know about the safety instructions . . . 3
Important safety symbols . . . 3
Important safety precautions . . . 4

Installation 11

What's included . . . 11
Installation requirements . . . 12
Step-by-step installation . . . 14

Before you start 18

Initial settings . . . 18
Laundry guidelines . . . 20
Detergent Guidelines . . . 22

Operations 25

Screen . . . 25
Simple steps to start . . . 28
Course overview . . . 29
Settings . . . 33
Samsung Mobile Smart Control . . . 37
Samsung Smart Home app . . . 39
Samsung Smart Washer app . . . 41

Maintenance 43

Eco Drum Clean . . . 43
Emergency drain . . . 44
Cleaning . . . 45
Recovery from freezing . . . 48
Care against an extended time of disuse . . . 48

Troubleshooting 49

Checkpoints . . . 49
Information codes . . . 50

Specifications 51

Protecting the environment . . . 51
Fabric care chart . . . 52
Specification sheet . . . 53

Untitled-46 2 2015-01-26 3:25:34

Safety information

Congratulations on your new Samsung washing machine. This manual contains important information on the installation, use and care of your appliance. Please take some time to read this manual to take full advantage of your washing machine's many benefits and features.

What you need to know about the safety instructions

Please read this manual thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new appliance. Please store the manual in a safe location close to the appliance for future reference. Use this appliance only for its intended purpose as described in this instruction manual.

Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution and care when installing, maintaining and operating your washing machine.

Because the following operating instructions cover various models, the characteristics of your washing machine may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service centre or find help and information online at www.samsung.com.

Important safety symbols

What the icons and signs in this user manual mean:

⚠	**WARNING**: Hazards or unsafe practices that may result in **severe personal injury, death and/or property damage**.
⚠	**CAUTION**: Hazards or unsafe practices that may result in **personal injury and/or property damage**.
	NOTE

These warning signs are here to prevent injury to yourself and others.

Please follow them explicitly.

After reading this manual, store it in a safe place for future reference.

Read all instructions before using the appliance.

As with any equipment that uses electricity and moving parts, potential hazards exist. To safely operate this appliance, familiarize yourself with its operation and exercise care when using it.

Untitled-46 3 2015-01-26 3:25:34

Important safety precautions

WARNING: To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

Do not let children (or pets) play in or on your washing machine. The washing machine door does not open easily from the inside and children may be seriously injured if trapped inside.

This appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

For use in Europe: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This appliance should be positioned so that the power plug, the water supply taps, and the drain pipes are accessible.

For appliances with ventilation openings in the base, that a carpet must not obstruct the openings.

The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.

Untitled-46 4 2015-01-26 3:25:34

CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

⚠ WARNING: Critical installation WARNINGS

The installation of this appliance must be performed by a qualified technician or service company.

- Failure to do so may result in electric shock, fire, an explosion, problems with the product, or injury.

The appliance is heavy, therefore take care when lifting it.

Plug the power cord into an AC 220 - 240 V / 50 Hz wall socket or higher and use the socket for this appliance only. Never use an extension cord.

- Sharing a wall socket with other appliances using a power strip or extending the power cord may result in electric shock or fire.
- Ensure that the power voltage, frequency, and current are the same as those of the product specifications. Failure to do so may result in electric shock or fire. Plug the power plug into the wall socket firmly.

Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.

- Unplug the power plug and clean it with a dry cloth.
- Failure to do so may result in electric shock or fire.

Plug the power plug into the wall socket so that the cord is running towards the floor.

- If you plug the power plug into the socket in the opposite direction, the electric wires within the cable may be damaged and this may result in electric shock or fire.

Keep all packaging materials out of the reach of children as these may be dangerous.

- If a child places a bag over its head, it may suffocate.

When the appliance, power plug or power cord is damaged, contact your nearest service centre.

This appliance must be properly grounded.

Do not ground the appliance to a gas pipe, plastic water pipe, or telephone line.

- This may result in electric shock, fire, an explosion, or problems with the product.
- Never plug the power cord into a socket that is not grounded correctly and make sure that it is in accordance with local and national regulations.

Do not install this appliance near a heater or any inflammable material.

Do not install this appliance in a humid, oily or dusty location, or in a location exposed to direct sunlight or water (rain drops).

Do not install this appliance in a location exposed to low temperatures.

- Frost may cause the tubes to burst.

Do not install this appliance in a location where gas may leak.

- This may result in electric shock or fire.

Untitled-46 5 2015-01-26 3:25:35

Do not use an electric transformer.

- This may result in electric shock or fire.

Do not use a damaged power plug, damaged power cord, or loose wall socket.

- This may result in electric shock or fire.

Do not pull or excessively bend the power cord.

Do not twist or tie the power cord.

Do not hook the power cord over a metal object, place a heavy object on the power cord, insert the power cord between objects, or push the power cord into the space behind the appliance.

- This may result in electric shock or fire.

Do not pull the power cord when unplugging the power plug.

- Unplug the power plug by holding the plug.
- Failure to do so may result in electric shock or fire.

⚠ CAUTION: Installation CAUTIONS

This appliance should be positioned in such a way that the power plug is easily accessible.

- Failure to do so may result in electric shock or fire due to electric leakage.

Install your appliance on a solid, level floor that can support its weight.

- Failure to do so may result in abnormal vibrations, movement, noise, or problems with the product.

⚠ WARNING: Critical usage WARNINGS

If the appliance is flooded, turn off the water & power supplies immediately and contact your nearest service centre.

- Do not touch the power plug with wet hands.
- Failure to do so may result in electric shock.

If the appliance generates a strange noise, a burning smell, or smoke, unplug the power plug immediately and contact your nearest service centre.

- Failure to do so may result in electric shock or fire.

In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug. Do not touch the appliance or power cord.

- Do not use a ventilating fan.
- A spark may result in an explosion or fire.

Do not let children play in or on the washing machine. In addition, when disposing of the appliance, remove the washing machine door lever.

- If trapped inside the product, children may suffocate to death.

Make sure to remove the packaging (sponge, styrofoam) attached to the bottom of the washing machine before using it.

Do not wash items contaminated with gasoline, kerosene, benzene, paint thinner, alcohol or other inflammable or explosive substances.

- This may result in electric shock, fire, or an explosion.

Untitled-46 6 2015-01-26 3:25:35

Do not open the washing machine door by force while it is operating (high-temperature washing/ drying/spinning).

- Water flowing out of the washing machine may result in burns or cause the floor to be slippery. This may result in injury.
- Opening the door by force may result in damage to the product or injury.

Do not insert your hand under the washing machine while an operation is in progress.

- This may result in injury.

Do not touch the power plug with wet hands.

- This may result in electric shock.

Do not turn the appliance off by unplugging the power plug while an operation is in progress.

- Plugging the power plug into the wall socket again may cause a spark and result in electric shock or fire.

Do not let children or the infirm use this washing machine without proper supervision. Do not let children climb in or onto the appliance.

- This may result in electric shock, burns or injury.

Do not insert your hand or a metal object under the washing machine while it is operating.

- This may result in injury.

Do not unplug the appliance by pulling the power cord. Always grip the plug firmly and pull it straight out of the outlet.

- Damage to the power cord may cause a short-circuit, fire and/or electric shock.

Do not attempt to repair, disassemble, or modify the appliance yourself.

- Do not use a fuse (such as copper, steel wire, etc.) other than a standard fuse.
- When the appliance needs to be repaired or reinstalled, contact your nearest service centre.
- Failure to do so may result in electric shock, fire, problems with the product, or injury.

If the water supply hose comes loose from the water tap and floods the appliance, unplug the power plug.

- Failure to do so may result in electric shock or fire.

Unplug the power plug when the appliance is not being used for long periods of time or during a thunder or lightning storm.

- Failure to do so may result in electric shock or fire.

If any foreign substance enters into the appliance, unplug the power plug and contact you nearest Samsung Customer Service.

- This may result in electric shock or fire.

Untitled-46 7 2015-01-26 3:25:35

⚠ CAUTION: Usage CAUTIONS

When the washing machine is contaminated by a foreign substance such as detergent, dirt, food waste, etc., unplug the power plug and clean the washing machine using a damp, soft cloth.

- Failure to do so may result in discolouration, deformation, damage, or rust.

The front glass may be broken by a strong impact. Take care when using the washing machine.

- If the glass is broken, it may result in injury.

After a water supply failure or when reconnecting the water supply hose, open the water tap slowly.

Open the water tap slowly after a long period of non-use.

- The air pressure in the water supply hose or the water pipe may damage a product part or result in a water leak.

If a draining error occurs during an operation, check if there is a draining problem.

- If the washing machine is used when it is flooded because of a draining problem, it may result in electric shock or fire.

Insert the laundry into the washing machine completely so that the laundry does not get caught in the door.

- If laundry gets caught in the door, it may result in damage to the laundry or the washing machine, or result in a water leak.

Turn the water supply off when the washing machine is not being used.

Ensure that the screws on the water supply hose connector are properly tightened.

- Failure to do so may result in property damage or injury.

Ensure that the rubber seal and front door glass are not contaminated by a foreign substance (e.g. waste, thread, hair, etc.).

- If a foreign substance is caught in the door or the door is not completely closed, it may cause a water leak.

Open the water tap and check if the water supply hose connector is firmly tightened and that there is no water leak before using the product.

- If the screws on the water supply hose connector are loose, it may result in a water leak.

The product you have purchased is designed for domestic use only.

Using the product for business purposes qualifies as a product misuse. In this case, the product will not be covered by the standard warranty provided by Samsung and no responsibility can be attributed to Samsung for malfunctions or damages resulting from such misuse.

Do not stand on the appliance or place objects (such as laundry, lighted candles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance.

- This may result in electric shock, fire, problems with the product, or injury.

Do not spray volatile material such as insecticide onto the surface of the appliance.

- As well as being harmful to humans, this may result in electric shock, fire or problems with the product.

Do not place objects that generate electromagnetic fields near the washing machine.

- This may result in injury due to a malfunction.

Untitled-46 8 2015-01-26 3:25:35

Water drained during a high-temperature wash or drying cycle is hot. Do not touch the water.

- This may result in burns or injury.

Do not wash, spin, or dry water-proof seats, mats, or clothing (*) unless your appliance has a special cycle for washing these items.

(*): Woollen bedding, rain covers, fishing vests, ski pants, sleeping bags, diaper covers, sweat suits, and bicycle, motor cycle and car covers, etc.

- Do not wash thick or hard mats even if the washing machine mark is on the care label. This may result in injury or damage to the washing machine, walls, floor, or clothing due to abnormal vibrations.
- Do not wash throw rugs or doormats with rubber backing. The rubber backing may come off and stick to inside the drum, and this may result in malfunction such as a drainage error.

Do not operate the washing machine when the detergent drawer is removed.

- This may result in electric shock or injury due to a water leak.

Do not touch the insides of the drum during or just after drying as it is hot.

- This may result in burns.

Do not insert your hand into the detergent drawer.

- This may result in injury as your hand may be caught by the detergent input device.

Do not place any objects (such as shoes, food waste, animals) other than laundry into the washing machine.

- This may result in damage to the washing machine, or injury and death in the case of pets due to the abnormal vibrations.

Do not press the buttons using sharp objects such as pins, knifes, fingernails, etc.

- This may result in electric shock or injury.

Do not wash laundry contaminated by oils, creams or lotions usually found in skincare shops or massage clinics.

- This may cause the rubber seal to become deformed and result in a water leak.

Do not leave metal objects such as safety pins, hair pins or bleach in the drum for long periods of time.

- This may cause the drum to rust.
- If rust starts appearing on the surface of the drum, apply a (neutral) cleansing agent to the surface and use a sponge to clean it. Never use a metal brush.

Do not use dry cleaning detergent directly and do not wash, rinse, or spin laundry contaminated by dry cleaning detergent.

- This may result in spontaneous combustion or ignition due to the heat from the oxidation of the oil.

Do not use water from water cooling/heating devices.

- This may result in problems with the washing machine.

Do not use natural hand-washing soap for the washing machine.

- If it hardens and accumulates inside the washing machine, it may result in problems with the product, discolouration, rust, or bad odours.

Place socks and brassieres in a washing net and wash them with the other laundry.

Do not wash large laundry items such as bedding in the washing net.

Untitled-46 9 2015-01-26 3:25:35

- Failure to do so may result in injury due to abnormal vibrations.

Do not use hardened detergent.

- If it accumulates inside the washing machine, it may result in a water leak.

Make sure that the pockets of all the clothing items to be washed are empty.

- Hard, sharp objects such as coins, safety pins, nails, screws, or stones can cause extensive damage to the appliance.

Do not wash clothing with large buckles, buttons or other heavy metal objects.

Sort the laundry by color on the basis of its colorfastness and select the recommended cycle, water temperature and additional functions.

- This may result in discoloration or fabric damage.

Take care that children's fingers are not caught in the door when you close it.

- Failure to do so may result in injury.

⚠ WARNING: Critical cleaning WARNINGS

Do not clean the appliance by spraying water directly onto it.

Do not use the a strong acidic cleaning agent.

Do not use benzene, thinner or alcohol to clean the appliance.

- This may result in discolouration, deformation, damage, electric shock or fire.

Before cleaning or performing maintenance, unplug the appliance from the wall socket.

- Failure to do so may result in electric shock or fire.

Untitled-46 10 2015-01-26 3:25:35

Installation

Follow these instructions carefully to ensure proper installation of the washing machine and to prevent accidents when doing laundry.

What's included

Make sure all the parts are included in the product package. If you have a problem with the washing machine or the parts, contact a local Samsung customer centre or the retailer.

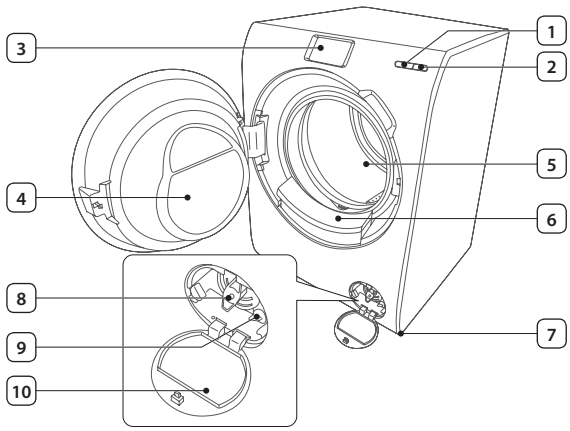

1	Start button
2	Power button
3	Control screen
4	Door
5	Drum
6	Auto Dispense unit
7	Levelling feet
8	Debris filter
9	Emergency drain tube
10	Filter cover

Spanner

Bolt caps



Hose guide

Cold water supply hose

Hot water supply hose



Aqua pebble set

Bolt caps : The provided number (3 to 6) of bolt caps depends on the model.
Hot water supply hose: Applicable models only.
Aqua pebble set: 200 ml and 100 ml (MAX).

Untitled-46 11 2015-01-26 3:25:35

Installation requirements

Electrical supply and grounding

- AC 220-240 V / 50 Hz fuse or circuit breaker is required
- Use an individual branch circuit specific to the washing machine

To ensure proper grounding, the washing machine comes with a power cord featuring a three-prong grounding plug for use in a properly installed and grounded outlet.

Check with a qualified electrician or serviceperson if you are not sure about the grounding.

Do not modify the provided plug. If it does not fit the outlet, call a qualified electrician to install a proper outlet.

WARNING

- Do NOT use an extension cord.
- Use only the power cord that comes with the washing machine.
- Do NOT connect the ground wire to plastic plumbing, gas lines, or hot water pipes.
- Improperly connected grounding conductors may cause electric shock.

Water supply

A proper water pressure for this washing machine is between 50 kPa and 800 kPa. Water pressure less than 50 kPa may cause the water valve not to close completely. Or, it may take longer to fill the drum, causing the washing machine to turn off. Water taps must be within 120 cm from the rear of the washing machine so that the provided inlet hoses reach the washing machine.

To reduce the risk of leaks

- Make sure water taps are easily accessible.
- Turn off the taps when the washing machine is not in use.
- Check for any leaks at the water inlet hose fittings on a regular basis.

CAUTION

Before using the washing machine for the first time, check all connections at the water valve and taps for any leaks.

Untitled-46 12 2015-01-26 3:25:35

Drain

Samsung recommends a standpipe in height of 65 cm. The drain hose must be connected through the hose clip to the standpipe, and the standpipe must fully cover the drain hose.

Flooring

For best performance, the washing machine must be installed on a solid floor. Wood floors may need to be reinforced to minimize vibration and/or unbalanced loads. Carpeting and soft tile surfaces are not a good resistance to vibrations and may cause the washing machine to move slightly during the spin cycle.

CAUTION

Do NOT install the washing machine on a platform or a poorly supported structure.

Water temperature

Do not install the washing machine in areas where water may freeze as the washing machine always retains some water in its water valves, pumps, and/or hoses. Frozen water left in the connection parts may cause damage to belts, the pump, and other components of the washing machine.

Alcove or closet installation

Minimum clearance for stable operation:

Sides	25 mm	Rear	50 mm
Top	25 mm	Front	550 mm

If both the washing machine and a dryer are installed in the same location, the front of the alcove or closet must have at least a 550 mm unobstructed air opening. Your washing machine alone does not require a specific air opening.

Untitled-46 13 2015-01-26 3:25:35

Step-by-step installation

STEP 1 - Select a location

Location requirements:

- Solid, level surface without carpeting or flooring that may obstruct ventilation
- Away from direct sunlight
- Adequate room for ventilation and wiring
- The ambient temperature is always higher than the freezing point (0 ˚C)
- Away from a heat source

STEP 2 – Remove the shipping bolts

Unpack the product package and remove all shipping bolts.

1. Loosen all shipping bolts on the rear of the machine using the supplied spanner.

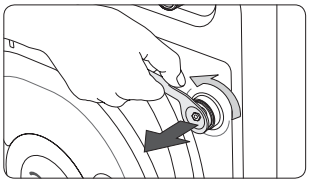

2. Fill the holes with the supplied plastic bolt caps.
   Keep the shipping bolts for future use.

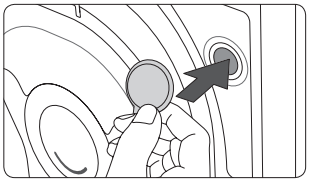

WARNING

Packaging materials can be dangerous to children. Dispose all packaging material (plastic bags, polystyrene, etc.) out of children's reach.

STEP 3 - Adjust the levelling feet

1. Gently slide the washing machine into position. Excessive force may damage the levelling feet.
2. Level the washing machine by manually adjusting the levelling feet.

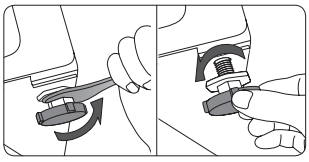

3. When levelling is complete, tighten the nuts using the spanner.

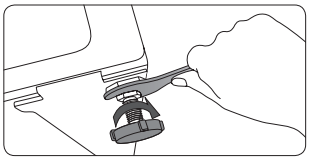

Untitled-46 14 2015-01-26 3:25:36

STEP 4 - Connect the water hose

Connect the water supply hose to the water tap.

1. Remove the **adaptor (A)** from the **water supply hose (B)**.

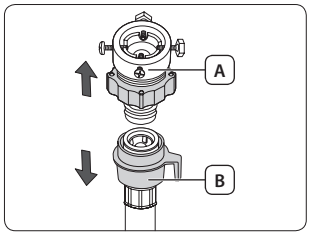

2. Use a Philips screwdriver to loosen four screws on the adaptor.

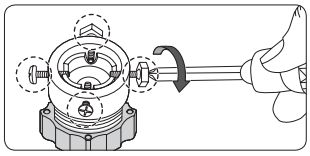

3. Hold the adaptor and turn **part (C)** in the arrow direction to loosen it by 5 mm (*).

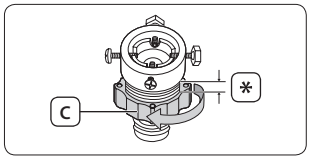

4. Insert the adaptor into the water tap, and tighten the screws while lifting up the adaptor.
5. Turn **part (C)** in the arrow direction to tighten it.

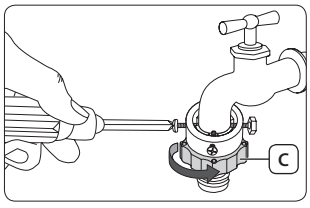

6. While holding down **part (E)**, connect the water supply hose to the adaptor. Then, release **part (E)**. The hose fits into the adaptor with a clicking sound.

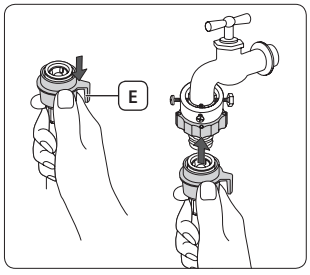

Untitled-46 15 2015-01-26 3:25:36

7. Connect the other end of the water supply hose to the inlet valve on the back of the washing machine. Turn the hose clockwise to tighten.

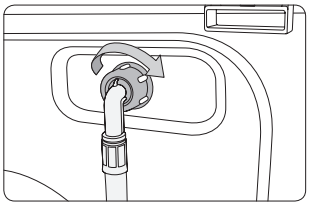

8. Open the water tap and check if there are any leaks around the connection areas. If there are water leaks, repeat the steps above.

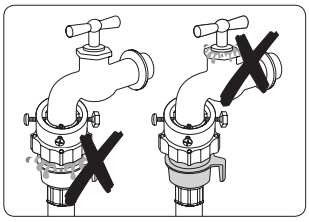

- If using a screw type of water tap, connect the water hose to the water tap as shown.

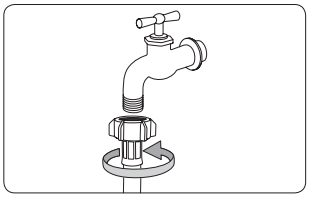

WARNING

Stop using the washing machine if there is a water leak, and contact a local Samsung service centre. Otherwise, this may cause electric shock.

CAUTION

Do not stretch the water supply hose by force. If the hose is too short, replace the hose with a longer, high-pressure hose.

- After connecting the water supply hose to the adaptor, check if it is connected properly by pulling the water supply hose downwards.
- Use a popular type of water taps. If the tap is square-shaped or too big, remove the spacer ring before inserting the tap into the adaptor.

For models with an additional hot water inlet:

1. Connect the red end of the hot water supply hose to the hot water inlet on the back of the machine.
2. Connect the other end of the hot water supply hose to the hot water tap.

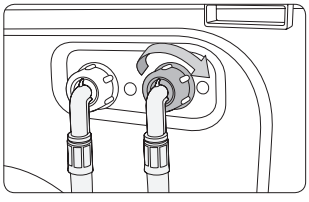

Untitled-46 16 2015-01-26 3:25:37

Aqua hose (applicable models only)

The aqua hose alerts users of a risk of water leaks. It senses the water flow and turns red on the centre **indicator (A)** in case of a leak.

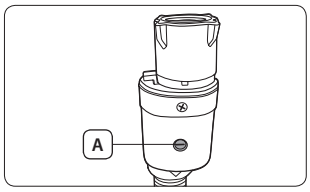

STEP 5 - Position the drain hose

The drain hose can be positioned in three ways:

Over the edge of a wash basin

The drain hose must be placed at a height of between 60 cm and 90 cm (*) from the floor. To keep the spout of the drain hose bent, use the supplied **plastic hose guide (A)**. Secure the guide to the wall using a hook to ensure stable drainage.

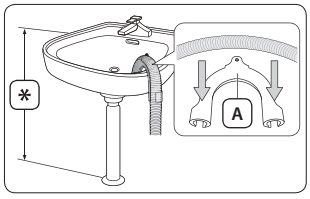

In a sink drain pipe

The drain pipe must be above the sink siphon so that the end of the hose is at least 60 cm above the floor.

In a drain pipe

The drain pipe should be between 60 cm and 90 cm high (*). It is advisable to use a 65 cm high vertical pipe. Make sure the drain hose is connected to the stand pipe at a slant.

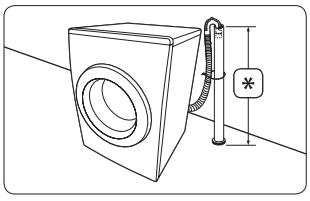

Drain standpipe requirements:

- Minimum diameter of 5 cm
- Minimum carry-away capacity of 60 litres per minute

STEP 6 – Turn on the washing machine

Plug the power cord into a wall socket featuring an AC 220-240 V / 50 Hz approved electrical outlet protected by a fuse or circuit breaker. Then, press the **Power** button to turn on the washing machine.

Untitled-46 17 2015-01-26 3:25:37

Before you start

Initial settings

When the washing machine turns on for the first time, the welcome screen appears with the Samsung logo. Follow the onscreen instructions to complete the initial settings. You can change the initial settings later by accessing the Settings screen.

STEP 1 - Set Language

Set a preferred menu language.

1. Select a language.
2. Tap **Next**.

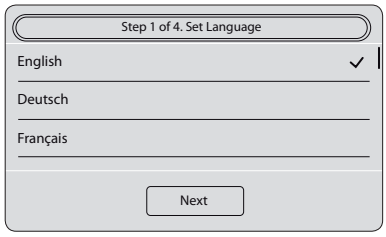

STEP 2 - Set Date & Time

Set the current date and time.

1. Tap the arrows to set the time for each time element.
2. Tap **Next**.

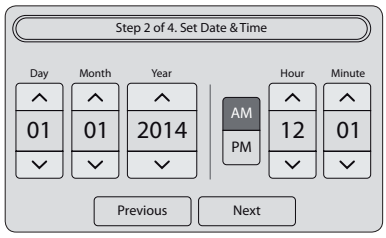

The default time is set to the 12-hour format.
To switch between the **AM** and **PM** elements, simply tap the corresponding element.

Untitled-46 18 2015-01-26 3:25:37

STEP 3 - Set Auto Dispense

The Auto Dispense unit dispenses an appropriate amount of detergent and fabric softener into the drum according to the course and cycle.

1. Both **Auto Detergent** and **Auto Softener** are set to **On** by default. To change the setting, slide the corresponding bar to **Off**.
2. Set the **Amount** and the **Water Hardness**.
3. Set the **Amount** and the **Concentration**.
4. Tap **Next**.

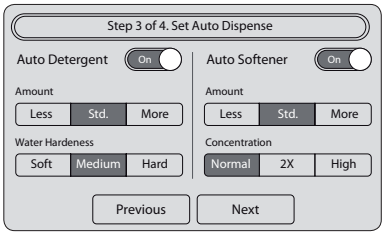

STEP 4 - Set Auto Update

Auto Update updates the firmware automatically for improved performance and/or to fix known bugs through communication with the update server. Once the firmware is updated, some functions of the washing machine may not be available depending on the firmware version.

1. To update the firmware automatically, set **Auto Update** to **On**.
2. Tap **Done**.

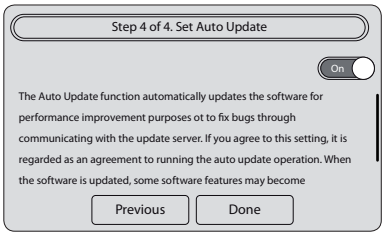
Step 4 of 4. Set Auto Update
On
The Auto Update function automatically updates the software for performance improvement purposes ot to fix bugs through communicating with the update server. If you agree to this setting, it is regarded as an agreement to running the auto update operation. When the software is updated, some software features may become
Previous
Done

STEP 5 - Run Calibration (recommended)

Calibration ensures accurate weight detection by the washing machine. Make sure the drum is empty before running Calibration.

1. Tap **Settings** > **Calibration** > **Start**.
   - The door will be locked during the operation.
   - The drum keeps rotating clockwise and anticlockwise for several minutes.
2. When complete, the washing machine turns off automatically.

Untitled-46 19 2015-01-26 3:25:37

Laundry guidelines

STEP 1 - Sort

Sort the laundry according to these criteria:

- **Care Label**: Sort the laundry into cottons, mixed fibres, synthetics, silks, wools, and rayon.
- **Colour**: Separate whites from colours.
- **Size**: Mixing different-sized items together in the drum improves the washing performance.
- **Sensitivity**: Wash delicate items separately using an Easy Iron option for pure, new woollen items, curtains, and silk items. Check the labels on the items.

Make sure to check the care label on the clothing, and sort them accordingly before starting the wash.

STEP 2 - Empty pockets

Empty all the pockets of your laundry items

- Metal objects such as coins, pins, and buckles on clothing may damage other laundry items as well as the drum.

Turn clothing with buttons and embroideries inside out

- If pants or jacket zippers are open while washing, the drum may be damaged. Zippers should be closed and fixed with a string.
- Clothing with long strings may become entangled with other clothes. Make sure to tie the strings before starting the wash.

STEP 3 - Use a laundry net

- Brassieres (water washable) must be placed in a laundry net. Metal parts of the brassieres may break through and tear other laundry items.
- Small, light clothing such as socks, gloves, stockings, and handkerchiefs may become caught around the door. Place them inside a fine laundry net.
- Do not wash the laundry net by itself without other laundry. This may cause abnormal vibrations that could move the washing machine and result in injury.

STEP 4- Prewash (if necessary)

Select the Prewash option for the selected course if the laundry is heavily soiled. Do not use the Prewash option when detergent is manually added into the drum.

Untitled-46 20 2015-01-26 3:25:38

STEP 5- Determine the load capacity

Do not overload the washing machine. Overloading may cause the washing machine to not wash properly. For the load capacity for the type of clothing, see page **29**.

When washing bedding or bedding covers, the wash time may be lengthened or the spin efficiency may be reduced. For bedding or bedding covers, the recommended maximum spin cycle speed is 800 rpm, and the load capacity is 2.0 kg or less.

CAUTION

If the laundry is unbalanced and the "**UE**" error code is displayed, redistribute the load. Unbalanced laundry may reduce the spinning performance.

STEP 6- Apply a proper detergent type

The type of detergent depends on the type of fabric (cotton, synthetic, delicate items, wool), colour, wash temperature, and degree of soiling. Always use "low suds" laundry detergent, which is designed for automatic washing machines.

- Follow the detergent manufacturer's recommendations based on the weight of the laundry, the degree of soiling, and the hardness of the water in your local area. If you are not sure about the water hardness, contact a local water authority.
- Do not use detergent that tends to be hardened or solidified. This detergent may remain after the rinse cycle, blocking the drain outlet.

CAUTION

When washing wool using the wool course, use only a neutral liquid detergent. If used with the Wool course, powder detergent may remain on the laundry and discolour the laundry.

Untitled-46 21 2015-01-26 3:25:38

Detergent Guidelines

Auto Dispense

The washing machine provides a two-compartment dispenser: the left compartment for detergent, and the right compartment for fabric softener. The Auto Dispense unit dispenses an appropriate amount of detergent and fabric softener into the drum according to the course and cycle.

CAUTION

- Use only a liquid detergent and fabric softener with the Auto Dispense unit.
- Make sure the Auto Dispense unit is inserted completely. The washing machine will not start operating until the Auto Dispense unit is inserted properly.
- When applying a different detergent, make sure to clean the detergent compartment first.
- Do not mix detergent with fabric softener in either compartment.
- To prevent detergent from hardening, do not open the cap once the detergent has been applied to the compartment.
- Do not use any bleach that may cause corrosion and/or generate gas.
- Do not turn the Auto Dispense unit upside down. The content may spill out of the vents.
- Do not press the outlet at the bottom of the Auto Dispense unit while moving the unit. The content may leak.
- Use caution when inputting detergent or fabric softener in the unit. The content may spill around.
- Make sure to remove the Auto Dispense unit before applying detergents.
- When removing the Auto Dispense unit to check the remaining amount of detergent upon or before an error message, the unit may have some small amount of detergent remaining or leaking from the bottom of the unit.
- Fully insert the Auto Dispense unit. Incomplete insertion may cause the unit to fail in dispensing.
- By default, Auto Dispense turns off in the Delicates, Wool, Baby Care, or Outdoor Care courses.

  To enable Auto Dispense in these courses, tap **Settings** or the **Quick Panel Bar** > **Auto Dispense**, and change the settings as necessary.

Untitled-46 22 2015-01-26 3:25:38

1. Open the door, and pull out the Auto Dispense unit from the washing machine.

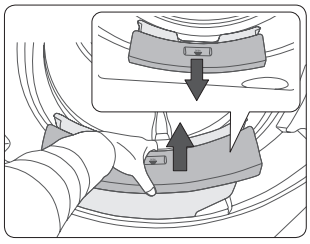

2. Turn the left knob anticlockwise to open, and apply detergent to the left compartment to the max line.
3. Turn the right knob anticlockwise to open, and apply fabric softener to the right compartment to the max line.
4. Lock the knobs by turning them clockwise.

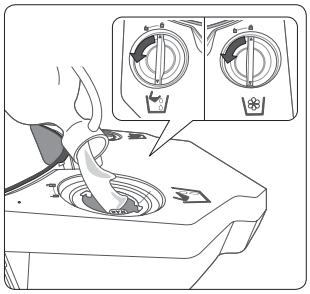

5. Reinsert the Auto Dispense unit in the original position.
   Use caution when inserting the unit as the content may spill out of the vents on either side.
6. Turn on **Auto Detergent** and **Auto Softener**.
   See "**Auto Dispense**" on page **33**.

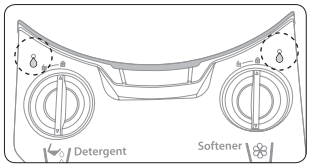

Untitled-46 23
2015-01-26 3:25:38

Manual Dispense

In case you don't want to use the dispenser (Auto Dispense unit), you can either dose the detergent directly into the drum or use the provided aqua pebble when applying detergent manually. The Aqua Pebbles comes in two sizes and are provided as accessories with your appliance. Choose an Aqua Pebble that is appropriate for the detergent amount.

1. Turn off **Auto Detergent**.
   See "**Auto Dispense**" on page **33**.
2. Apply a powder, gel, or liquid detergent to a proper **Aqua pebble (A)**. Check the amount marker on the inner side of the aqua pebble.

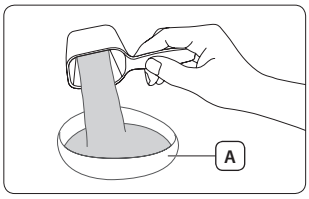

3. Insert the aqua pebble near the end of the drum.

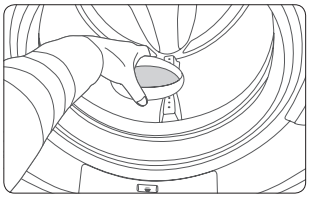

When the wash is complete, remove the aqua pebble from the drum and keep it clean for later use.

CAUTION

- Fabric softener can be applied only using the Auto Dispense unit. Manual input is not allowed.
- Use caution when inserting the aqua pebble as it is supposed to be balanced at the first of the wash. Tipping the aqua pebble before the start of a wash may cause detergent residue on the laundry at the end of the wash, causing discolouration to laundry and/or reduced washing performance.
- Do not apply detergent to both the auto detergent compartment and the aqua pebble.
- When applying a different detergent, make sure to clean the aqua pebble first.
- Do not insert the aqua pebble into a folded blanket or between different laundry items.
- Do not select the Pre Wash option when using the aqua pebble.
- A heavy application of detergent may cause the following problems, resulting in a system failure and/or shortened product life.
- Excessive amounts of detergent cause bubble surpluses and extend the rinse time as a result.
- This may also cause detergent remaining in the drum after the wash is complete.
- Apply appropriate amounts of detergent according to the specifications of the detergent manufacturer.
- In case of manual detergent dosage, it is recommended to use the Aqua Pebble when coloured laundry items are washed.

Untitled-46 24 2015-01-26 3:25:38

Operations

Screen

The actual screen may differ from the image below depending on the model.

Main screen

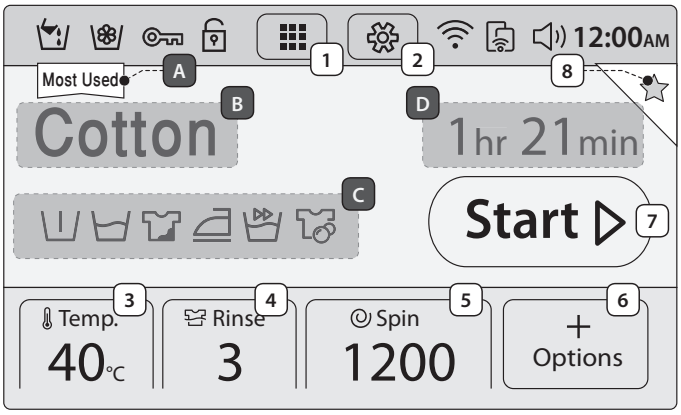

Buttons

1	**Course**	Tap to enter the course tile.
2	**Settings**	Tap to enter the settings screen.
3	**Temp.**	Tap to change the temperature for the current course.
4	**Rinse**	Tap to change the rinse times for the current course.
5	**Spin**	Tap to change the spinning speed for the current course.
6	**Options**	Tap to enter the course options screen.
7	**Start**	Tap to start an operation.
8	**Favourite**	Tap to add the current course configuration to the Favourite list. You can add up to 4 custom courses, which appear at the first of the course tile.

Information

A	**Most Used**	Displays the most frequently used course.
B	**Current course**	Displays the current course.
C	**Active option**	Displays an active option(s) for the current course.
D	**Estimated time**	Displays the estimated operation time for the current course.

Untitled-46 25 2015-01-26 3:25:38

Status bar

	Auto Detergent	If this indicator turns on, Auto Detergent is enabled.
	Auto Softener	If this indicator turns on, Auto Softener is enabled.
	Door Lock	If this indicator turns on, the door is locked to prevent a door opening during operation.
	Child Lock	If this icon turns to a closed lock [ ], the Child Lock is set to prevent accidents by children or infants.
	Network	It displays the Wi-Fi network connection state.
	Smart Control	If this indicator turns on, the washing machine can be controlled on a mobile device.
	Sound	If the icon turns to Mute [ ], no sound is output.
12:00AM	**Time**	The current time is displayed.

Quick panel bar

On the **Quick panel bar**, 6 items are available: Child Lock, Drum Light, Auto Detergent, Auto Softener, Network, and Smart Control.

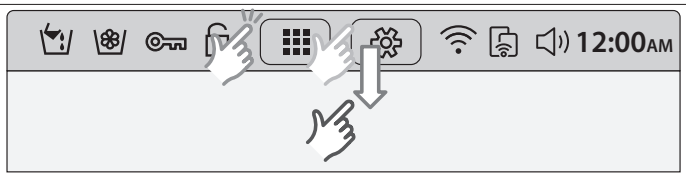

1. Tap the **Status bar**, or swipe it downward to display available items.

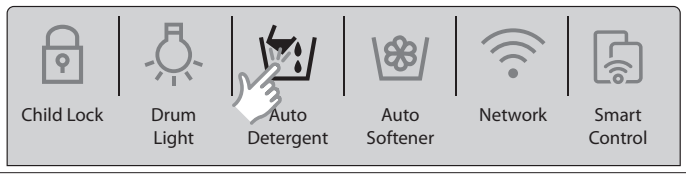

2. Tap to turn an item on/off, or change the current settings.

- For advanced settings, go to the settings screen, and make changes to your preference.
- Active items are lit while inactive items are greyed out.

Untitled-46 26 2015-01-26 3:25:39

Options screen

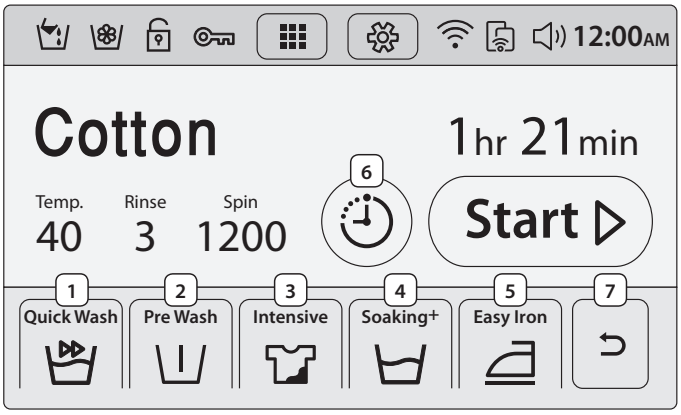

1	**Quick Wash**	Specific for less soiled clothing for a load less than 2 kg.
2	**Pre Wash**	A preliminary washing cycle is added before the main wash.
3	**Intensive**	The operation time for each cycle is longer than normal.
4	**Soaking+**	This is useful to remove stubborn stains on laundry.
5	**Easy Iron**	This is useful to reduce wrinkles.
6	**Delay End**	Use this to specify the end time of a selected course. See page **32**.
7	**Return**	Return to the main screen.

For details on each option, see "**Options**" on page **31**.

Untitled-46 27 2015-01-26 3:25:40

Simple steps to start

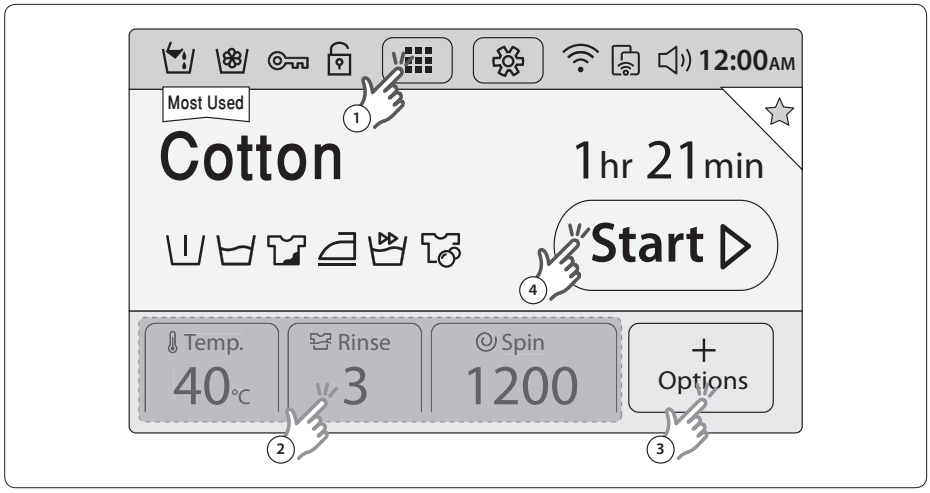

1. Press the **Power** button to display the main screen.
2. On the main screen, tap the **Course** icon on the top centre to display the course tile.
3. Select a course. The washing machine supports 22 courses.
4. Change the course settings (**Temp.**, **Rinse**, and **Spin**) if necessary.
5. Tap the **Options** icon at the bottom right corner. Then, select options and change the option settings.
6. Tap **Start**.

- The washing machine has the default course settings and options available for each course. You can accept the default or make changes to your preference.
- You can select a course on the main screen. Simply swipe the screen to the left to open the next course. To return to the previous list, simply swipe to the right.

Untitled-46 28 2015-01-26 3:25:40

Course overview

Standard courses

Course	Description & Max load (kg)	
Favourite	• Add the current course configuration to the Favourite list, and quickly access the course configuration later. You can add up to 4 custom courses, which appear at the first of the course tile.	-
Most Used	• The most frequently used course is displayed on the upper left corner of the main screen by default.	-
Auto Optimal Wash	• Auto Optimal Wash adjusts the detergent amount and the course cycles according to the laundry weight and contamination level. This is best used with the Auto Dispense feature.	Max
Cotton	• For cottons, bed linens, table linens, underwear, towels, or shirts. • The washing time and the number of rinse cycles are automatically adjusted according to the load.	Max
Synthetics	• For blouses or shirts that are made of polyester (diolen, trevira), polyamide (perlon, nylon), or the like.	5
Denim	• Featuring a higher water level in the main wash and an extra rinse cycle to ensure that no powder detergent remains.	3
Dark Garment	• Featuring additional rinses and reduced spinning to ensure that the laundry is washed gently and rinsed thoroughly.	4
Super Speed	• Fast completion within 1 hour for daily items such as underwear and shirts.	5
Super Eco Wash	• The Eco Bubble technology helps reduce power consumption. Featured by low-temperature washing efficiency, Super Eco Wash compares its washing performance and power saving to the conventional Eco Bubble-less Cotton cycle.	4
Outdoor Care	• For outdoor clothes, skiwear, and sportswear that are made of functional materials such as spandex, stretch, and micro-fibre.	2
Baby Care	• Featuring a high-temperature wash and extra rinses to ensure that no powder detergent remains.	4
Wool	• Specific for machine-washable wool for loads less than 2.0 kg. • The wool course features gentle cradling and soaking to protect the wool fibres from shrinkage/distortion. • A neutral detergent is recommended.	2

Untitled-46 29 2015-01-26 3:25:40

Course	Description & Max load (kg)	
Delicates	• For sheer fabrics, bras, lingerie (silk), and other handwash-only fabrics. • For best performance, use liquid detergent.	2
Bedding	• For bed spreads, bed sheets, bedding covers, etc. • For best results, wash only 1 type of bedding and make sure the load weighs less than 2.5 kg.	2.5
Spin	• Featuring an additional spin cycle to remove water thoroughly.	-
Rinse+Spin	• Featuring an additional rinse after applying fabric softener to the laundry.	-
Eco Drum Clean	• Cleans the drum by removing dirt and bacteria from the drum. • Perform once every 40 washes with no detergent or bleach applied. • Make sure the drum is empty. • Do not use any cleaning agents for cleaning the drum.	-
Cotton	• Optimal performance with lower energy for cotton fabrics, bed linens, table linens, underwear, towels, or shirts.	Max

Specialty Cycle

Six specialty courses are designed to effectively remove specific types of stains and dirt that may accumulate on specific types of activities ranging from household work to professional mountain-climbing.

Course	Description & Max load (kg)	
Cooking&Dining	• This course removes food spills and cooking stains efficiently.	4
Gardening	• This course removes grass and mud/dirt stains and cleans sweat and skin oils efficiently.	4
Active Sports	• This course removes grass, soil, mud, light food stains, sweat, and make-up efficiently. • Do not use this course for waterproof clothing. This may result in damage to the waterproof or breathable capabilities.	4
Active Kids	• The Active Kids course is for most children's clothing. This course removes food, fruit juice, drinks, mud, soil, ink, and crayon stains efficiently.	4
Working&Everyday	• The Working&Everyday course is for lightly soiled clothing. This course removes light ink and pencil stains and cleans normal day to day stains efficiently.	4
Hygiene Care	• This course removes skin oils and blood stains efficiently.	4

Untitled-46 30 2015-01-26 3:25:40

Options

Available options differ depending on the course. Inactive options for a specific course are greyed out.

Options	Description
Quick Wash	• Specific for less soiled garments for loads less than 2 kg. • It takes a minimum of about 15 minutes, depending on the conditions such as the water pressure, water hardness, and/or extra options selected. • The Quick Wash time increases in this sequence: Off > 15 min > 20 min > 30 min > 40 min > 50 min > 60 min. • A recommended amount of detergent is less than 20 g (for a 2 kg load).
Pre Wash	• This will add a preliminary washing cycle before the main wash cycle.
Soaking+	• This option effectively removes stains by soaking the laundry. • Each soak cycle tumbles the drum for 1 minute and stands still for 4 minutes. You can set the Soaking+ time between 30 minutes and 150 minutes.
Intensive	• For badly soiled laundry. The operation time for each cycle is longer than normal.
Easy Iron	• The spinning speed decreases to reduce wrinkles. • Set the spinning speed up to 800 rpm.
Delay End	• The displayed time refers to the end time of a selected course.

Untitled-46 31 2015-01-26 3:25:40

Delay End

You can set the washing machine to finish the current course at a specific hours later.
This is useful if you want to finish the wash by the time you come home from business.

1. Select a course. Then change the course settings if necessary.
2. Tap the **Options** icon at the bottom right corner.
   Then, select options and change the option settings.
3. Tap **Delay End**.
4. Use the arrows to set the end time of the current course, and tap **Start**.

• To cancel the option, tap **Cancel** and return to the Options screen.

Use case

You want to finish a two-hour course 3 hours later from now. For this, you add the Delay End option to the current course with the 3-hour setting, and press the Start/Pause button at 2:00 p.m. Then, what happens? The washing machine starts operating at 3:00 p.m., and ends at 5:00 p.m. Provided below is the time line for this example.

Untitled-46 32 2015-01-26 3:25:40

Settings

Child Lock

To prevent accidents by children or infants, Child Lock locks all buttons except for the **Settings** button.

You can access the Child Lock menu from the Settings screen or the Quick panel bar.

- To set the Child Lock, tap **Settings**, and tap the **Child Lock** button.
- To activate Child Lock, press and hold the **Activate** button for 3 seconds.
- To deactivate Child Lock temporarily, press and hold the **Temporarily Deactivate** button for 3 seconds.
- To deactivate Child Lock completely, press and hold the **Deactivate** button for 3 seconds.

- To add detergent or more laundry in the drum, or to change the course settings in the Child Lock state, you must first stop or release the Child Lock.
- The Child Lock will be reactivated one minute after it stops temporarily

Drum Light

- To turn the Drum Light on or off, tap **Settings**, and slide the **Drum Light** bar to **On** or **Off**.
- The drum light turns off automatically after 5 minutes.

Auto Dispense

The washing machine provides a two-compartment dispenser: one for detergent, and the other for fabric softener. The Auto Dispense unit dispenses an appropriate amount of detergent and fabric softener into the drum according to the course and cycle.

To enable the Auto Dispense

1. Tap **Settings** > **Auto Dispense**.
2. Slide the **Auto Detergent** bar to **On**, and set the **Amount** and the **Water Hardness**.
3. Slide the **Auto Softener** bar to **On**, and set the **Amount** and the **Concentration**.
4. Tap **Save**.

Brightness

Set the brightness of LCD screen

- Tap **Settings**, and tap the (-/+) signs to increase or decrease the brightness level.

Sound Theme

Set the volume level and beep melody.

1. Tap **Settings** > **Sound Theme**.
2. To adjust the volume, tap the (-/+) signs to increase or decrease the volume level.
3. To select a beep melody, tap a theme in the list.

Untitled-46 33 2015-01-26 3:25:40

Date & Time

The default time is set to the 12-hour format.

1. Tap **Settings** > **Date & Time**.
2. Tap the arrows to change the time for each time element. For example, to change the date, use the arrows above and below the date element.
3. To switch between the **AM** and **PM** elements, simply tap the corresponding element.
4. Tap **Save**.

Language

Select a preferred menu language.

- Tap **Settings** > **Language**, and select a preferred menu language.

Network

Auto setup

The washing machine supports Wi-Fi protocols of WEP, TKIP, and AES, but it does not come with a router (AP).

1. Tap **Settings** > **Network**, and then slide the **Network** bar to **On**. The AP list appears.
2. Tap a network provider, and provide a password if asked.
3. Tap **OK**. When completed successfully, the selected network provider is ticked.

Manual setup

1. Enable Wi-Fi connection as instructed above.
2. Tap **Set IP** > **Manual**.
3. Provide an IP Address, Subnet mask, Gateway, and DNS, and then tap **OK**.

Wi-Fi connection

Once the network connection is established, the next time you want to turn the Wi-Fi connection on or off, slide the **Network** bar to **On** or **Off**.

Easy Connection

Easy Connection enables you to easily configure the network settings including the authentication procedure.

Untitled-46 34 2015-01-26 3:25:40

Smart control

With Smart Control, you can control the washing machine on your mobile device. Tap this icon to turn the Smart control function on or off.

1. Tap **Settings** > Slide the **Smart Control** bar to **On**.
2. Back on the main screen, Smart Control activated.
3. Tap **Deactivate** to disable the function, Smart Control deactivated.

- The icon is greyed out if Smart Control is not activated.
- Manipulation such as icon tapping or button pressing on the washing machine will deactivate Smart Control.
- If wireless network not connected, Smart Control is not available.
- Select a connection method to external devices when tapping Smart Control.

Eco Check

The energy/water efficiency of the recent 4 courses is displayed with a technical summary of power consumption, water levels, course settings, and options.

1. Tap **Settings** > **Eco Check**. A summary screen of the recent 4 courses appears.
2. Tap a course to display a technical summary of the selected course.

Self Check

The washing machine performs self-diagnosis on the current system. Operation errors and machine problems can be found on the results screen.

- Tap **Settings** > **Self Check** > **Start**.

Calibration

Calibration ensures accurate weight detection by the washing machine. Make sure the drum is empty before running Calibration.

1. Tap **Settings** > **Calibration** > **Start**.
   - The door will be locked during the operation.
   - The drum keeps rotating clockwise and anticlockwise for several minutes.
2. When complete, the washing machine turns off automatically.

Untitled-46 35 2015-01-26 3:25:40

Update

When updates are available, the update notification appears on the screen.

To check the current firmware version

1. Tap **Settings** > **Update** to display the current firmware version.
2. To update the firmware manually, tap **Update**.

To update the firmware automatically

1. Tap **Auto Update** on the **Settings** screen.
2. Slide the **Auto Update** bar to **On**. The update proceeds without notification when updates are available.

WARNING

Do not unplug the power cable of the washing machine or the router during the update.

Help

Refer to the user guide for product usage, and check the troubleshooting section against a problem.

- Tap **Settings** > **Help**.

Untitled-46 36 2015-01-26 3:25:40

Samsung Mobile Smart Control

This washer provides two different mobile control apps that you can use for controlling your washer via a network connection.

Mobile apps that apply to the Smart Control feature of Samsung smart washers

Samsung Smart Home

With the newly designed Samsung Smart Home app, you can access your washer on the move, and control or check the operation status of your washer.

Download the "**Samsung Smart Home**" app from Play Store or Apple Store, and install on your mobile device.

Samsung Smart Washer

The Samsung Smart Washer app lets you control the operation of the washer on your mobile device in two categories: Indoor and Outdoor.

Download the "**Samsung Smart Washer**" app from Play Store or Apple Store, and install on your mobile device.

Smart Control settings on the washer

To enable the Smart Control feature, choose a connection method to the mobile app.

Tap the Setup icon, and select Smart Control under the Network menu.

1. Choose a connection method to the mobile app.

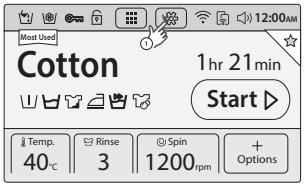

2. Select "Samsung Smart Home" if you want to control the washer through the Samsung integrated app.
   Select "Samsung Smart Washer" if you want to control the washer through the Samsung washer app.

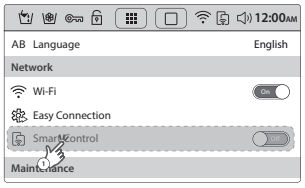

3. Once setup is complete, your changes are applied and you may need to reconnect.

- Samsung Smart Home (Default)
- Samsung Smart Washer

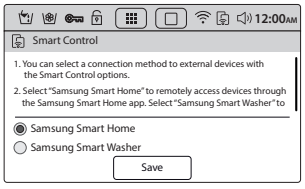
12:00AM
Smart Control
1. You can select a connection method to external devices with the Smart Control options.
2. Select "Samsung Smart Home" to remotely access devices through the Samsung Smart Home app. Select "Samsung Smart Washer" to
Samsung Smart Home
Samsung Smart Washer
Save

Untitled-46 37 2015-01-26 3:25:41

- By default, this product uses the newly designed Samsung Smart Home app as a connection method, which is recommended.
- For iPhone models, the Samsung Smart Home app is scheduled to be available at the Apple Store from the second half of 2014.
- In some countries, the Samsung Smart Home app may not be available. If this is the case, use the Samsung Smart Washer app instead.

Untitled-46 38 2015-01-26 3:25:41

Samsung Smart Home app

When using the Samsung Smart Home app, make sure "**Samsung Smart Home**" under the Setup menu is selected.

The Samsung Smart Home app enables you to access and control the washing machine on the move.

Installation

1. Visit Google Play Store for Android devices, or Apple App Store for iOS devices, and search for Samsung Smart Home to select.
2. Download and install the Samsung Smart Home app on your mobile device.

- The Samsung Smart Home app supports Android OS 4.0 (ICS) or later which is optimized for Samsung smartphones (Galaxy S and Galaxy Note series). Some functions of this app may work differently on other devices.
- This app supports iOS 7 or later for iPhone models.
- For enhanced performance, the UI design of this app is subject to change without notice.
- For iPhone models, this app is scheduled to be available from the latter half of 2014 at Apple App Store.

Preparation

1. To enable the app, you are required to enter your Samsung account. You will be guided in creating a Samsung account if you don't have one directly on the app. No other app is necessary for this purpose.
2. To enable the app, first register your washing machine to the Samsung Smart Home service.
   1) Select the washing machine in the device list of the Samsung Smart Home app.
   2) Enter the necessary information about the wireless AP that you use for wireless connection.
   3) Follow the onscreen instructions to configure settings for the washing machine.
   4) On the washing machine, select **Settings** > **Easy Connection** to configure the network settings.
   5) When complete, you will see the washing machine icon on the app.

CAUTION

- Wi-Fi uncertified routers may fail to establish the connection.
- If installing the washing machine and the AP near microwave ovens or electric hairdryers, Smart Control may not function properly due to electric interference.
- The washing machine supports only the Wi-Fi 2.4Ghz protocols.
- The surrounding environment may affect the wireless network performance.

- If you run the app without being logged in, you will see the Account guidance screen. Once logged in, you can change your account settings in **Settings** > **Account**.
- Samsung smartphone users can automatically log into the app once registering their account in **Settings**.

Untitled-46 39 2015-01-26 3:25:41

Using the Samsung Smart Home app

Key features

- **Integrated control of Samsung smart appliances**
  Register your Samsung smart devices to the Samsung Smart Home service that you can leverage for easy access. Select the washing machine icon on the app to access the core features of the washing machine on the move.
- **Master key**
  The master key consists of 4 modes: Going out, Coming home, Good night, and Good morning.
- **Chat controls**
  Chat between smart devices and get the information to control the device.
- **Home monitoring**
  Use the built-in camera of your smart device to monitor the living room while on the move.
- **Customer support**
  Download the product manual or request for a service repair.

Some features of this service may not be available on the washing machine.

Samsung Smart Home Washing Machine app

Control and monitor the washing machine both home and on the move.

1. Register the washing machine to the Samsung Smart Home app.
2. To enable remote control, turn on Smart Control on the washing machine.
3. Select the washing machine icon on the mobile device and tap **Start**.

Samsung Smart Home

This product is a smart washing machine that supports the Samsung Smart Home service.

For more information, visit www.samsung.com.

Untitled-46 40 2015-01-26 3:25:41

Samsung Smart Washer app

When using the Samsung Smart Washer app, make sure "**Samsung Smart Washer**" under the Setup menu is selected.

The Samsung Smart Washer app allows you to control some functions of the washing machine on your mobile device.

Download

1. Search for Samsung Smart Washer at the Play Store or the Apple Store.
2. Download and install the app on the mobile device.
3. Run the Samsung Smart Washer app on your mobile device.

Connect to the washing machine

The washing machine must be connected to a Wi-Fi network.

Indoor control

To enable this mode, the mobile device must be connected to the same network as the washing machine.

1. On the mobile device, tap **Indoor control** to display a list of available washing machine models.
2. Tap the model name of a washing machine to connect, and then tap **OK**. The authentication window appears.
3. On the washing machine, tap **Settings**, and slide the **Smart Control** bar to **On**. The authentication procedure begins.

The authentication procedure is required just once for the first use.

Outdoor control

To enable this mode, the washing machine must be registered to the **Samsung Smart Appliance** site (www.samsungsmartappliance.com).

1. On the washing machine, tap **Settings**, and slide the **Smart Control** bar to **On**.
2. On the mobile device, tap **Outdoor control**, and provide the login credentials.
   A list of registered devices appears.
3. Tap a device that you want to control from the list. Now, a remote connection will be established automatically between the washing machine and the mobile device.

No authentication procedure is required.

Untitled-46 41 2015-01-26 3:25:41

Registration

Register your washing machine to the Samsung Smart Appliance site (www.samsungsmartappliance.com), and get remote access to the washing machine. The washing machine must be connected to a Wi-Fi network.

1. Go to the **Samsung Smart Appliance** website (www.samsungsmartappliance.com).
2. Provide your Samsung account credentials to log in. If not a registered user, click Create a Samsung account and follow the onscreen instructions.
3. Click **My Page** > **Add device**, and provide the MAC address of the washing machine.
   To check the MAC address, tap **Settings** > **Network** on the washing machine.
4. Click **Get Approval**.
5. Tap **Settings** on the washing machine, and tap **OK** if asked to get approval.
   Registered washing machines are found in the device list of the website.

Hereby, Samsung Electronics, declares that this washing machine is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
The official Declaration of conformity may be found at http://www.samsung.com, go to Support > Search Product Support and enter the model name.

This telecommunication equipment conforms to NTC technical requirement

Untitled-46 42 2015-01-26 3:25:41

Maintenance

Keep the washing machine clean to prevent deteriorated performance and to preserve its life cycle.

Eco Drum Clean

Perform this course regularly to clean the drum and to remove bacteria from it.

1. Tap **Course** > **Eco Drum Clean**.
2. Move to the main screen, and tap **Start**.

The water temperature for Eco Drum Clean is set to 70 °C, which cannot be changed.

CAUTION

Do not use any cleaning agents for cleaning the drum. Chemical residue in the drum deteriorates the washing performance.

Eco Drum Clean reminder

- The Eco Drum Clean reminder appears on the main screen once every 40 washes. It is advisable to perform the Eco Drum Clean regularly.
- When you first see this reminder, you can ignore the reminder (up to 6 times) by tapping **Remind later**. From the 7th wash, the reminder does not appear. However, it appears again on the second 40th wash.

Untitled-46 43 2015-01-26 3:25:41

Emergency drain

In case of a power failure, drain the water inside the drum before taking out the laundry.

1. Unplug the power cord of the washing machine from the main socket.
2. Gently press the top area of the filter cover to open.

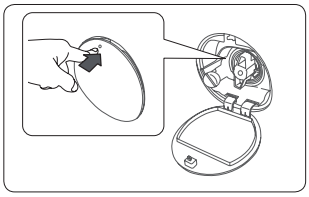

3. Gently pull out the emergency drain tube.

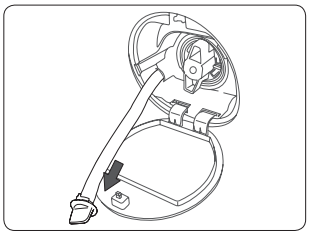

4. While holding the end of the drain tube, open the tube cap.

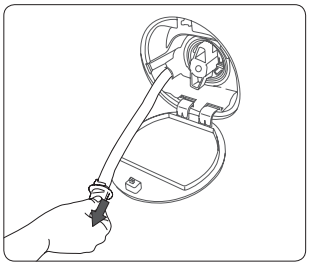

5. Let the water run into a container.
6. Close the tube cap, and reinsert the drain tube.
7. Close the filter cover.

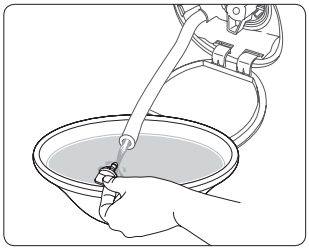

Untitled-46 44 2015-01-26 3:25:42

Cleaning

Surface of the washing machine

Use a soft cloth with a nonabrasive household detergent. Do not spray water onto the washing machine.

Mesh filter

Clean the mesh filter of the water supply hose once or twice a year.

1. Turn off the washing machine, and unplug the power cord.
2. Close the water tap.
3. Loosen and disconnect the water supply hose from the back of the washing machine. Cover the hose with a cloth to prevent water from gushing out.

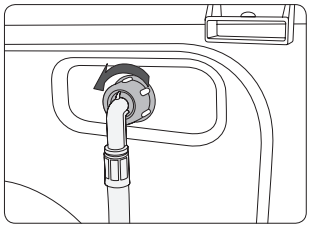

4. Use pliers to pull out the mesh filter from the inlet valve hole.
5. Submerge the mesh filter deeply in water so that the threaded connector is also submerged.
6. Dry the mesh filter completely in the shade.
7. Reinsert the mesh filter into the water supply hose, and place the water supply hose in the original position.
8. Open the water tap.

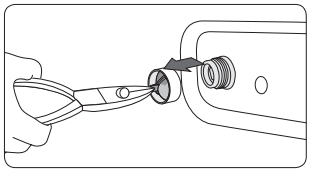

If the mesh filter is clogged, an error code of "**4E**" appears on the screen.

Untitled-46 45 2015-01-26 3:25:42

Debris filter

It is advisable to clean the debris filter 5 or 6 times a year to prevent its clogging. A clogged debris filter may reduce the bubble effect.

1. Turn off the washing machine, and unplug the power cord.
2. Drain the remaining water inside the drum by referring to "**Emergency drain**" on page **44**.
3. Open the filter cover using a coin or key.
4. Turn the debris filter cap to the left, and drain off the remaining water.
5. Remove the debris filter.

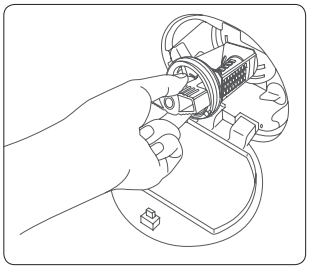

6. Clean the debris filter using soft brushes. Make sure the drain pump propeller inside the filter is unclogged.
7. Reinsert the debris filter, and turn the filter cap to the right.

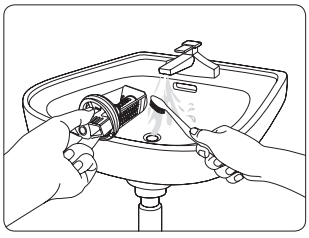

- To open the safety filter cap, push in and turn it anticlockwise. The spring of the cap helps to open the cap.
- To close the safety filter cap, turn it clockwise. The spring makes a rattling sound, which is normal.

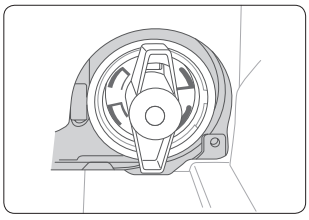

- If the debris filter is clogged, an error code of "**5E**" appears on the screen.

CAUTION

- Make sure the filter cap is closed properly after cleaning the filter. Otherwise, this may cause a leak.
- Make sure the filter is inserted properly after cleaning it. Otherwise, this may cause an operational failure or a leak.

Untitled-46 46 2015-01-26 3:25:42

Auto Dispense unit

The Auto Dispense unit must be cleaned regularly to ensure proper operation at all times.

1. Remove the Auto Dispense unit from the washing machine.

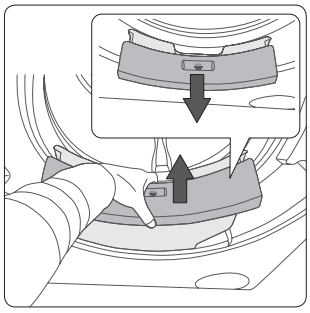

2. Wipe out the recess of the Auto Dispense unit using a dry cloth.

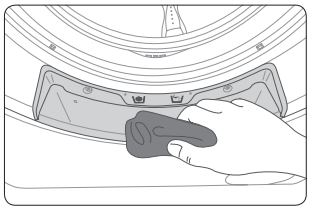

3. Remove two knobs of the Auto Dispense unit as well as the two caps at the bottom, and run water through the Auto Dispense unit to clean the inner area.

   Do not shake the Auto Dispense unit as you may be spattered with water from the vent of the Auto Dispense unit.
4. Reinsert knobs and caps in the original position.
5. Reinsert the Auto Dispense unit in the original position.

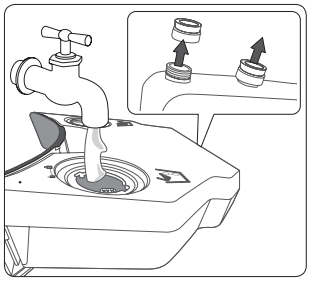

Untitled-46 47 2015-01-26 3:25:42

Recovery from freezing

The washing machine may freeze when it drops below 0 °C.

1. Turn off the washing machine, and unplug the power cord.
2. Pour warm water over the water tap to loosen the water supply hose.
3. Disconnect the water supply hose, and soak it in warm water.
4. Pour warm water into the drum and leave it for about 10 minutes.
5. Reconnect the water supply hose to the water tap.

If the washing machine still doesn't operate normally, repeat the above steps until it operates normally.

Care against an extended time of disuse

Avoid leaving the washing machine unused for an extended time.

If this is the case, drain the washing machine and unplug the power cord.

1. On the main screen, tap **Course** > **Cotton** with an option of **Quick Wash**.
2. Empty the drum, and tap **Start**.
3. When the course is complete, close the water tap and disconnect the water supply hose.
4. Turn off the washing machine, and unplug the power cord.
5. Open the door to let air circulate through the drum.

Untitled-46 48 2015-01-26 3:25:42

Troubleshooting

Checkpoints

If you encounter a problem with the washing machine, first check the table below and try the suggestions.

Problem	Action
The washing machine won't start.	• Make sure the washing machine is plugged in. • Make sure the door is properly closed. • Make sure the water tap is open. • Tap **Start** again on the main screen.
Water supply is insufficient, or no water is supplied.	• Open the water tap fully. • Make sure the water supply hose is not frozen. • Make sure the water supply hose is not kinked or clogged. • Clean the filter on the water supply hose.
The washing machine vibrates badly or makes noise.	• Make sure the washing machine is installed on a level floor. If the floor is not level, use the levelling feet to adjust the level. • Make sure that the shipping bolts are removed. • Make sure the washing machine is not touching any other object. • Make sure the laundry load is balanced.
The washing machine does not drain and/ or spin.	• Make sure the drain hose is straightened all the way to the drain system. • Make sure the debris filter is not clogged.
The door won't open.	• Tap **Start** to stop operating the washing machine. • The door remains locked during the heating cycle of the Sanitize course. • It may take several seconds to disengage the locking mechanism.
The washing machine produces lots of bubbles.	• Check if the Auto Detergent and Auto Softener settings are properly specified. • Make sure you use the recommended types of detergent as appropriate.
I cannot apply additional detergent.	• Check the remaining amount of detergent and fabric softener to see if they are already up to the limit. • Make sure the Auto Dispense function is enabled, with both the Water Hardness and Concentration settings properly specified.

If a problem persists, contact a local Samsung service centre.

Untitled-46 49 2015-01-26 3:25:42

Information codes

If the washing machine fails to operate, you may see an information code on the screen. Check the table below and try the suggestions.

Problem	Action
DE	• Make sure the door is properly closed. • Make sure laundry is not caught in the door.
4E	• Make sure the water tap is open. • Make sure the washing machine is operating with sufficient water pressure, • Clean the mesh filter as it may be clogged.
5E	• Clean the debris filter as it may be clogged. • Make sure the drain hose is not kinked all the way to the drain system. • Clean the mesh filter as it may be clogged.
UE	• The laundry load is unbalanced. Spread the laundry evenly.
CE/3E/UC	• This is not user-repairable. Contact a local Samsung service centre.

If any information code keeps appearing on the screen, contact a local Samsung service centre.

Untitled-46 50 2015-01-26 3:25:42

Specifications

Protecting the environment

- This appliance is manufactured from recyclable materials. If you decide to dispose of this appliance, please observe local waste disposal regulations. Cut off the power cord so that the appliance cannot be connected to a power source. Remove the door so that animals and small children cannot get trapped inside the appliance.
- Do not exceed the detergent quantities recommended in the detergent manufacturer's instructions.
- Use stain removal products and bleaches before the wash cycle only when strictly necessary.
- Save water and electricity by only washing full loads (the exact amount depends upon the program used).

Untitled-46 51 2015-01-26 3:25:43

Fabric care chart

The following symbols provide garment care directions. The care labels include four symbols in this order: washing, bleaching, drying and ironing (and dry cleaning when necessary). The use of symbols ensures consistency among garment manufacturers of domestic and imported items. Follow the care label directions to maximize garment life and reduce laundry problems.

	Resistant material		Do not iron
	Delicate fabric		Can be dry cleaned using any solvent
	Item can be washed at 95 ˚C		Dry Clean
	Item can be washed at 60 ˚C		Dry clean with perchloride, lighter fuel, pure alcohol or R113 only
	Item can be washed at 40 ˚C		Dry clean with aviation fuel, pure alcohol or R113 only
	Item can be washed at 30 ˚C		Do not dry clean
	Hand wash only		Dry flat
	Dry clean only		Can be hung to dry
	Can be bleached in cold water		Dry on clothes hanger
	Do not bleach		Tumble dry, normal heat
	Can be ironed at 200 ˚C max		Tumble dry, reduced heat
	Can be ironed at 150 ˚C max		Do not tumble dry
	Can be ironed at 100 ˚C max		

Untitled-46 52 2015-01-26 3:25:44

Specification sheet

TYPE			FRONT LOADING WASHING MACHINE
MODEL NAME			WW10H9*****
DIMENSIONS			W600xD600xH850(mm)
WATER PRESSURE			50 kPa ~ 800 kPa
WATER VOLUME			68 ℓ
NET WEIGHT			87 kg
WASH AND SPIN CAPACITY			10.0 kg
POWER CONSUMPTION	WASHING	220 V	150 W
		240 V	150 W
	WASHING AND HEATING	220 V	2000 W
		240 V	2300 W
	SPIN	220~240 V	700 W
	PUMPING		30 W
SPIN REVOLUTIONS		rpm	1400, 1600

Untitled-46 53 2015-01-26 3:25:44

Memo

Memo

QUESTIONS OR COMMENTS?

COUNTRY	CALL	OR VISIT US ONLINE AT
THAILAND	0-2689-3232 1800-29-3232	www.samsung.com/th/support

DC68-03377L-01

WW10H9*****
WW90H9*****

เครื่องซักผ้า

คู่มือผู้ใช้

Imagine the possibilities

ขอขอบคุณที่เลือกซื้อผลิตภัณฑ์ Samsung

Samsung
Smart Home

SAMSUNG

Untitled-47 1 2015-01-26 3:28:45

สารบัญ

ข้อมูลเกี่ยวกับความปลอดภัย 3

สิ่งที่คุณต้องทราบเกี่ยวกับคำแนะนำเพื่อความปลอดภัย . . . 3
สัญลักษณ์สำคัญเพื่อความปลอดภัย . . . 3
ข้อควรระวังเพื่อความปลอดภัยที่สำคัญ . . . 4

การติดตั้ง 10

มีชิ้นส่วนใดบ้าง . . . 10
ข้อกำหนดในการติดตั้ง . . . 11
การติดตั้งแบบทีละขั้นตอน . . . 13

ก่อนการเริ่มต้น 17

การตั้งค่าเริ่มต้น . . . 17
คำแนะนำของผ้า . . . 19
คำแนะนำสำหรับผงซักฟอก . . . 21

การทำงาน 24

หน้าจอ . . . 24
ขั้นตอนง่ายๆ ในการเริ่มต้น . . . 27
ภาพรวมของโปรแกรม . . . 28
การตั้งค่า . . . 32
Samsung Mobile Smart Control . . . 36
แอปพลิเคชัน Samsung Smart Home . . . 37
แอปพลิเคชั่น Samsung Smart Washer . . . 39

การบำรุงรักษา 41

ล้างถังซัก . . . 41
ท่อทิ้งน้ำฉุกเฉิน . . . 42
การทำความสะอาด . . . 43
การคืนสภาพจากการเป็นน้ำแข็ง . . . 46
การดูแลเมื่อไม่ได้ใช้งานเป็นเวลานาน . . . 46

การแก้ไขปัญหา 47

จุดตรวจสอบ . . . 47
รหัสข้อมูล . . . 48

ข้อมูลจำเพาะ 49

การปกป้องสิ่งแวดล้อม . . . 49
ผังการดูแลผ้า . . . 50
ข้อมูลจำเพาะ . . . 51

Untitled-47 2 2015-01-26 3:28:45

ข้อมูลเกี่ยวกับความปลอดภัย

ขอแสดงความยินดีกับเครื่องซักผ้า Samsung เครื่องใหม่ของคุณ คู่มือนี้มีข้อมูลที่สำคัญเกี่ยวกับการติดตั้ง การใช้งานและการบำรุงรักษา เครื่องซักผ้า Samsung เครื่องใหม่ของคุณ โปรดสละเวลาเพื่ออ่านคู่มือนี้ เพื่อใช้ประโยชน์สูงสุดจากคุณสมบัติและคุณประโยชน์มากมายของเครื่องซักผ้า

สิ่งที่คุณต้องทราบเกี่ยวกับคำแนะนำเพื่อความปลอดภัย

โปรดอ่านคู่มือให้ละเอียดเพื่อให้ทราบถึงวิธีใช้อุปกรณ์อย่างปลอดภัยและสามารถใช้คุณลักษณะและการทำงานขั้นสูงต่างๆ อย่างมีประสิทธิภาพ โปรดเก็บคู่มือนี้ไว้ในบริเวณที่ปลอดภัยใกล้กับอุปกรณ์ เพื่อการอ้างอิงในอนาคต ใช้อุปกรณ์นี้เพื่อวัตถุประสงค์ที่อธิบายในคู่มือคำแนะนำนี้เท่านั้น

คำเตือนและคำแนะนำเพื่อความปลอดภัยในคู่มือนี้ไม่ได้ครอบคลุมถึงสภาวะและสถานการณ์ทั้งหมดที่สามารถเกิดขึ้นได้ คุณมีหน้าที่จะต้องใช้สามัญสำนึก ความระมัดระวัง และใส่ใจกับการติดตั้ง บำรุงรักษา และใช้งานเครื่องซักผ้า

เนื่องจากคำแนะนำในการใช้งานต่อไปนี้ใช้สำหรับหลายรุ่น ลักษณะของเครื่องซักผ้าของคุณอาจแตกต่างจากที่อธิบายในคู่มือนี้ และสัญญาณคำเตือนบางอย่างอาจไม่มีผล ถ้าคุณมีข้อซักถามหรือข้อกังวลใด โปรดติดต่อศูนย์บริการที่ใกล้ที่สุด หรือหาความช่วยเหลือและข้อมูลออนไลน์ได้ที่ www.samsung.com

สัญลักษณ์สำคัญเพื่อความปลอดภัย

ความหมายของสัญลักษณ์และเครื่องหมายในคู่มือผู้ใช้นี้:

⚠	**คำเตือน**: อันตรายหรือการกระทำที่ไม่ปลอดภัยที่อาจทำให้เกิด**การบาดเจ็บร้ายแรง และ/หรือทรัพย์สินเสียหาย**
⚠	**ข้อควรระวัง**: อันตรายหรือการกระทำที่ไม่ปลอดภัยที่อาจทำให้เกิด **การบาดเจ็บหรือทำให้สิ่งของเสียหาย**
	หมายเหตุ

สัญลักษณ์คำเตือนเหล่านี้มีให้เพื่อป้องกันการบาดเจ็บของตัวคุณเองและบุคคลอื่น

โปรดปฏิบัติตามอย่างเคร่งครัด

หลังจากอ่านคู่มือนี้แล้ว โปรดเก็บไว้เพื่อนำมาอ้างอิงในภายหลัง

อ่านคำแนะนำทั้งหมดก่อนที่จะใช้อุปกรณ์

เช่นเดียวกับอุปกรณ์ทุกชนิดที่ใช้ไฟฟ้าและมีชิ้นส่วนที่เคลื่อนไหว อุปกรณ์นี้อาจมีอันตรายได้ ในการใช้อุปกรณ์นี้อย่างปลอดภัย โปรดทำความเข้าใจกับการทำงานและใช้ความระมัดระวังขณะใช้งาน

Untitled-47 3 2015-01-26 3:28:45

ข้อควรระวังเพื่อความปลอดภัยที่สำคัญ

⚠ คำเตือน: ในการลดความเสี่ยงจากไฟ การระเบิด ไฟฟ้าช็อต หรือการบาดเจ็บขณะใช้อุปกรณ์ โปรดปฏิบัติตามข้อควรระวังเพื่อ
ความปลอดภัยต่อไปนี้:

อย่าให้เด็ก (หรือสัตว์เลี้ยง) เล่นบนเครื่องซักผ้าหรือในเครื่องซักผ้า ประตูเครื่องซักผ้านั้นไม่สามารถเปิดได้โดยง่ายจากภายใน และเด็กอาจได้รับบาดเจ็บร้ายแรงถ้าติดอยู่ภายใน

อุปกรณ์นี้ไม่เหมาะสำหรับบุคคลที่มีสภาพร่างกาย ประสาทสัมผัสหรือจิตที่ไม่ปกติ รวมถึงเด็กหรือบุคคลที่ขาดประสบการณ์ ความรู้ ยกเว้นจะได้รับการดูแลหรือได้รับคำแนะนำในการใช้งานโดยบุคคลที่รับหน้าที่ดูแล โปรดระวังมิให้เด็กเล่นกับอุปกรณ์นี้

โปรดดูแลมิให้เด็กเล่นกับอุปกรณ์นี้

สำหรับใช้ในยุโรป: อุปกรณ์นี้สามารถใช้งานโดยเด็กที่มีอายุ 8 ปีขึ้นไปและบุคคลที่มีสมรรถภาพร่างกาย ประสาทสัมผัส หรือสภาพจิตไม่เป็นปกติ หรือขาดประสบการณ์หรือความรู้ ถ้าได้รับการดูแลหรือได้รับคำแนะนำในการใช้งานโดยบุคคลที่รับหน้าที่ดูแล ห้ามเด็กเล่นกับอุปกรณ์นี้ ห้ามเด็กทำความสะอาดหรือบำรุงรักษาอุปกรณ์โดยไม่มีการดูแล

กรณีที่ปลั๊กไฟของเครื่องใช้ไฟฟ้านี้เกิดเสียหาย ต้องให้ผู้ผลิต ตัวแทนให้บริการ หรือผู้ที่มีความชำนาญเป็นผู้เปลี่ยนสายไฟ เพื่อไม่ให้เกิดอันตราย

ควรจัดวางอุปกรณ์นี้เพื่อให้สามารถเข้าถึงปลั๊กไฟ ก๊อกน้ำและท่อระบายน้ำได้โดยง่าย

สำหรับอุปกรณ์ที่มีช่องระบายอากาศที่ฐาน โปรดอย่าให้พรมปิดกั้นช่องนี้

โปรดใช้ชุดท่อใหม่ที่มาพร้อมกับอุปกรณ์ และไม่ควรใช้ชุดท่อเดิม

ข้อควรระวัง: เพื่อป้องกันอันตรายจากการรีเซ็ตอุปกรณ์ตัดความร้อนโดยไม่ตั้งใจ ห้ามจ่ายไฟให้กับอุปกรณ์นี้ผ่านอุปกรณ์สวิตช์ภายนอก เช่น เครื่องตั้งเวลา หรือต่อกับวงจรที่มีการปิดเปิดสวิตช์เป็นประจำโดยหน่วยงานผู้จ่ายไฟ

⚠ คำเตือน: คำเตือนสำคัญเกี่ยวกับการติดตั้ง

การติดตั้งอุปกรณ์นี้ต้องกระทำโดยช่างเทคนิคที่ได้รับการรับรอง หรือบริษัทผู้ให้บริการ

- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้ การระเบิด เกิดปัญหากับผลิตภัณฑ์ หรือการบาดเจ็บ

อุปกรณ์นี้มีน้ำหนักมาก ดังนั้น โปรดใช้ความระมัดระวังเมื่อยก

ต่อสายไฟเข้ากับเต้ารับไฟฟ้า AC 220 - 240 V / 50 Hz ขึ้นไป และใช้เต้ารับสำหรับอุปกรณ์นี้เพียงอย่างเดียว ห้ามใช้สายไฟสำหรับต่อ

- การใช้เต้ารับไฟฟ้าที่ผนังร่วมกับอุปกรณ์อื่นโดยผ่านสายไฟสำหรับต่อ หรือแถบปลั๊กไฟ อาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

Untitled-47 4 2015-01-26 3:28:45

- ตรวจสอบว่าแรงดันไฟฟ้า ความถี่ และกระแสไฟฟ้าตรงกับในข้อมูลจำเพาะของผลิตภัณฑ์ มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้ ต่อสายไฟเข้ากับเต้ารับไฟฟ้าที่ผนังอย่างแน่นหนา

นำสิ่งแปลกปลอมทั้งหมด เช่น ฝุ่นละอองหรือน้ำออกจากขั้วของปลั๊กไฟและหน้าสัมผัสเป็นประจำ โดยใช้ผ้าแห้ง

- ถอดปลั๊กไฟและทำความสะอาดด้วยผ้าแห้ง
- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

ต่อปลั๊กไฟเข้ากับเต้ารับที่ผนังเพื่อให้สายไฟพาดไปตามพื้น

- ถ้าคุณต่อปลั๊กไฟกับเต้ารับในทางตรงกันข้าม ลวดนำไฟฟ้าภายในสายไฟอาจเสียหายและทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

บรรจุภัณฑ์อาจเป็นอันตรายต่อเด็ก โปรดเก็บบรรจุภัณฑ์ทั้งหมดให้พ้นมือเด็ก

- ถ้าเด็กนำถุงพลาสติกมาสวมศีรษะ อาจทำให้หายใจไม่ออก

เมื่ออุปกรณ์ ปลั๊กไฟหรือสายไฟเสียหาย โปรดติดต่อศูนย์บริการใกล้บ้านคุณ

อุปกรณ์นี้ต้องได้รับการลงกราวด์อย่างเหมาะสม

ห้ามลงกราวด์อุปกรณ์กับท่อก๊าซ ท่อน้ำพลาสติก หรือสายโทรศัพท์

- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้ การระเบิด หรือเกิดปัญหากับผลิตภัณฑ์
- ห้ามต่อปลั๊กไฟฟ้ากับเต้ารับไฟฟ้าที่ไม่ได้ลงกราวด์อย่างถูกต้อง และโปรดตรวจสอบว่าเป็นไปตามข้อกำหนดของท้องถิ่นและของประเทศ

ห้ามติดตั้งอุปกรณ์นี้ใกล้เครื่องทำความร้อน วัตถุไวไฟ

ห้ามติดตั้งอุปกรณ์นี้ในที่ชื้น มีน้ำมัน หรือมีฝุ่นมาก หรือในตำแหน่งที่ได้รับแสงแดดหรือน้ำ (น้ำฝน) โดยตรง

ห้ามติดตั้งอุปกรณ์นี้ในตำแหน่งที่มีอุณหภูมิต่ำ

- น้ำที่แข็งตัวจะทำให้ท่อต่างๆ ระเบิด

ห้ามติดตั้งอุปกรณ์นี้ในตำแหน่งที่อาจมีก๊าซรั่วไหล

- อาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

ห้ามใช้เครื่องแปลงไฟฟ้า

- อาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

ห้ามใช้ปลั๊กไฟที่เสียหาย สายไฟ หรือเต้ารับไฟฟ้าที่เสียหาย หลวม

- อาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

ห้ามดึงหรือหักงอสายไฟมากเกินไป

ห้ามบิดหรือผูกสายไฟเป็นปม

อย่าเกี่ยวสายไฟไว้กับวัตถุที่เป็นโลหะ วางของหนักบนสายไฟ สอดสายไฟไว้ระหว่างสิ่งของ หรือดันสายไฟไว้ในช่องด้านหลังของอุปกรณ์

- อาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

ห้ามดึงสายไฟเพื่อถอดปลั๊กไฟออกจากเต้ารับ

- ถอดปลั๊กไฟด้วยการจับที่ตัวปลั๊ก
- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

Untitled-47 5 2015-01-26 3:28:45

⚠ ข้อควรระวัง: ข้อควรระวังเกี่ยวกับการติดตั้ง

อุปกรณ์นี้ควรอยู่ในตำแหน่งที่สามารถเอื้อมถึงปลั๊กไฟได้ง่าย

- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต หรือเพลิงไหม้เนื่องจากไฟฟ้ารั่ว

ติดตั้งเครื่องบนพื้นแข็งและเรียบที่สามารถรับน้ำหนักได้

- มิฉะนั้นอาจทำให้มีการสั่นสะเทือนผิดปกติ มีการเคลื่อนที่ เสียงรบกวน หรือมีปัญหากับผลิตภัณฑ์

⚠ คำเตือน: คำเตือนสำคัญเกี่ยวกับการใช้งาน

ถ้าอุปกรณ์มีน้ำท่วม ให้ตัดไฟฟ้าและการจ่ายน้ำทันที และติดต่อศูนย์บริการใกล้บ้าน

- ห้ามสัมผัสปลั๊กไฟด้วยมือที่เปียก
- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต

ถ้าอุปกรณ์มีเสียงผิดปกติ มีควันหรือกลิ่นไหม้ ให้ถอดปลั๊กทันที และติดต่อศูนย์บริการใกล้บ้าน

- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

ถ้ามีก๊าซรั่ว (เช่น ก๊าซโพรเพน ก๊าซหุงต้ม ฯลฯ) ให้ระบายอากาศทันที โดยไม่สัมผัสกับปลั๊กไฟ ห้ามสัมผัสกับอุปกรณ์หรือสายไฟ

- ห้ามใช้พัดลมไฟฟ้า
- อาจเกิดประกายไฟที่ทำให้ระเบิดหรือเพลิงไหม้

อย่าให้เด็กเล่นบนเครื่องซักผ้าหรือในเครื่องซักผ้า นอกจากนี้ เมื่อทิ้งอุปกรณ์ ให้ถอดก้านล็อคประตูเครื่องซักผ้าออก

- ถ้าติดอยู่ภายในผลิตภัณฑ์ เด็กอาจหายใจไม่ออกจนกระทั่งเสียชีวิต

โปรดนำบรรจุภัณฑ์ (ฟองน้ำ โฟม) ที่ด้านล่างของเครื่องซักผ้าออกก่อนที่จะใช้งาน

ห้ามซักผ้าที่เปื้อนน้ำมันเชื้อเพลิง น้ำมันก๊าด เบนซีน ทินเนอร์ แอลกอฮอล์ หรือสารไวไฟหรือสารระเหยชนิดต่างๆ

- อาจทำให้เกิดไฟฟ้าช็อต ไฟไหม้หรือระเบิดได้

ห้ามเปิดประตูเครื่องซักผ้าโดยใช้แรงขณะที่เครื่องทำงาน (การซัก/อบแห้ง/ปั่นหมาดขณะอุณหภูมิสูง)

- น้ำที่ไหลออกจากเครื่องซักผ้าอาจทำให้ร้อนลวกหรือทำให้พื้นลื่น อาจทำให้เกิดการบาดเจ็บได้
- การใช้แรงเปิดประตูอาจทำให้ผลิตภัณฑ์เสียหายหรือทำให้เกิดการบาดเจ็บ

โปรดอย่าสอดมือเข้าใต้เครื่องซักผ้าขณะที่เครื่องกำลังทำงาน

- อาจทำให้เกิดการบาดเจ็บได้

ห้ามสัมผัสปลั๊กไฟด้วยมือที่เปียก

- อาจทำให้เกิดไฟฟ้าช็อตได้

ห้ามปิดเครื่องด้วยการถอดปลั๊กไฟ ขณะที่เครื่องกำลังทำงานอยู่

- การต่อปลั๊กไฟเข้ากับเต้ารับไฟฟ้าอีกครั้งอาจทำให้เกิดประกายไฟและทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

อย่าปล่อยให้เด็กหรือบุคคลที่ไม่แข็งแรงใช้เครื่องซักผ้านี้โดยไม่มีการดูแลที่เหมาะสม อย่าให้เด็กปีนหรือเข้าภายในอุปกรณ์

- อาจทำให้เกิดไฟฟ้าช็อต ไฟลวก หรือบาดเจ็บได้

โปรดอย่าสอดมือหรือโลหะเข้าใต้เครื่องซักผ้าขณะที่เครื่องกำลังทำงาน

- อาจทำให้เกิดการบาดเจ็บได้

ห้ามถอดปลั๊กอุปกรณ์โดยการดึงสายไฟ โปรดจับปลั๊กให้แน่นแล้วดึงออกมาจากเต้ารับตรงๆ

- ความเสียหายที่เกิดขึ้นกับสายไฟอาจทำให้เกิดการลัดวงจร เพลิงไหม้ และ/หรือไฟฟ้าช็อต

โปรดอย่าซ่อมแซม ถอดประกอบ หรือดัดแปลงเครื่องด้วยตนเอง

- ห้ามใช้ฟิวส์ (เช่น สายทองแดง ลวดโลหะ ฯลฯ) นอกเหนือจากฟิวส์มาตรฐาน
- เมื่อต้องซ่อมแซมหรือติดตั้งอุปกรณ์อีกครั้ง โปรดติดต่อศูนย์บริการใกล้บ้านคุณ

Untitled-47 6 2015-01-26 3:28:45

- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้ เกิดปัญหากับผลิตภัณฑ์ หรือการบาดเจ็บ

เมื่อท่อจ่ายน้ำหลวมหลุดออกจากก๊อกและทำให้น้ำท่วมอุปกรณ์ ให้ถอดปลั๊กไฟ

- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

ถอดปลั๊กไฟเมื่อไม่ได้ใช้อุปกรณ์เป็นเวลานาน หรือระหว่างพายุฝนฟ้าคะนอง

- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

ถ้ามีสิ่งแปลกปลอมเข้าเครื่อง ให้ถอดปลั๊กไฟและติดต่อศูนย์บริการลูกค้าของ Samsung ที่อยู่ใกล้ที่สุด

- อาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

⚠ ข้อควรระวัง: ข้อควรระวังเกี่ยวกับการใช้งาน

เมื่อเครื่องซักผ้าเปื้อนสิ่งแปลกปลอมเช่น สารซักฟอก สิ่งสกปรก เศษอาหาร ฯลฯ ให้ถอดปลั๊กไฟและทำความสะอาดเครื่องด้วยผ้านุ่มชุบน้ำหมาดๆ

- มิฉะนั้นอาจทำให้ผลิตภัณฑ์เปลี่ยนสี เปลี่ยนรูป เสียหาย หรือเกิดสนิม

กระจกด้านหน้าสามารถแตกได้เมื่อกระแทกแรงๆ โปรดใช้ความระมัดระวังเมื่อใช้เครื่องซักผ้า

- ถ้ากระจกแตก อาจทำให้เกิดการบาดเจ็บได้

หลังจากการจ่ายน้ำไม่ทำงานหรือเมื่อต่อท่อจ่ายน้ำใหม่ ให้เปิดก๊อกน้ำช้าๆ

เปิดก๊อกน้ำช้าๆ หลังจากไม่ได้ใช้งานมาเป็นเวลานาน

- แรงดันอากาศในท่อจ่ายน้ำหรือท่อน้ำประปาอาจทำให้ชิ้นส่วนของเครื่องเสียหายหรือทำให้น้ำรั่ว

ถ้าเกิดข้อผิดพลาดในการระบายน้ำระหว่างการทำงาน ให้ตรวจสอบว่ามีปัญหาของการระบายน้ำหรือไม่

- ถ้าใช้เครื่องซักผ้าเมื่อมีน้ำท่วม เนื่องจากปัญหาการระบายน้ำ อาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

ใส่ผ้าในเครื่องซักผ้าโดยระวังอย่าให้ผ้าติดอยู่ที่ประตู

- ถ้าผ้าติดอยู่ที่ประตู อาจทำให้ผ้าเสียหายหรือเครื่องซักผ้าเสียหาย หรือทำให้น้ำรั่ว

ปิดการจ่ายน้ำเมื่อไม่ได้ใช้เครื่องซักผ้า

ตรวจสอบว่าสกรูของข้อต่อท่อจ่ายน้ำนั้นมีการขันไว้อย่างถูกต้อง

- มิฉะนั้นอาจทำให้เกิดความเสียหายแก่ทรัพย์สินหรือเกิดการบาดเจ็บ

โปรดระมัดระวังอย่าให้ซีลยางและกระจกด้านหน้ามีสิ่งแปลกปลอมติดอยู่ (เช่น สิ่งสกปรก เส้นด้าย ผม ฯลฯ)

- ถ้ามีสิ่งแปลกปลอมติดอยู่ในประตู หรือประตูไม่ปิดสนิท อาจทำให้น้ำรั่ว

เปิดก๊อกน้ำและตรวจสอบว่าข้อต่อของท่อจ่ายน้ำมีการขันไว้อย่างแน่นหนาแล้วหรือไม่ และไม่มีน้ำรั่ว ก่อนที่จะใช้ผลิตภัณฑ์

- ถ้าสกรูที่ข้อต่อท่อจ่ายน้ำหลวม อาจทำให้น้ำรั่ว

ผลิตภัณฑ์ที่คุณซื้อนี้ได้รับการออกแบบมาสำหรับใช้ในครัวเรือนเท่านั้น
การใช้ผลิตภัณฑ์เพื่อธุรกิจจะถือเป็นการใช้ผิดวัตถุประสงค์ ในกรณีนี้ ผลิตภัณฑ์จะไม่ได้รับความคุ้มครองตามการรับประกันมาตรฐานที่มาจาก Samsung
และ Samsung จะไม่มีส่วนรับผิดชอบต่อการทำงานผิดปกติหรือความเสียหายที่เกิดจากการใช้ผิดวัตถุประสงค์ดังกล่าว

อย่ายืนบนอุปกรณ์หรือวางสิ่งของ (เช่น ผ้า เทียนที่จุดไฟแล้ว บุหรี่ที่ติดไฟ จาน สารเคมี วัตถุที่เป็นโลหะ ฯลฯ) บนอุปกรณ์

- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้ หรือเกิดปัญหากับผลิตภัณฑ์

ห้ามพ่นสารระเหย เช่น ยาฆ่าแมลงบนพื้นผิวผลิตภัณฑ์โดยตรง

- นอกจากจะเป็นอันตรายต่อมนุษย์แล้ว ยังอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้ หรือมีปัญหากับผลิตภัณฑ์ได้

อย่าวางวัตถุที่สร้างสนามแม่เหล็กไฟฟ้าไว้ใกล้เครื่องซักผ้า

- อาจทำให้เกิดการบาดเจ็บเนื่องจากการทำงานผิดปกติได้

Untitled-47 7 2015-01-26 3:28:45

น้ำที่ระบายระหว่างการซักผ้าอุณหภูมิสูงหรือรอบการอบแห้งนั้นจะร้อนจัด โปรดอย่าสัมผัสน้ำ

- อาจทำให้เกิดการลวกหรือบาดเจ็บได้

ห้ามซัก ปั่น หรืออบแห้งเบาะรองนั่ง เบาะ หรือเสื้อผ้า (*) ที่กันน้ำ ยกเว้นอุปกรณ์ของคุณมีโปรแกรมพิเศษสำหรับซักสิ่งของเหล่านี้

(*): เครื่องนอนขนสัตว์ เสื้อกันฝน เสื้อชูชีพ กางเกงเล่นสกี ถุงนอน ผ้าปิดผ้าอ้อม ชุดกันลม ตลอดจนผ้าคลุมจักรยาน จักรยานยนต์ และรถยนต์ ฯลฯ

- อย่าซักเบาะที่หนาหรือแข็ง แม้ว่าจะมีสัญลักษณ์เครื่องซักผ้าบนป้ายดูแลผ้าก็ตาม อาจทำให้เกิดการบาดเจ็บหรือทำให้เครื่องซักผ้าผนัง พื้น
  หรือผ้าเสียหาย เนื่องจากการสั่นสะเทือนมากเกินไป
- ห้ามซักพรมขนาดเล็กหรือพรมเช็ดเท้าที่มีการเคลือบยางด้านหลัง ยางที่เคลือบอยู่ด้านหลังอาจหลุดออกมาและติดอยู่ด้านในถังซัก และอาจทำให้เครื่องทำงานผิดปกติ เช่น เกิดความผิดปกติกับระบบการระบายน้ำ

อย่าใช้เครื่องซักผ้าขณะที่ถอดช่องใส่ผงซักฟอกออก

- อาจทำให้ไฟฟ้าช็อตหรือเกิดการบาดเจ็บเนื่องจากน้ำรั่ว

อย่าสัมผัสภายในของถังซักระหว่างหรือหลังจากการอบแห้ง เนื่องจากจะร้อนจัด

- อาจทำให้เกิดการร้อนลวกได้

โปรดอย่าสอดมือเข้าไปในช่องใส่ผงซักฟอก

- อาจทำให้เกิดการบาดเจ็บ เนื่องจากมืออาจติดอยู่ในช่องใส่ผงซักฟอก

อย่าวางวัตถุใดๆ (เช่น รองเท้า เศษอาหาร สัตว์) นอกเหนือจากเสื้อผ้าในเครื่องซักผ้า

- อาจทำให้เกิดความเสียหายกับเครื่องซักผ้า หรือเกิดการบาดเจ็บและเสียชีวิตในกรณีของสัตว์เลี้ยง เนื่องจากการสั่นสะเทือนมากกว่าปกติ

อย่ากดปุ่มต่างๆ ด้วยของแหลม เช่น หมุด มีด เล็บ ฯลฯ

- อาจทำให้เกิดไฟฟ้าช็อตหรือบาดเจ็บได้

ห้ามซักผ้าที่เปื้อนน้ำมัน ครีม หรือโลชั่นทั่วไปที่ใช้ในร้านดูแลผิวหรือร้านนวด

- อาจทำให้ซีลยางเสื่อมสภาพและทำให้น้ำรั่ว

อย่าทิ้งโลหะ เช่น เข็มกลัด กิ๊บติดผมหรือสารซักฟอกไว้ในถังซักเป็นเวลานาน

- อาจทำให้ถังซักขึ้นสนิม
- หากถังซักเริ่มมีลักษณะเป็นสนิมที่พื้นผิว ให้ใช้สารทำความสะอาด (ไม่เป็นกรดหรือด่าง) กับพื้นผิว และใช้ฟองน้ำทำความสะอาด ห้ามใช้แปรงขนลวดเด็ดขาด

ห้ามใช้สารทำความสะอาดแบบซักแห้งโดยตรงและห้ามซัก ล้าง หรือปั่นหมาดผ้าที่เปื้อนสารซักแห้ง

- อาจทำให้เกิดการติดไฟขึ้นในทันทีเนื่องจากความร้อนจากการออกซิเดชันของน้ำมัน

ห้ามใช้น้ำจากอุปกรณ์ทำน้ำร้อน/น้ำเย็น

- อาจทำให้เครื่องซักผ้าเกิดปัญหา

ห้ามใช้สารซักฟอกสำหรับซักมือกับเครื่องซักผ้า

- ถ้ามีการแข็งตัวและสะสมอยู่ในเครื่องซักผ้า อาจทำให้เกิดปัญหากับผลิตภัณฑ์ ทำให้สีเปลี่ยน ขึ้นสนิม หรือทำให้มีกลิ่นอับ

ใส่ถุงเท้าและเสื้อชั้นในลงในถุงซักผ้าและซักร่วมกับผ้าอื่นๆ

ห้ามซักผ้าชิ้นใหญ่เช่นผ้าปูที่นอนในถุงซักผ้า

- มิฉะนั้นอาจเกิดการบาดเจ็บเนื่องจากการสั่นสะเทือนผิดปกติ

ห้ามใช้ผงซักฟอกแบบก้อน

- ถ้ามีการสะสมในเครื่อง อาจทำให้เกิดน้ำรั่ว

ตรวจสอบว่าไม่มีสิ่งใดอยู่ในกระเป๋าเสื้อผ้าทั้งหมดที่จะซัก

- ของแข็ง ของมีคม เช่น เหรียญ เข็มกลัด ตะปู สกรู หรือก้อนหินอาจทำให้เกิดความเสียหายแก่อุปกรณ์ได้

Untitled-47 8 2015-01-26 3:28:45

ห้ามซักผ้าที่มีหัวเข็มขัด กระดุม หรือโลหะหนักติดอยู่

แยกผ้าตามสี โดยแยกผ้าสีตกไว้ต่างหาก และเลือกโปรแกรม อุณหภูมิของน้ำ และฟังก์ชั่นเพิ่มเติมที่แนะนำ

- เนื่องจากอาจทำให้สีตกหรือผ้าเสียหาย

โปรดระวังอย่าให้ประตูหนีบนิ้วของเด็กเมื่อคุณปิดประตู

- มิฉะนั้นอาจทำให้เกิดการบาดเจ็บ

⚠ คำเตือน: คำเตือนสำคัญเกี่ยวกับการทำความสะอาด

ห้ามทำความสะอาดอุปกรณ์ โดยฉีดน้ำใส่ตัวเครื่องโดยตรง

ห้ามใช้สารทำความสะอาดที่เป็นกรดรุนแรง

ห้ามใช้น้ำมันเบนซิน, ทินเนอร์ หรือแอลกอฮอล์ เพื่อทำความสะอาดอุปกรณ์

- อาจทำให้สีเปลี่ยน เสื่อมสภาพ เสียหาย เกิดไฟฟ้าช็อตหรือไฟไหม้

ก่อนที่จะทำความสะอาดหรือดูแลรักษาเครื่อง โปรดถอดปลั๊กของเครื่องออกจากแหล่งจ่ายไฟ หรือปิดเครื่องที่ปุ่มเปิด/ปิด

- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

Untitled-47 9 2015-01-26 3:28:45

การติดตั้ง

โปรดดำเนินการตามคำแนะนำเหล่านี้ด้วยความรอบคอบเพื่อให้แน่ใจว่าสามารถติดตั้งเครื่องซักผ้าได้อย่างถูกต้องและเพื่อป้องกันอุบัติเหตุเมื่อเริ่มซักผ้า

มีชิ้นส่วนใดบ้าง

โปรดตรวจสอบว่าชิ้นส่วนทั้งหมดนี้อยู่ในบรรจุภัณฑ์ของผลิตภัณฑ์ ถ้าคุณพบปัญหากับเครื่องซักผ้าหรือชิ้นส่วน โปรดติดต่อศูนย์บริการลูกค้าของ Samsung ในพื้นที่หรือผู้ขายปลีก

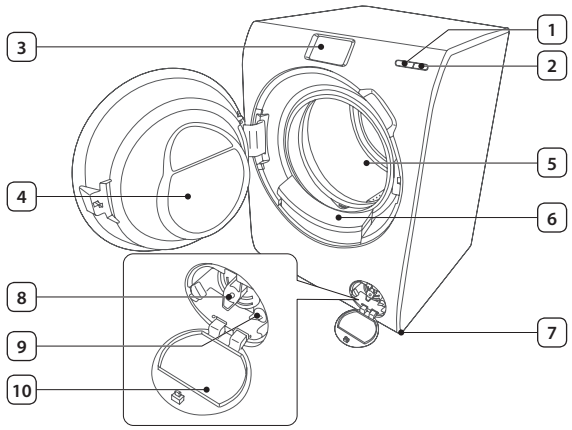

1	ปุ่มเริ่ม
2	ปุ่มเปิด/ปิด
3	หน้าจอควบคุม
4	ประตู
5	ถังซัก
6	อุปกรณ์ระบบจ่ายอัตโนมัติ
7	ขาตั้งปรับระดับ
8	ตัวกรอง
9	ท่อทิ้งน้ำฉุกเฉิน
10	ที่ปิดตัวกรอง

ประแจ

ฝาครอบน็อต



ตัวนำท่อ

ท่อจ่ายน้ำเย็น

ท่อจ่ายน้ำร้อน



ชุดอะควาเพบเบิ้ล

ฝาครอบน็อต : จำนวนฝาครอบน็อต (3 ถึง 6 ชิ้น) ที่มีให้จะขึ้นอยู่กับแต่ละรุ่น
ท่อจ่ายน้ำร้อน: เฉพาะรุ่นที่ใช้ได้เท่านั้น
ชุดอะควาเพบเบิ้ล: 200 มล. และ 100 มล. (สูงสุด)

Untitled-47 10 2015-01-26 3:28:46

ข้อกำหนดในการติดตั้ง

คำเตือนเกี่ยวกับไฟฟ้าและการลงกราวด์

- ต้องใช้ฟิวส์หรือเบรกเกอร์วงจร AC 220-240 V / 50 Hz
- โปรดใช้วงจรสาขาแยกสำหรับเครื่องซักผ้าโดยเฉพาะ

เพื่อให้แน่ใจว่าลงกราวด์ได้อย่างถูกต้อง เครื่องซักผ้าจึงมาพร้อมกับสายไฟที่มีปลั๊กลงกราวด์สามขาสำหรับใช้กับเต้ารับไฟฟ้าที่ติดตั้งและลงกราวด์อย่างเหมาะสม

โปรดติดต่อช่างไฟฟ้าหรือช่างซ่อมบำรุงที่มีความชำนาญ ถ้าคุณไม่แน่ใจเกี่ยวกับการลงกราวด์

ห้ามดัดแปลงปลั๊กที่มีให้ ถ้าไม่สามารถใช้ร่วมกับเต้ารับได้ โปรดให้ช่างที่มีความชำนาญเป็นผู้ติดตั้งเต้ารับที่เหมาะสม

คำเตือน

- ห้ามใช้สายไฟสำหรับต่อ
- ใช้สายไฟที่มากับเครื่องซักผ้าเท่านั้น
- ห้ามต่อสายกราวด์เข้ากับท่อพลาสติก ท่อก๊าซ หรือท่อน้ำร้อน
- หัวต่อลงกราวด์ที่เชื่อมต่อที่ไม่เหมาะสมอาจทำให้เกิดไฟฟ้าช็อต

การจ่ายน้ำ

แรงดันน้ำที่เหมาะสมสำหรับเครื่องซักผ้าจะอยู่ระหว่าง 50 kPa ถึง 800 kPa แรงดันน้ำที่ต่ำกว่า 50 kPa จะทำให้วาล์วน้ำไม่สามารถปิดได้สนิท หรืออาจใช้เวลานานขึ้นในการเติมน้ำลงในถังซัก ซึ่งทำให้เครื่องซักผ้าปิดระบบ ก๊อกน้ำต้องห่างไม่เกิน 120 ซม. จากด้านหลังของเครื่องซักผ้า เพื่อให้ท่อจ่ายน้ำเข้าที่มีให้นั้นต่อถึงเครื่องซักผ้าได้

ในการลดความเสี่ยงที่จะเกิดการรั่วไหล

- โปรดตรวจสอบว่าก๊อกน้ำอยู่ในระยะที่เอื้อมถึงได้ง่าย
- ปิดก๊อกเมื่อไม่ได้ใช้งานเครื่องซักผ้า
- ตรวจสอบรอยรั่วที่ข้อต่อของท่อจ่ายน้ำเข้าเป็นประจำ

ข้อควรระวัง

ก่อนที่จะใช้เครื่องซักผ้าเป็นครั้งแรก โปรดตรวจสอบการเชื่อมต่อวาล์วจ่ายน้ำและก๊อกทั้งหมดเพื่อหารอยรั่ว

Untitled-47 11 2015-01-26 3:28:46

การระบายน้ำ

Samsung ขอแนะนำให้ใช้ท่อตั้งที่มีความสูง 65 ซม. ท่อระบายน้ำต้องเชื่อมต่อผ่านคลิปท่อไปยังท่อตั้งดังกล่าว และท่อตั้งต้องครอบท่อระบายน้ำได้ทั้งหมด

พื้น

เพื่อให้ได้ประสิทธิภาพสูงสุด โปรดติดตั้งเครื่องซักผ้าบนพื้นที่แข็งแรงมั่นคง พื้นไม้อาจต้องมีการเสริมความแข็งแรงเพื่อลดการสั่นสะเทือน และ/หรือการรับน้ำหนักที่ขาดสมดุล พื้นผิวที่ปูพรมและวัสดุอ่อนนุ่มอาจไม่มั่นคงเมื่อเกิดการสั่นสะเทือน และอาจทำให้เครื่องซักผ้าเคลื่อนตัวเล็กน้อยระหว่างรอบการปั่นหมาด

ข้อควรระวัง

ห้ามติดตั้งเครื่องซักผ้าบนที่ยกพื้นหรือโครงสร้างที่ไม่แข็งแรง

อุณหภูมิของน้ำ

ห้ามติดตั้งเครื่องซักผ้าในพื้นที่ซึ่งน้ำอาจเป็นน้ำแข็งได้ เนื่องจากเครื่องซักผ้าจะมีน้ำอยู่ในวาล์วน้ำ ปั๊ม และ/หรือท่อเสมอ น้ำที่แข็งตัวซึ่งหลงเหลืออยู่ในส่วนเชื่อมต่ออาจทำให้สายพาน ปั๊ม และองค์ประกอบอื่นๆ ของเครื่องซักผ้าเสียหาย

การติดตั้งในซุ้มหรือตู้

ระยะห่างต่ำสุดเพื่อให้ทำงานได้อย่างมั่นคง:

ด้านข้าง	25 มม.	ด้านหลัง	50 มม.
ด้านบน	25 มม.	ด้านหน้า	550 มม.

ถ้าติดตั้งทั้งเครื่องซักผ้าและเครื่องอบผ้าไว้ในบริเวณเดียวกัน ด้านหน้าของซุ้มหรือตู้จะต้องมีช่องเปิดที่ไม่มีสิ่งกีดขวางอย่างน้อย 550 มม. เครื่องซักผ้าเพียงอย่างเดียวจะไม่ต้องมีช่องเปิดสำหรับอากาศโดยเฉพาะ

Untitled-47 12 2015-01-26 3:28:46

การติดตั้งแบบทีละขั้นตอน

ขั้นตอนที่ 1 - เลือกตำแหน่ง

ข้อกำหนดของตำแหน่ง:

- มีพื้นผิวแข็ง ราบเรียบเสมอกัน โดยไม่มีพรมหรือวัสดุปูพื้นที่อาจปิดกั้นการระบายอากาศ
- พ้นจากแสงแดดโดยตรง
- มีพื้นที่ว่างสำหรับการระบายอากาศและการเดินสายอย่างเพียงพอ
- อุณหภูมิแวดล้อมต้องสูงกว่าจุดเยือกแข็ง (0 °C) อยู่เสมอ
- อยู่ห่างจากแหล่งกำเนิดความร้อนเสมอ

ขั้นตอนที่ 2 – นำหมุดสำหรับการขนส่งออก

แกะบรรจุภัณฑ์ของผลิตภัณฑ์ออกและนำหมุดสำหรับการขนส่งทั้งหมดออก

1. คลายหมุดสำหรับการขนส่งทั้งหมดที่ด้านหลังของเครื่องโดยใช้ประแจที่มีให้

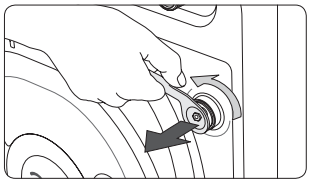

2. นำฝาครอบน็อตที่เป็นพลาสติกที่มีให้ใส่ลงในช่อง
   เก็บหมุดไว้เพื่อใช้ในอนาคต

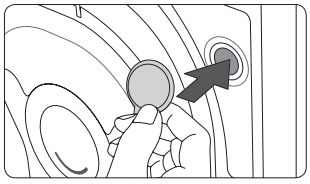

คำเตือน

วัสดุบรรจุภัณฑ์อาจเป็นอันตรายกับเด็ก โปรดทิ้งวัสดุบรรจุภัณฑ์ทั้งหมด (ถุงพลาสติก โฟม เป็นต้น) ให้พ้นมือเด็ก

ขั้นตอนที่ 3 - ปรับขาตั้งปรับระดับ

1. ค่อยๆ เลื่อนเครื่องซักผ้าเข้าสู่ตำแหน่งที่ติดตั้ง การใช้แรงมากเกินไปอาจทำให้ขาตั้งปรับระดับเสียหาย
2. ปรับระดับเครื่องซักผ้าด้วยการปรับขาตั้งปรับระดับด้วยตนเอง

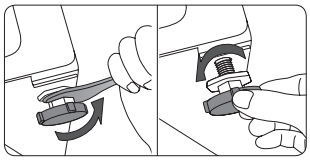

3. เมื่อการปรับระดับเสร็จสิ้น ให้ขันน็อตโดยใช้ประแจ

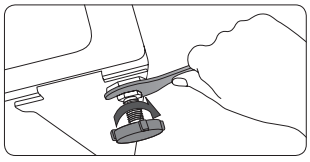

Untitled-47 13 2015-01-26 3:28:46

ขั้นตอนที่ 4 - เชื่อมต่อท่อน้ำ

ต่อท่อจ่ายน้ำเข้ากับก๊อกน้ำ

1. ถอด **ข้อต่อ (A)** ออกจาก **ท่อจ่ายน้ำ (B)**

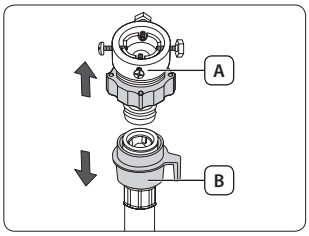

2. ใช้ไขควงฟิลลิปส์เพื่อคลายสกรูสี่ตัวบนข้อต่อ

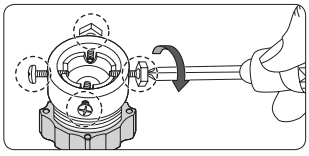

3. จับข้อต่อไว้และหมุน **ชิ้นส่วน (C)** ไปตามทิศทางของลูกศรเพื่อคลายออก 5 มม. (*)

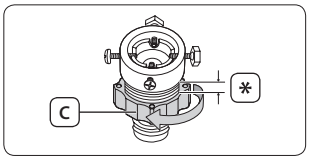

4. ต่อข้อต่อเข้ากับก๊อกน้ำ และขันสกรูให้แน่นพร้อมทั้งยกข้อต่อขึ้น
5. หมุน **ชิ้นส่วน (C)** ไปตามทิศทางของลูกศรเพื่อขันให้แน่น

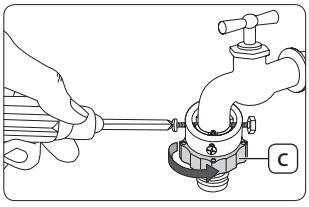

6. ในขณะจับด้านล่างของ **ชิ้นส่วน (E)** ไว้ ให้เชื่อมต่อท่อจ่ายน้ำเข้ากับข้อต่อ จากนั้นให้ปล่อย **ชิ้นส่วน (E)** ท่อจะต่อเข้ากับข้อต่อได้พอดีพร้อมกับมีเสียงคลิก

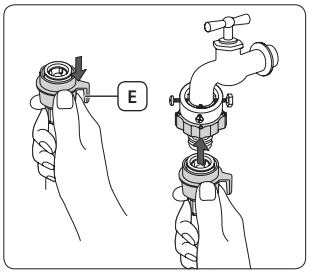

Untitled-47 14 2015-01-26 3:28:47

7. ต่อปลายอีกด้านของท่อจ่ายน้ำเข้ากับวาล์วน้ำเข้าที่ด้านหลังของเครื่องซักผ้า หมุนท่อตามเข็มนาฬิกาเพื่อขันให้แน่น

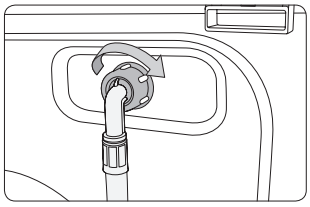

8. เปิดก๊อกน้ำและตรวจสอบว่ามีรอยรั่วรอบบริเวณเชื่อมต่อหรือไม่ ถ้ามีน้ำรั่ว ให้ทำตามขั้นตอนข้างต้นนี้ซ้ำ

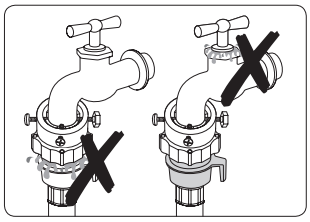

- หากก๊อกน้ำประเภทเกลียว ให้ต่อท่อน้ำเข้ากับก๊อกน้ำตามภาพ

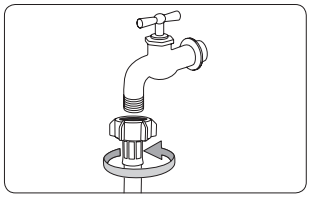

คำเตือน

หยุดการใช้เครื่องซักผ้าถ้ามีน้ำรั่ว และติดต่อศูนย์บริการของ Samsung ในพื้นที่ มิฉะนั้นอาจทำให้เกิดไฟช็อต

ข้อควรระวัง

โปรดอย่าดึงท่อจ่ายน้ำจนดึงโดยใช้แรง หากท่อจ่ายน้ำสั้นเกินไป โปรดเปลี่ยนเป็นท่อแรงดันสูงที่ยาวขึ้น

- หลังจากต่อท่อจ่ายน้ำเข้ากับข้อต่อแล้ว ให้ตรวจสอบว่ามีการเชื่อมต่ออย่างถูกต้องหรือไม่ โดยดึงท่อจ่ายน้ำลง
- โปรดใช้ก๊อกน้ำประเภทที่ใช้งานกันทั่วไป หากก๊อกน้ำเป็นแบบเหลี่ยมหรือใหญ่เกินไป ให้นำวงแหวนออกก่อนที่จะต่อก๊อกน้ำเข้ากับข้อต่อ

สำหรับรุ่นที่มีช่องน้ำร้อนเข้าเพิ่มเติม:

1. ต่อปลายสีแดงของท่อจ่ายน้ำร้อนกับช่องน้ำร้อนเข้าที่ด้านหลังของเครื่องซักผ้า
2. ต่อปลายอีกด้านของท่อจ่ายน้ำร้อนเข้ากับก๊อกน้ำร้อน

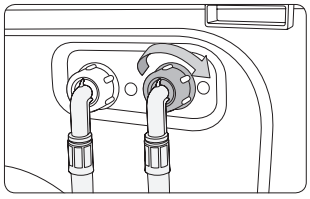

Untitled-47 15 2015-01-26 3:28:47

ท่อเตือนน้ำรั่ว (เฉพาะรุ่นที่ใช้ได้เท่านั้น)

ท่อเตือนน้ำรั่วจะเตือนให้ผู้ใช้ทราบถึงความเสี่ยงในการเกิดน้ำรั่ว อุปกรณ์จะรับรู้การไหลของน้ำและเปลี่ยนเป็นสีแดงที่ **สัญลักษณ์ (A)** บริเวณกึ่งกลางในกรณีที่เกิดการรั่ว

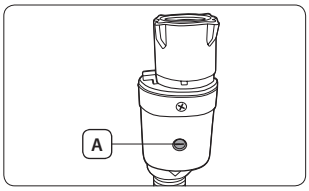

ขั้นตอนที่ 5 - วางท่อทิ้งน้ำ

สามารถติดตั้งท่อทิ้งน้ำได้สามวิธี:

พาดขอบอ่างซักล้าง

ท่อทิ้งน้ำต้องวางในความสูงระหว่าง 60 ซม. ถึง 90 ซม. (*) จากพื้น หากต้องการท่อทิ้งน้ำโค้งให้ใช้ **ตัวนำท่อพลาสติก (A)** ที่ให้มา ยึดตัวนำกับผนังโดยใช้ตะขอเพื่อให้แน่ใจว่าจะสามารถระบายน้ำทิ้งได้เสมอ

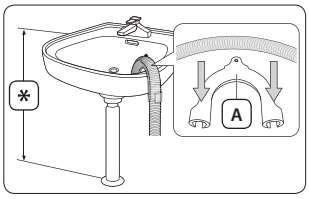

ในท่อทิ้งน้ำของอ่างล้างมือ

ท่อทิ้งน้ำจะต้องอยู่เหนือท่อพักของอ่างล้างมือ เพื่อให้ปลายท่ออยู่เหนือพื้นอย่างน้อย 60 ซม.

ในท่อทิ้งน้ำ

ท่อทิ้งน้ำควรมีความสูงระหว่าง 60 ซม. ถึง 90 ซม. (*) ขอแนะนำให้ใช้ท่อแนวตั้งที่มีความสูง 65 ซม. โปรดตรวจสอบให้แน่ใจว่าได้ต่อท่อทิ้งน้ำเข้ากับท่อตั้งในแนวเอียง

ข้อกำหนดของท่อตั้งสำหรับระบายน้ำทิ้ง:

- เส้นผ่าศูนย์กลางขั้นต่ำ 5 ซม.
- สามารถระบายน้ำได้ขั้นต่ำ 60 ลิตรต่อนาที

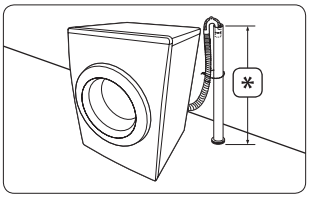

ขั้นตอนที่ 6 – เปิดเครื่องซักผ้า

ต่อสายไฟเข้ากับเต้ารับไฟฟ้าที่ผนัง ซึ่งมีเต้ารับไฟฟ้า AC 220-240V / 50Hz ที่ผ่านการรับรองและมีการป้องกันด้วยฟิวส์หรือเบรกเกอร์วงจร จากนั้นให้กดปุ่ม **เปิด/ปิด** เพื่อเปิดเครื่องซักผ้า

Untitled-47 16 2015-01-26 3:28:48

ก่อนการเริ่มต้น

การตั้งค่าเริ่มต้น

เมื่อเครื่องซักผ้าเปิดใช้งานเป็นครั้งแรก หน้าจอยินดีต้อนรับจะปรากฏพร้อมกับโลโก้ Samsung โปรดปฏิบัติตามคำแนะนำบนหน้าจอเพื่อดำเนินการตั้งค่าเริ่มต้นให้เสร็จสมบูรณ์ คุณสามารถเปลี่ยนการตั้งค่าเริ่มต้นในภายหลังด้วยการเข้าถึงหน้าจอ การตั้งค่า

ขั้นตอนที่ 1 - ตั้งค่าภาษา

ตั้งค่าภาษาของเมนูตามต้องการ

1. เลือกภาษา
2. แตะ **ถัดไป**

ขั้นตอนที่ 2 - ตั้งวันที่ & เวลา

ตั้งค่าวันที่และเวลาปัจจุบัน

1. แตะลูกศรเพื่อตั้งเวลาสำหรับส่วนของเวลาแต่ละส่วน
2. แตะ **ถัดไป**

เวลาเริ่มต้นจะตั้งไว้ในรูปแบบ 12 ชั่วโมง
หากต้องการสลับระหว่างส่วน **AM** และ **PM** ให้แตะส่วนที่เกี่ยวข้อง

Untitled-47 17 2015-01-26 3:28:48

ขั้นตอนที่ 3 - ตั้งค่าการจ่ายอัตโนมัติ

อุปกรณ์ระบบจ่ายอัตโนมัติจะจ่ายผงซักฟอกและน้ำยาปรับผ้านุ่มลงถังซักในปริมาณที่เหมาะสมตามโปรแกรมและรอบการทำงาน

1. มีการตั้งค่าเริ่มต้นให้กับทั้ง **เติมผงซักฟอกอัตโนมัติ** และ **เติมน้ำยาปรับผ้านุ่มอัตโนมัติ** เป็น **เปิด** หากต้องการเปลี่ยนการตั้งค่า ให้เลื่อนแถบที่เกี่ยวข้องเป็น **ปิด**
2. ตั้งค่า **ปริมาณ** และ **ความกระด้างของน้ำ**
3. ตั้งค่า **ปริมาณ** และ **ความเข้มข้น**
4. แตะ **ถัดไป**

ขั้นตอนที่ 4 - ตั้งค่าการอัพเดทอัตโนมัติ

อัพเดทอัตโนมัติ จะอัพเดทเฟิร์มแวร์โดยอัตโนมัติเพื่อปรับปรุงประสิทธิภาพและ/หรือแก้ไขข้อผิดพลาดที่ทราบผ่านการสื่อสารกับเซิร์ฟเวอร์ การอัพเดท เมื่ออัพเดทเฟิร์มแวร์แล้ว ฟังก์ชั่นบางอย่างของเครื่องซักผ้าอาจไม่สามารถใช้ได้ ทั้งนี้ขึ้นอยู่กับเวอร์ชั่นของเฟิร์มแวร์

1. หากต้องการอัพเดทเฟิร์มแวร์โดยอัตโนมัติ ให้ตั้งค่า **อัพเดทอัตโนมัติ** เป็น **เปิด**
2. แตะ **เสร็จ**

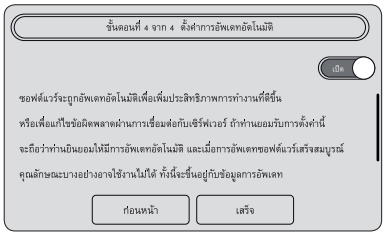

ขั้นตอนที่ 5 - เรียกใช้การเทียบค่า (แนะนำ)

การเทียบค่า จะช่วยให้เครื่องซักผ้าสามารถตรวจหาน้ำหนักที่ถูกต้อง โปรดตรวจสอบว่าถังซักว่างเปล่าก่อนเรียกใช้ การเทียบค่า

1. แตะ **การตั้งค่า** > **การเทียบค่า** > **เริ่ม**
   - ประตูจะถูกล็อคในระหว่างการทำงาน
   - ถังซักจะหมุนตามเข็มนาฬิกาและทวนเข็มนาฬิกาอย่างต่อเนื่องเป็นเวลาหลายนาที
2. เมื่อดำเนินการเสร็จ เครื่องซักผ้าจะปิดระบบโดยอัตโนมัติ

Untitled-47 18 2015-01-26 3:28:48

คำแนะนำของผ้า

ขั้นตอนที่ 1 - คัดแยก

แยกผ้าตามเกณฑ์ดังนี้:

- **ฉลากดูแลผ้า**: แยกผ้าเป็น ผ้าฝ้าย ผ้าเนื้อผสม ผ้าใยสังเคราะห์ ผ้าไหม ผ้าขนสัตว์ และเรยอน
- **สี**: แยกผ้าขาวออกจากผ้าสี
- **ขนาด**: การนำผ้าที่มีขนาดแตกต่างมารวมเข้าไว้ด้วยกันในถังซักจะช่วยเพิ่มประสิทธิภาพในการซัก
- **ความบอบบาง**: ซักผ้าบางแยกต่างหาก โดยใช้ตัวเลือกโปรแกรมรีดง่ายสำหรับสำหรับผ้าขนสัตว์ใหม่ ผ้าม่าน และผ้าไหม โปรดดูฉลากบนผ้า

โปรดดูฉลากดูแลผ้าบนเสื้อผ้า และแยกเสื้อผ้าตามนั้นก่อนเริ่มต้นซัก

ขั้นตอนที่ 2 - นำสิ่งของออกจากกระเป๋าให้หมด

นำสิ่งของออกจากทุกประเป๋าของเสื้อผ้า

- วัตถุที่เป็นโลหะ เช่น เหรียญ เข็มหมุด และหัวเข็มขัดบนเสื้อผ้าอาจทำให้ผ้าอื่นๆ และถังซักเสียหาย

กลับผ้าที่มีกระดุมและเสื้อผ้าที่มีลายปักเอาด้านในออกมาด้านนอก

- ถ้าไม่รูดซิปกางเกงหรือแจ็คเก็ตปิดไว้ขณะซัก ถังซักอาจเสียหายได้ โปรดรูปซิปปิดไว้
- เสื้อผ้าที่มีเชือกยาวอาจพันกับผ้าชิ้นอื่น โปรดผูกเชือกไว้ก่อนที่จะเริ่มต้นซักผ้า

ขั้นตอนที่ 3 - ใช้ถุงใส่ผ้าสำหรับซัก

- ต้องใส่ชุดชั้นในสตรี (ซักน้ำได้) ลงในถุงใส่ผ้าสำหรับซัก ส่วนที่เป็นโลหะของชุดชั้นในสตรีอาจทำให้วัสดุแตกหักและทำความเสียหายแก่เสื้อผ้าได้
- เสื้อผ้าชิ้นเล็กและมีน้ำหนักเบา เช่น ถุงเท้า ถุงมือ ถุงน่อง และผ้าเช็ดหน้า อาจติดอยู่บริเวณประตู โปรดใส่เสื้อผ้าเหล่านี้ไว้ในถุงใส่ผ้าสำหรับซัก
- อย่าซักถุงใส่ผ้าเพียงอย่างเดียวโดยไม่มีผ้าอื่น เนื่องจากอาจทำให้เกิดการสั่นสะเทือนที่ทำให้เครื่องซักผ้าเคลื่อนที่และอาจทำให้ได้รับบาดเจ็บ

ขั้นตอนที่ 4 - แช่ผ้าก่อนซัก (ถ้าจำเป็น)

สำหรับผ้าฝ้ายที่เปื้อนมาก ให้เพิ่มตัวเลือกแช่ผ้าก่อนซักให้กับโปรแกรมที่เลือกไว้ พร้อมกับใช้ผงซักฟอกชนิดโปรตีน

Untitled-47 19 2015-01-26 3:28:48

ขั้นตอนที่ 5 - พิจารณาปริมาณผ้าที่จะซัก

ห้ามใส่ผ้าเกินปริมาณที่กำหนด การใส่ผ้ามากเกินไปอาจทำให้เครื่องซักผ้าไม่สามารถซักได้อย่างเหมาะสม โปรดดูหน้า **28** สำหรับข้อมูลเกี่ยวกับปริมาณผ้าแต่ละชนิดที่จะซัก

เมื่อซักชุดเครื่องนอนหรือผ้านวม เวลาในการซักอาจนานขึ้น และประสิทธิภาพในการปั่นหมาดจะลดลง สำหรับชุดเครื่องนอนหรือผ้านวม ความเร็วของรอบปั่นหมาดสูงสุดที่แนะนำคือ 800 รอบต่อนาที และน้ำหนักคือ 2.0 กิโลกรัม หรือน้อยกว่า

ข้อควรระวัง

ถ้าผ้าไม่สมดุล รหัสข้อผิดพลาด "**UE**" จะปรากฏขึ้น ให้กระจายชิ้นผ้าให้เสมอกัน ผ้าที่ไม่สมดุลอาจลดประสิทธิภาพในการปั่น

ขั้นตอนที่ 6 - ใช้ประเภทผงซักฟอกที่เหมาะสม

ประเภทของผงซักฟอกขึ้นอยู่กับประเภทเนื้อผ้า (ผ้าฝ้าย ผ้าใยสังเคราะห์ ผ้าบาง ขนสัตว์) สี อุณหภูมิที่ซัก และระดับความสกปรก โปรดใช้ผงซักฟอกชนิด "ฟองน้อย" ซึ่งได้รับการออกแบบสำหรับเครื่องซักผ้าอัตโนมัติ

- ปฏิบัติตามคำแนะนำของผู้ผลิตผงซักฟอก ตามน้ำหนักของผ้า ระดับความสกปรก และความกระด้างของน้ำในพื้นที่ของคุณ ถ้าคุณไม่แน่ใจเกี่ยวกับความกระด้างของน้ำ โปรดติดต่อผู้ให้บริการน้ำประปาในพื้นที่
- ห้ามใช้ผงซักฟอกที่ที่เกาะตัวหรือแข็ง ผงซักฟอกอาจค้างอยู่ในรอบการซัก ทำให้ช่องระบายน้ำอุดตัน

ข้อควรระวัง

เมื่อซักผ้าขนสัตว์โดยใช้โปรแกรมผ้าขนสัตว์ ให้ใช้น้ำยาซักผ้าที่มีสภาวะเป็นกลางเท่านั้น ถ้าใช้ผงซักฟอกกับโปรแกรมผ้าขนสัตว์ ผงซักฟอกอาจตกค้างอยู่ในผ้าและทำให้ผ้าสีเปลี่ยน

Untitled-47 20 2015-01-26 3:28:48

คำแนะนำสำหรับผงซักฟอก

ระบบจ่ายอัตโนมัติ

เครื่องซักผ้ามีช่องจ่ายสองช่อง: ช่องด้านซ้ายสำหรับน้ำยาซักผ้า และช่องด้านขวาสำหรับน้ำยาปรับผ้านุ่ม อุปกรณ์ระบบจ่ายอัตโนมัติจะจ่าน้ำยาซักผ้าละน้ำยาปรับผ้านุ่มลงถังซักในปริมาณที่เหมาะสมตามโปรแกรมและรอบการทำงาน

⚠ **ข้อควรระวัง**

- ใช้น้ำยาซักผ้าและน้ำยาปรับผ้านุ่มกับอุปกรณ์ระบบจ่ายอัตโนมัติเท่านั้น
- โปรดตรวจสอบว่าได้ใส่อุปกรณ์ระบบจ่ายอัตโนมัติไว้เรียบร้อยแล้ว เครื่องซักผ้าจะไม่เริ่มทำงานจนกว่าจะใส่อุปกรณ์ระบบจ่ายอัตโนมัติไว้อย่างถูกต้อง
- เมื่อใช้น้ำยาซักผ้าชนิดอื่น โปรดทำความสะอาดช่องใส่น้ำยาซักผ้าก่อน
- ห้ามผสมน้ำยาซักผ้ากับน้ำยาปรับผ้านุ่มในแต่ละช่อง
- เพื่อป้องกันน้ำยาซักผ้าเกาะตัว โปรดอย่าเปิดฝาครอบเมื่อเทน้ำยาซักผ้าใส่ในช่องแล้ว
- ห้ามใช้สารฟอกขาวซึ่งอาจทำให้เกิดการกัดกร่อนและ/หรือเกิดก๊าซ
- ห้ามคว่ำอุปกรณ์ระบบจ่ายอัตโนมัติ มิฉะนั้นน้ำยาอาจหกออกจากช่อง
- อย่ากดที่ช่องเปิดที่ด้านล่างของอุปกรณ์ระบบจ่ายอัตโนมัติขณะที่ขยับอุปกรณ์ สิ่งที่บรรจุภายในอาจรั่วไหล
- โปรดใช้ความระมัดระวังในการใส่สารซักฟอกหรือน้ำยาปรับผ้านุ่มในอุปกรณ์ สิ่งที่บรรจุภายในอาจหกล้น
- โปรดนำอุปกรณ์ระบบจ่ายอัตโนมัติออกก่อนที่จะใช้น้ำยาซักผ้า
- เมื่อนำอุปกรณ์ระบบจ่ายอัตโนมัติออกเพื่อตรวจสอบปริมาณน้ำยาซักผ้าที่เหลือก่อนหรือหลังข้อความแสดงข้อผิดพลาด อุปกรณ์อาจมีน้ำยาซักผ้าหลงเหลืออยู่หรือรั่วไหลออกจากด้านล่างของอุปกรณ์เล็กน้อย
- ใส่อุปกรณ์จ่ายอัตโนมัติเข้าที่ให้สุด การใส่ไม่สุดอาจทำให้อุปกรณ์ทำงานล้มเหลว
- โดยค่าเริ่มต้น ระบบจ่ายอัตโนมัติ จะปิดในโปรแกรม ถนอมผ้า, ผ้าขนสัตว์, ชุดเด็กอ่อน หรือ ผ้ากีฬา ผ้าร่ม
  ในการเปิด ระบบจ่ายอัตโนมัติ ในโปรแกรมเหล่านี้ ให้แตะที่ **การตั้งค่า** หรือ **แถบแผงควบคุมด่วน > ระบบจ่ายอัตโนมัติ** และเปลี่ยนการตั้งค่าตามที่จำเป็น

Untitled-47 21 2015-01-26 3:28:48

1. เปิดประตู และดึงอุปกรณ์ระบบจ่ายอัตโนมัติออกมาจากเครื่องซักผ้า

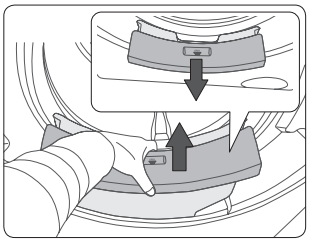

2. หมุนปุ่มบิดด้านซ้ายทวนเข็มนาฬิกาเพื่อเปิด และเทน้ำยาซักผ้าไปที่ช่องด้านซ้ายจนถึงเส้นบอกปริมาณสูงสุด
3. หมุนปุ่มบิดด้านขวาทวนเข็มนาฬิกาเพื่อเปิด และเทน้ำยาปรับผ้านุ่มไปที่ช่องด้านขวาจนถึงเส้นบอกปริมาณสูงสุด
4. ล็อคปุ่มบิดด้วยการหมุนตามเข็มนาฬิกา

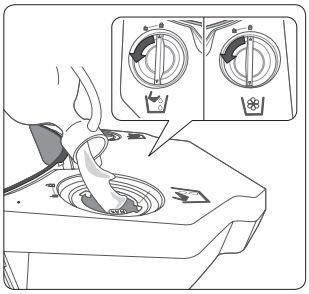

5. ใส่อุปกรณ์ระบบจ่ายอัตโนมัติกลับเข้าที่เดิม
   โปรดใช้ความระมัดระวังขณะใส่อุปกรณ์ เนื่องจากน้ำยาอาจหกออกจากช่องทางด้านใดด้านหนึ่ง
6. เปิด **เติมน้ำยาซักผ้าอัตโนมัติ** และ **เติมน้ำยาปรับผ้านุ่มอัตโนมัติ**
   โปรดดู "**ระบบจ่ายอัตโนมัติ**" ที่หน้า **32**

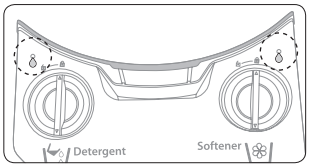

Untitled-47 22 2015-01-26 3:28:49

การจ่ายด้วยตนเอง

ในกรณีที่คุณไม่ต้องการใช้เครื่องจ่ายอัตโนมัติ (อุปกรณ์ระบบจ่ายอัตโนมัติ) คุณสามารถตวงสารซักฟอกลงในถังซักโดยตรง หรือใช้อะควาเพบเบิ้ลที่มีให้เมื่อใส่สารซักฟอกด้วยตนเอง อะควาเพบเบิ้ลมีสองขนาดและมีให้เป็นอุปกรณ์เสริมกับเครื่อง โปรดเลือกอะควาเพบเบิ้ลที่เหมาะสำหรับปริมาณผงซักฟอก

1. ปิด **เติมผงซักฟอกอัตโนมัติ**
   โปรดดู "**ระบบจ่ายอัตโนมัติ**" ที่หน้า **32**
2. เทผง เจล หรือน้ำยาซักผ้าใน **อะควาเพบเบิ้ล (A)** ที่เหมาะสม ตรวจสอบเครื่องหมายปริมาณที่ด้านในของอะควาเพบเบิ้ล

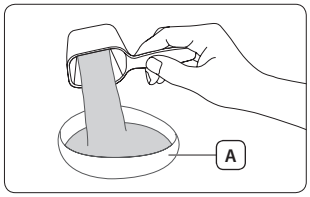

3. ใส่อะควาเพบเบิ้ลใกล้กับส่วนในสุดของถังซัก

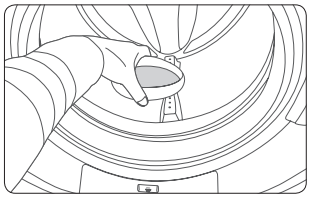

เมื่อซักเสร็จแล้ว ให้นำอะควาเพบเบิ้ลออกจากถังซัก และทำความสะอาดเพื่อนำมาใช้อีกในภายหลัง

ข้อควรระวัง

- สามารถใช้น้ำยาปรับผ้านุ่นโดยใช้อุปกรณ์ระบบจ่ายอัตโนมัติเท่านั้น ไม่สามารถเติมด้วยตนเองได้
- โปรดใช้ความระมัดระวังขณะใส่อะควาเพบเบิ้ล เนื่องจากต้องวางให้สมดุลในการซักครั้งแรก หากอะควาเพบเบิ้ลคว่ำก่อนที่จะเริ่มต้นซัก อาจทำให้ผงซักฟอกตกค้างอยู่ในผ้าเมื่อซักเสร็จ ซึ่งทำให้ผ้าเปลี่ยนสีและ/หรือประสิทธิภาพในการซักลดลง
- ห้ามเทผงซักฟอกลงในทั้งช่องใส่น้ำยาซักผ้าอัตโนมัติและอะควาเพบเบิ้ล
- เมื่อใช้ผงซักฟอกชนิดอื่น โปรดทำความสะอาดอะควาเพบเบิ้ลก่อน
- ห้ามใส่อะควาเพบเบิ้ลลงในผ้าห่มที่พับไว้หรือระหว่างชิ้นผ้า
- ห้ามเลือกตัวเลือก แช่ผ้าก่อนซัก เมื่อใช้อะควาเพบเบิ้ล
- การใช้ผงซักฟอกหรือน้ำยาซักผ้าปริมาณมากอาจทำให้เกิดปัญหาต่อไปนี้ และทำให้ระบบทำงานล้มเหลวและ/หรือทำให้อายุการใช้งานสั้นลง
- การใช้ผงซักฟอกหรือน้ำยาซักผ้ามากเกินไปจะทำให้เกิดฟองมาก และทำให้เวลาในการล้างน้ำยาวนานขึ้น
- และยังอาจทำให้มีสารซักฟอกหลงเหลือในถังซักหลังจากสิ้นสุดการซัก
- ใช้สารซักฟอกในปริมาณที่เหมาะสมตามข้อกำหนดของผู้ผลิตสารซักฟอก
- ในกรณีที่ตวงสารซักฟอกด้วยตนเอง ขอแนะนำให้ใช้อะควาเพบเบิ้ลเมื่อซักผ้าสี

Untitled-47 23 2015-01-26 3:28:49

การทำงาน

หน้าจอ

หน้าจอจริงอาจต่างไปจากภาพด้านล่าง ทั้งนี้ขึ้นอยู่กับแต่ละรุ่น

หน้าจอหลัก

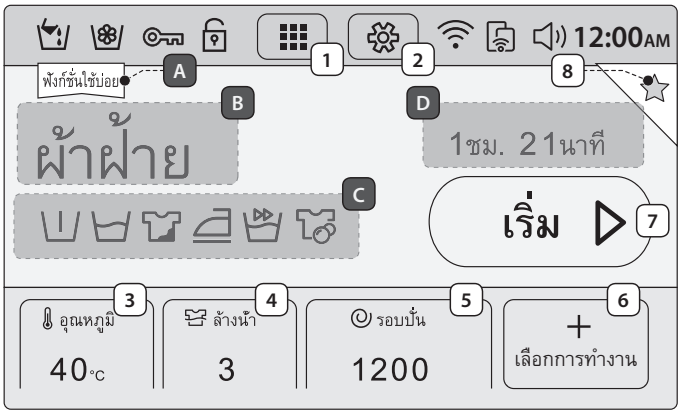

ปุ่ม

1	**โปรแกรม**	แตะเพื่อเข้าสู่ช่องของโปรแกรม
2	**การตั้งค่า**	แตะเพื่อเข้าสู่หน้าจอการตั้งค่า
3	**อุณหภูมิ**	แตะเพื่อเปลี่ยนอุณหภูมิสำหรับโปรแกรมปัจจุบัน
4	**ล้างน้ำ**	แตะเพื่อเปลี่ยนจำนวนครั้งในการล้างน้ำสำหรับโปรแกรมปัจจุบัน
5	**รอบปั่น**	แตะเพื่อเปลี่ยนความเร็วในการปั่นสำหรับโปรแกรมปัจจุบัน
6	**เลือกการทำงาน**	แตะเพื่อเข้าสู่หน้าจอตัวเลือกของโปรแกรม
7	**เริ่ม**	แตะเพื่อเริ่มการทำงาน
8	**ฟังก์ชั่นที่ชื่นชอบ**	แตะเพื่อเพิ่มการกำหนดค่าโปรแกรมปัจจุบันลงในรายการฟังก์ชั่นที่ชื่นชอบ คุณสามารถเพิ่มโปรแกรมที่กำหนดเองได้ถึง 4 โปรแกรม ซึ่งจะปรากฏที่รายการแรกของช่องของโปรแกรม

ข้อมูล

A	**ฟังก์ชั่นใช้บ่อย**	แสดงโปรแกรมที่ใช้บ่อยที่สุด
B	**โปรแกรมปัจจุบัน**	แสดงโปรแกรมปัจจุบัน
C	**ตัวเลือกที่ใช้งาน**	แสดงตัวเลือกที่ใช้งานสำหรับโปรแกรมปัจจุบัน
D	**เวลาโดยประมาณ**	แสดงเวลาในการทำงานโดยประมาณสำหรับโปรแกรมปัจจุบัน

Untitled-47 24 2015-01-26 3:28:49

แถบสถานะ

	เติมน้ำยาซักผ้าอัตโนมัติ	ถ้าสัญลักษณ์นี้ส่องสว่าง แสดงว่ามีการเปิดใช้งาน เติมน้ำยาซักผ้าอัตโนมัติ
	เติมน้ำยาปรับผ้านุ่มอัตโนมัติ	ถ้าสัญลักษณ์นี้ส่องสว่าง แสดงว่ามีการเปิดใช้งาน เติมน้ำยาปรับผ้านุ่มอัตโนมัติ
	Door Lock	ถ้าสัญลักษณ์นี้ส่องสว่าง แสดงว่ามีการล็อคประตูเพื่อป้องกันประตูเปิดในระหว่างการทำงาน
	ล็อคป้องกันเด็ก	ถ้าไอคอนนี้เปลี่ยนเป็นลงล็อค [ ] แสดงว่ามีการตั้งค่า ล็อคป้องกันเด็ก ไว้เพื่อป้องกันการเกิดอุบัติเหตุกับเด็ก
	เครือข่าย	แสดงสถานะการเชื่อมต่อเครือข่าย Wi-Fi
	ระบบควบคุมอัจฉริยะ	ถ้าสัญลักษณ์นี้ส่องสว่าง แสดงว่ามีการควบคุมเครื่องซักผ้าจากอุปกรณ์เคลื่อนที่
	เสียง	ถ้าไอคอนนี้เปลี่ยนเป็นปิดเสียง [ ] ระบบจะไม่ส่งเสียงออกมา
12:00AM	**เวลา**	แสดงเวลาปัจจุบัน

แถบแผงควบคุมด่วน

ที่ **แถบแผงควบคุมด่วน** จะสามารถใช้ได้ 6 รายการ: ล็อคป้องกันเด็ก, ไฟของถัง, เติมน้ำยาซักผ้าอัตโนมัติ, เติมน้ำยาปรับผ้านุ่มอัตโนมัติ, เครือข่าย และ ระบบควบคุมอัจฉริยะ

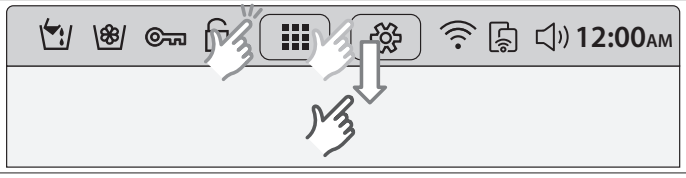

1. แตะที่ **แถบสถานะ** หรือปัดลงเพื่อแสดงรายการที่ใช้ได้

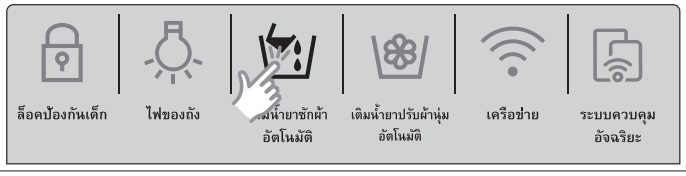

2. แตะเพื่อเปิด/ปิดรายการ หรือเปลี่ยนการตั้งค่าปัจจุบัน

- สำหรับการตั้งค่าขั้นสูง ให้ไปที่หน้าจอการตั้งค่า และเปลี่ยนแปลงการตั้งค่าของคุณ
- รายการที่ใช้งานอยู่จะส่องสว่าง แต่รายการที่ไม่ได้ใช้งานจะเป็นสีเทา

Untitled-47 25 2015-01-26 3:28:50

หน้าจอตัวเลือก

1	**ซักเร็ว**	สำหรับเสื้อผ้าที่เปื้อนน้อย มีน้ำหนักผ้าน้อยกว่า 2 กก.
2	**แช่ผ้าก่อนซัก**	เพิ่มรอบการซักขั้นต้นก่อนการซักหลัก
3	**ซักคราบฝังลึก**	เวลาในการทำงานสำหรับแต่ละรอบจะยาวนานกว่าปกติ
4	**แช่ผ้า+**	มีประโยชน์สำหรับการขจัดคราบที่ซักออกยากบนเสื้อผ้า
5	**โปรแกรมรีดง่าย**	มีประโยชน์สำหรับการลดรอยยับ
6	**ตั้งเวลาสิ้นสุด**	ใช้ตัวเลือกนี้เพื่อระบุเวลาสิ้นสุดของโปรแกรมที่เลือก โปรดดูหน้า **31**
7	**กลับ**	ย้อนกลับไปยังหน้าจอหลัก

สำหรับรายละเอียดเกี่ยวกับตัวเลือกแต่ละรายการ โปรดดู “**เลือกการทำงาน**” ในหน้า **30**

Untitled-47 26 2015-01-26 3:28:50

ขั้นตอนง่าย ๆ ในการเริ่มต้น

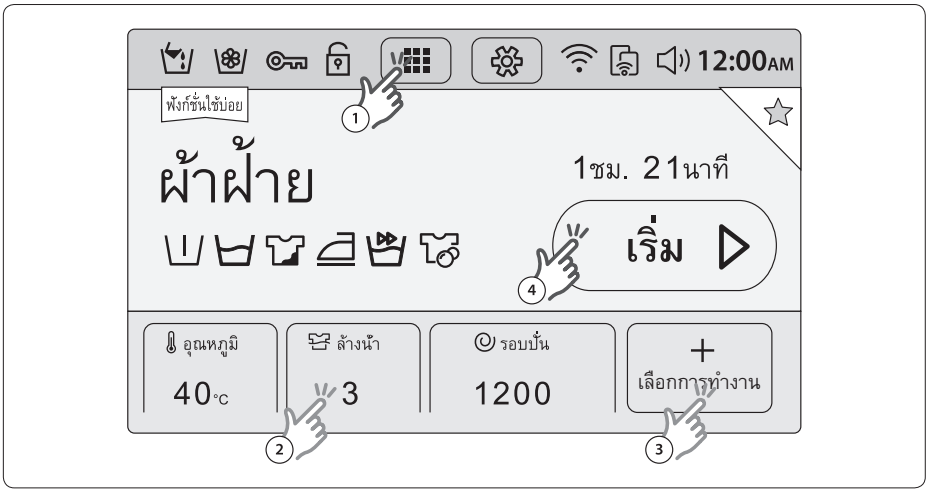

1. กดปุ่ม **เปิด/ปิด** เพื่อแสดงหน้าจอหลัก
2. ในหน้าจอหลัก ให้แตะไอคอน **โปรแกรม** ที่ด้านบนบริเวณกึ่งกลางเพื่อแสดงช่องของโปรแกรม
3. เลือกโปรแกรม เครื่องซักผ้าสนับสนุนโปรแกรมจำนวน 22 โปรแกรม
4. เปลี่ยนการตั้งค่าโปรแกรม (**อุณหภูมิ**, **ล้างน้ำ** และ **รอบปั่น**) ถ้าจำเป็น
5. แตะไอคอน **เลือกการทำงาน** ที่มุมขวาล่าง จากนั้นเลือกตัวเลือกและเปลี่ยนการตั้งค่าตัวเลือก
6. แตะ **เริ่ม**

- เครื่องซักผ้ามีการตั้งค่าโปรแกรมเริ่มต้นและตัวเลือกที่สามารถใช้ได้สำหรับแต่ละโปรแกรม คุณสามารถใช้ค่าเริ่มต้นหรือเปลี่ยนแปลงการตั้งค่าของคุณ
- คุณสามารถเลือกโปรแกรมบนหน้าจอหลัก ปัดหน้าจอไปทางซ้ายเพื่อเปิดโปรแกรมถัดไป หากต้องการย้อนไปยังรายการก่อนหน้า ให้ปัดไปทางขวา

Untitled-47 27 2015-01-26 3:28:51

ภาพรวมของโปรแกรม

โปรแกรมมาตรฐาน

โปรแกรม	คำอธิบาย & น้ำหนักสูงสุด (กก.)	
ฟังก์ชั่นที่ชื่นชอบ	• เพิ่มการกำหนดค่าโปรแกรมปัจจุบันลงในรายการฟังก์ชั่นที่ชื่นชอบ และเข้าถึงการกำหนดค่าโปรแกรมได้อย่างรวดเร็วในภายหลัง คุณสามารถเพิ่มโปรแกรมที่กำหนดเองได้ถึง 4 โปรแกรม ซึ่งจะปรากฏที่รายการแรกของช่องของโปรแกรม	-
ฟังก์ชั่นใช้บ่อย	• โดยค่าเริ่มต้นแล้ว โปรแกรมที่ใช้บ่อยที่สุดจะปรากฏที่มุมซ้ายบนของหน้าจอหลัก	-
การซักประสิทธิภาพสูง	• การซักประสิทธิภาพสูง จะปรับปริมาณน้ำยาซักผ้าและรอบของโปรแกรมตามน้ำหนักผ้าและระดับความสกปรก เหมาะที่สุดสำหรับการใช้กับคุณสมบัติระบบจ่ายอัตโนมัติ	สูงสุด
ผ้าฝ้าย	• สำหรับผ้าฝ้าย ผ้าปูที่นอน ผ้าปูโต๊ะ ชุดชั้นใน ผ้าขนหนู หรือเสื้อเชิ้ต • เวลาในการซักและจำนวนรอบการล้างน้ำจะมีการปรับโดยอัตโนมัติตามน้ำหนัก	สูงสุด
ผ้าใยสังเคราะห์	• สำหรับเสื้อหรือเสื้อเชิ้ตที่ทำจากโพลีเอสเตอร์ (ไดโอเลน, เทรวิรา) โพลีอาไมด์ (เพอร์ลอน ไนลอน) หรือส่วนผสมอื่นๆ	5
ผ้ายีนส์	• ระดับน้ำที่สูงยิ่งขึ้นในการซักหลักและการล้างน้ำเพิ่มอีกหนึ่งรอบช่วยให้มั่นใจว่าจะไม่มีผงซักฟอกหลงเหลือ	3
ผ้าสีเข้ม	• การล้างน้ำเพิ่มเติมและการปั่นหมาดที่ลดความเร็วลงช่วยให้เสื้อผ้าได้รับการซักอย่างนุ่มนวลและล้างอย่างสะอาด	4
ซักด่วน	• ใช้ซักเสื้อผ้าที่ใช้ทุกวัน เช่น ชุดชั้นในและเสื้อเชิ้ตให้เสร็จภายใน 1 ชั่วโมงอย่างรวดเร็ว	5
ซักประหยัดพลังงาน	• เทคโนโลยีซักฟองแบบประหยัดจะช่วยลดการใช้พลังงาน ด้วยประสิทธิภาพของการซักด้วยอุณหภูมิต่ำ การซักประหยัดพลังงานจะเปรียบเทียบประสิทธิภาพการซักกับการประหยัดพลังงานกับโปรแกรมผ้าฝ้ายแบบทั่วไปที่ไม่ได้ใช้การซักฟองแบบประหยัด	4
ผ้ากีฬา ผ้าร่ม	• สำหรับเสื้อผ้าที่สวมใส่กลางแจ้ง ชุดเล่นสกี และชุดเล่นกีฬาที่ทำมาจากวัสดุสำหรับใช้งาน เช่น สแปนเด็กซ์ ผ้ายืด และไมโครไฟเบอร์	2
ชุดเด็กอ่อน	• การซักด้วยอุณหภูมิสูงและล้างน้ำมากเป็นพิเศษช่วยให้มั่นใจว่าจะไม่มีผงซักฟอกหลงเหลืออยู่	4
ผ้าขนสัตว์	• เหมาะสำหรับผ้าขนสัตว์ที่ซักด้วยเครื่องได้ มีน้ำหนักผ้าน้อยกว่า 2.0 กก. • โปรแกรมผ้าขนสัตว์มีการหมุนและการแช่ที่นุ่มนวลเพื่อป้องกันเส้นใยผ้าขนสัตว์เกิดการหดตัว/ผิดรูป • ขอแนะนำให้ใช้สารซักฟอกที่มีฤทธิ์เป็นกลาง	2
ถนอมผ้า	• สำหรับผ้าเนื้อบาง ชุดชั้นในสตรี ชุดชั้นใน (ผ้าไหม) และผ้าอื่นๆ ที่ต้องซักด้วยมือเท่านั้น • เพื่อประสิทธิภาพที่ดียิ่งขึ้น โปรดใช้น้ำยาซักผ้า	2
ผ้าปูที่นอน	• สำหรับผ้าปูที่นอน ผ้าคลุมเตียง หรือปลอกผ้านวม ฯลฯ • เพื่อให้ได้ผลลัพธ์ที่ดีที่สุด ให้ซักผ้าปูที่นอนเพียงประเภทเดียวเท่านั้นและน้ำหนักผ้าต้องไม่เกิน 2.5 กก.	2.5
รอบปั่น	• ปั่นหมาดเพิ่มเพื่อเอาน้ำออกให้หมด	-
ล้าง และ ปั่นหมาด	• ล้างน้ำเพิ่มเติมหลังจากเทน้ำยาปรับผ้านุ่มลงในผ้า	-

Untitled-47 28 2015-01-26 3:28:51

โปรแกรม	คำอธิบาย & น้ำหนักสูงสุด (กก.)	
ล้างถังซัก	• ทำความสะอาดถังซักด้วยการขจัดคราบสกปรกและแบคทีเรียออกจากถังซัก • ดำเนินการหนึ่งครั้งเมื่อซักครบ 40 ครั้งโดยไม่ต้องใส่ผงซักฟอกหรือสารฟอกขาว • ตรวจสอบว่าถังซักว่างเปล่า • โปรดอย่าใช้สารทำความสะอาดเพื่อทำความสะอาดถังซัก	-
ผ้าฝ้าย	• ประสิทธิภาพที่ดีที่สุดพร้อมกับใช้พลังงานน้อยลงสำหรับผ้าฝ้าย ผ้าปูที่นอน ผ้าปูโต๊ะ ชุดชั้นใน ผ้าขนหนู หรือเสื้อเชิ้ต	สูงสุด

โปรแกรมเฉพาะ

โปรแกรมเฉพาะหกโปรแกรมได้รับการออกแบบมาเพื่อขจัดคราบและสิ่งสกปรกบางประเภทได้อย่างมีประสิทธิภาพ ซึ่งคราบเหล่านี้อาจสะสมมาจากกิจกรรมบางอย่าง ตั้งแต่การทำงานบ้านไปจนถึงการปีนเขาอย่างมืออาชีพ

โปรแกรม	คำอธิบาย & น้ำหนักสูงสุด (กก.)	
ซักชุดทำครัว	• โปรแกรมนี้จะช่วยขจัดคราบอาหารและคราบจากการปรุงอาหารได้อย่างมีประสิทธิภาพ	4
ซักชุดทำสวน	• โปรแกรมนี้จะช่วยขจัดเศษหญ้าและคราบโคลน/ดิน และทำความสะอาดคราบเหงื่อและไขมันได้อย่างมีประสิทธิภาพ	4
Active Sports (ซักชุดกีฬา)	• โปรแกรมนี้จะช่วยขจัดเศษหญ้า คราบดิน โคลน คราบอาหารเล็กน้อย คราบเหงื่อ และเครื่องสำอางได้อย่างมีประสิทธิภาพ • ห้ามใช้โปรแกรมนี้สำหรับเสื้อผ้ากันน้ำ อาจทำให้ประสิทธิภาพในการกันน้ำหรือระบายอากาศเสียหาย	4
ซักชุดเด็ก	• โปรแกรม ซักชุดเด็ก เหมาะสำหรับเสื้อผ้าเด็กส่วนใหญ่ โปรแกรมนี้จะช่วยขจัดคราบอาหาร น้ำผลไม้ เครื่องดื่ม โคลน ดิน หมึก และดินสอสีได้อย่างมีประสิทธิภาพ	4
ซักชุดประจำวัน	• โปรแกรม ซักชุดประจำวัน เหมาะสำหรับผ้าที่เปื้อนเล็กน้อย โปรแกรมนี้จะขจัดคราบหมึกและรอยดินสอ และทำความสะอาดคราบสกปรกประจำวันได้อย่างมีประสิทธิภาพ	4
Hygiene Care (ซักสะอาด)	• โปรแกรมนี้จะช่วยขจัดคราบมันจากผิวหนังและรอยคราบเลือดได้อย่างมีประสิทธิภาพ	4

Untitled-47 29 2015-01-26 3:28:51

เลือกการทำงาน

ตัวเลือกที่ใช้ได้จะแตกต่างกันไปตามแต่ละโปรแกรม ตัวเลือกที่ไม่ใช้งานสำหรับโปรแกรมบางอย่างจะเป็นสีเทา

เลือกการทำงาน	คำอธิบาย
ซักเร็ว	• สำหรับเสื้อผ้าที่เปื้อนน้อย มีน้ำหนักผ้าน้อยกว่า 2 กก. • ใช้เวลาขั้นต่ำประมาณ 15 นาที ทั้งนี้จะขึ้นอยู่กับสภาพการทำงาน เช่น แรงดันน้ำ ความกระด้างของน้ำ และ/หรือตัวเลือกพิเศษที่เลือกไว้ • เวลาของตัวเลือก ซักเร็ว จะเพิ่มขึ้นตามลำดับดังนี้: ปิด > 15 นาที > 20 นาที > 30 นาที > 40 นาที > 50 นาที > 60 นาที • ปริมาณผงซักฟอกที่แนะนำคือน้อยกว่า 20 กรัม (สำหรับน้ำหนักผ้า 2 กก.)
แช่ผ้าก่อนซัก	• เพิ่มรอบการซักขั้นต้นก่อนรอบการซักหลัก
แช่ผ้า+	• ตัวเลือกนี้จะช่วยขจัดคราบได้อย่างมีประสิทธิภาพด้วยการแช่ผ้า • รอบการแช่ในแต่ละรอบจะหมุนถังซัก 1 นาทีและอยู่นิ่งๆ เป็นเวลา 4 นาที คุณสามารถตั้งเวลา แช่ผ้า + ได้ระหว่าง 30 นาทีถึง 150 นาที
ซักคราบฝังลึก	• สำหรับผ้าสกปรกมาก เวลาในการทำงานสำหรับแต่ละรอบจะยาวนานกว่าปกติ
โปรแกรมรีดง่าย	• ความเร็วในการปั่นจะลดลงเพื่อลดรอยยับ • ตั้งค่าความเร็วในการปั่นไว้ไม่เกิน 800 รอบต่อนาที
ตั้งเวลาสิ้นสุด	• เวลาที่ปรากฏจะหมายถึงเวลาสิ้นสุดของโปรแกรมที่เลือก

Untitled-47 30 2015-01-26 3:28:51

ตั้งเวลาสิ้นสุด

คุณสามารถตั้งค่าให้เครื่องซักผ้าทำงานด้วยโปรแกรมปัจจุบันให้เสร็จสิ้นในภายหลังตามเวลาที่กำหนด
ตัวเลือกนี้มีประโยชน์ถ้าคุณต้องการให้ซักเสร็จภายในเวลาที่คุณกลับมาจากการทำธุระนอกบ้าน

1. เลือกโปรแกรม จากนั้นเปลี่ยนการตั้งค่าโปรแกรมตามความจำเป็น
2. แตะไอคอน **เลือกการทำงาน** ที่มุมขวาล่าง
   จากนั้นเลือกตัวเลือกและเปลี่ยนการตั้งค่าตัวเลือก
3. แตะ **ตั้งเวลาสิ้นสุด**
4. ใช้ลูกศรเพื่อตั้งเวลาสิ้นสุดของโปรแกรมปัจจุบัน และแตะ **เริ่ม**

- หากต้องการยกเลิกตัวเลือก ให้แตะ **ยกเลิก** และย้อนกลับสู่หน้าจอตัวเลือก

กรณีการใช้งาน

ในอีก 3 ชั่วโมง คุณต้องการโปรแกรมซักสองชั่วโมงดำเนินการเสร็จ เพื่อให้มีการทำงานดังนี้ คุณจึงเพิ่มตัวเลือก ตั้งเวลาสิ้นสุด ให้กับโปรแกรมปัจจุบันที่มีการตั้งค่า 3 ชั่วโมง และกดปุ่ม เริ่ม/พัก เมื่อเวลา 14:00 น. จากนั้นจะเกิดอะไรขึ้น เครื่องซักผ้าเริ่มจะทำงานในเวลา 15:00 น. และสิ้นสุดในเวลา 17:00 น. ตามตัวอย่างช่วงเวลาด้านล่างนี้

Untitled-47 31 2015-01-26 3:28:51

การตั้งค่า

ล็อคป้องกันเด็ก

เพื่อเป็นการป้องกันการเกิดอุบัติเหตุกับเด็ก ล็อคป้องกันเด็ก จะล็อคทุกปุ่ม ยกเว้นปุ่ม **การตั้งค่า**

คุณสามารถเข้าถึงเมนู ล็อคป้องกันเด็ก จากหน้าจอ การตั้งค่า หรือแถบแผงควบคุมด่วน

- หากต้องการตั้งค่า ล็อคป้องกันเด็ก ให้แตะ **การตั้งค่า** แล้วแตะปุ่ม **ล็อคป้องกันเด็ก**
- ในการใช้ ล็อคป้องกันเด็ก ให้กดปุ่ม **เปิดใช้งาน** ค้างไว้ 3 วินาที
- ในการปิดการ ล็อคป้องกันเด็ก ชั่วคราว ให้กดปุ่ม **ปิดใช้งานชั่วคราว** ค้างไว้ 3 วินาที
- ในการปิดการ ล็อคป้องกันเด็ก อย่างถาวร ให้กดปุ่ม **ปิดใช้งาน** ค้างไว้ 3 วินาที

- หากต้องการเพิ่มผงซักฟอกหรือผ้าลงในถังซัก หรือเปลี่ยนการตั้งค่าโปรแกรมเมื่ออยู่ในสถานะ ล็อคป้องกันเด็ก คุณต้องหยุดหรือปลด ล็อคป้องกันเด็ก ก่อน
- ระบบจะเปิดใช้งาน ล็อคป้องกันเด็ก อีกครั้งในอีกหนึ่งนาทีหลังจากที่หยุดไว้ชั่วคราว

ไฟของถัง

- หากต้องการเปิดหรือปิด ไฟของถัง ให้แตะ **การตั้งค่า** และเลื่อนแถบ **ไฟของถัง** ไปที่ **เปิด** หรือ **ปิด**
- ไฟของถังจะปิดโดยอัตโนมัติหลังผ่านไป 5 นาที

ระบบจ่ายอัตโนมัติ

เครื่องซักผ้ามีช่องจ่ายสองช่อง: ช่องหนึ่งสำหรับน้ำยาซักผ้า และอีกช่องสำหรับน้ำยาปรับผ้านุ่ม อุปกรณ์ระบบจ่ายอัตโนมัติจะจ่ายผงซักฟอกและน้ำยาปรับผ้านุ่มลงถังซักในปริมาณที่เหมาะสมตามโปรแกรมและรอบการทำงาน

วิธีเปิดใช้งานระบบจ่ายอัตโนมัติ

1. แตะ **การตั้งค่า > ระบบจ่ายอัตโนมัติ**
2. เลื่อนแถบ **เติมน้ำยาซักผ้าอัตโนมัติ** ไปที่ **เปิด** และตั้งค่า **ปริมาณ** และ **ความกระด้างของน้ำ**
3. เลื่อนแถบ **เติมน้ำยาปรับผ้านุ่มอัตโนมัติ** ไปที่ **เปิด** และตั้งค่า **ปริมาณ** และ **ความเข้มข้น**
4. แตะ **บันทึก**

ความสว่าง

ตั้งค่าความสว่างของหน้าจอ LCD

- แตะ **การตั้งค่า** และแตะสัญลักษณ์ (-/+) เพื่อเพิ่มหรือลดระดับความสว่าง

ธีมเสียง

ตั้งค่าระดับเสียงและเสียงดนตรีของสัญญาณเตือน

1. แตะ **การตั้งค่า > ธีมเสียง**
2. หากต้องการปรับระดับเสียง ให้แตะสัญลักษณ์ (-/+) เพื่อเพิ่มหรือลดระดับเสียง
3. หากต้องการเลือกเสียงดนตรีของสัญญาณเตือน ให้แตะธีมในรายการ

Untitled-47 32 2015-01-26 3:28:51

วันที่ & เวลา

เวลาเริ่มต้นจะตั้งไว้ในรูปแบบ 12 ชั่วโมง

1. แตะ **การตั้งค่า > วันที่ & เวลา**
2. แตะลูกศรเพื่อเปลี่ยนเวลาสำหรับส่วนของเวลาแต่ละส่วน ตัวอย่างเช่น หากต้องการเปลี่ยนวันที่ ให้ใช้ลูกศรข้างบนและข้างล่างส่วนของวันที่
3. หากต้องการสลับระหว่างส่วน **AM** และ **PM** ให้แตะส่วนที่เกี่ยวข้อง
4. แตะ **บันทึก**

ภาษา

เลือกภาษาของเมนูตามต้องการ

- แตะ **การตั้งค่า > ภาษา** และเลือกภาษาของเมนูตามต้องการ

เครือข่าย

ตั้งค่าอัตโนมัติ

เครื่องซักผ้าสนันสนุนโปรโตคอล Wi-Fi ของ WEP, TKIP และ AES แต่จะไม่สนับสนุนเราเตอร์ (AP)

1. แตะ **การตั้งค่า > เครือข่าย** และเลื่อนแถบ **เครือข่าย** ไปที่ **เปิด** รายการ AP จะปรากฏขึ้น
2. แตะผู้ให้บริการเครือข่าย และระบุรหัสผ่าน ในกรณีที่ระบบสอบถาม
3. แตะ **ตกลง** เมื่อดำเนินการสำเร็จ ระบบจะทำเครื่องหมายไว้ที่ผู้ให้บริการเครือข่ายที่เลือก

ตั้งค่าด้วยตนเอง

1. เปิดใช้งานการเชื่อมต่อ Wi-Fi ตามที่ระบุไว้ข้างต้น
2. แตะ **ตั้งค่า IP Address > ตั้งค่าด้วยตนเอง**
3. ระบุ ที่อยู่ IP Address, เครือข่ายย่อย ซับเน็ตมาสก์, ช่องทางผ่าน เกตเวย์ และ DNS แล้วแตะ **ตกลง**

การเชื่อมต่อ Wi-Fi

เมื่อสร้างการเชื่อมต่อเครือข่าย ในครั้งถัดไปที่คุณต้องการเปิดหรือปิดการเชื่อมต่อ Wi-Fi ให้เลื่อนแถบ **เครือข่าย** ไปที่ **เปิด** หรือ **ปิด**

การเชื่อมต่อแบบง่าย

การเชื่อมต่อแบบง่าย จะช่วยให้คุณสามารถกำหนดค่าการตั้งค่าเครือข่ายได้อย่างง่ายดาย รวมถึงกระบวนการตรวจสอบสิทธิ์

Untitled-47 33 2015-01-26 3:28:51

ระบบควบคุมอัจฉริยะ

คุณสามารถใช้ ระบบควบคุมอัจฉริยะ เพื่อควบคุมเครื่องซักผ้าจากอุปกรณ์เคลื่อนที่ของคุณ แตะไอคอนนี้เพื่อเปิดหรือปิดฟังก์ชั่น ระบบควบคุมอัจฉริยะ

1. แตะ **การตั้งค่า** > เลื่อนแถบ **ระบบควบคุมอัจฉริยะ** ไปที่ **เปิด**
2. กลับไปที่หน้าจอหลัก ระบบควบคุมอัจฉริยะเปิดใช้งานอยู่
3. แตะ **ปิดการใช้งาน** เพื่อปิดฟังก์ชัน ระบบควบคุมอัจฉริยะจะปิดการทำงาน

- ไอคอนจะเป็นสีเทาถ้าไม่ได้เปิดใช้งาน ระบบควบคุมอัจฉริยะ
- การปรับ เช่น การแตะไอคอนหรือการกดปุ่มบนเครื่องซักผ้า จะถือเป็นการปิดใช้งาน ระบบควบคุมอัจฉริยะ
- ถ้าไม่ได้เชื่อมต่อเครือข่ายไร้สายไว้ ระบบควบคุมอัจฉริยะจะใช้ไม่ได้
- เลือกวิธีการเชื่อมต่อกับอุปกรณ์ภายนอกเมื่อแตะที่ ระบบควบคุมอัจฉริยะ

ระบบตรวจสอบพลังงานและน้ำที่ใช้ หลังการซัก

ประสิทธิภาพของพลังงาน/น้ำของโปรแกรมล่าสุด 4 โปรแกรมจะปรากฏขึ้นพร้อมด้วยข้อมูลสรุปทางเทคนิคของการใช้พลังงาน ระดับน้ำ การตั้งค่าโปรแกรม และตัวเลือก

1. แตะ **การตั้งค่า** > **ระบบตรวจสอบพลังงานและน้ำที่ใช้ หลังการซัก** หน้าจอข้อมูลสรุปของโปรแกรมล่าสุด 4 โปรแกรมจะปรากฏขึ้น
2. แตะโปรแกรมเพื่อแสดงข้อมูลสรุปทางเทคนิคของโปรแกรมที่เลือก

ระบบตรวจสอบการทำงาน

เครื่องซักผ้าจะวินิจฉัยด้วยตัวเองเกี่ยวกับระบบในปัจจุบัน ข้อผิดพลาดในการทำงานและปัญหาของเครื่องจะปรากฏบนหน้าจอผลลัพธ์

- แตะ **การตั้งค่า** > **ระบบตรวจสอบการทำงาน** > **เริ่ม**

การเทียบค่า

การเทียบค่า จะช่วยให้เครื่องซักผ้าสามารถตรวจหาน้ำหนักที่ถูกต้อง โปรดตรวจสอบว่าถังซักว่างเปล่าก่อนเรียกใช้ การเทียบค่า

1. แตะ **การตั้งค่า** > **การเทียบค่า** > **เริ่ม**
    - ประตูจะถูกล็อคในระหว่างการทำงาน
    - ถังซักจะหมุนตามเข็มนาฬิกาและทวนเข็มนาฬิกาอย่างต่อเนื่องเป็นเวลาหลายนาที
2. เมื่อดำเนินการเสร็จ เครื่องซักผ้าจะปิดระบบโดยอัตโนมัติ

Untitled-47 34 2015-01-26 3:28:51

อัพเดท

เมื่อมีการอัพเดท การแจ้งเตือนการอัพเดทจะปรากฏบนหน้าจอ

หากต้องการตรวจสอบเวอร์ชั่นปัจจุบันของเฟิร์มแวร์

1. แตะ **การตั้งค่า** > **อัพเดท** เพื่อแสดงเวอร์ชั่นปัจจุบันของเฟิร์มแวร์
2. หากต้องการอัพเดทเฟิร์มแวร์ด้วยตนเอง ให้แตะ **อัพเดท**

หากต้องการอัพเดทเฟิร์มแวร์โดยอัตโนมัติ

1. แตะ **อัพเดทอัตโนมัติ** ในหน้าจอ **การตั้งค่า**
2. เลื่อนแถบ **อัพเดทอัตโนมัติ** ไปที่ **เปิด** การอัพเดทจะดำเนินการโดยไม่มีการแจ้งเตือนเมื่อมีการอัพเดทที่ใช้ได้

คำเตือน

ห้ามถอดปลั๊กสายไฟของเครื่องซักผ้าหรือเราเตอร์ระหว่างการอัพเดท

วิธีใช้

โปรดดูคู่มือผู้ใช้สำหรับการใช้งานผลิตภัณฑ์ และตรวจสอบส่วนการแก้ไขปัญหากับปัญหา

- แตะ **การตั้งค่า** > **วิธีใช้**

Untitled-47 35 2015-01-26 3:28:51

Samsung Mobile Smart Control

เครื่องซักผ้านี้มีแอปควบคุมผ่านอุปกรณ์เคลื่อนที่สองชนิดด้วยกันที่คุณสามารถใช้ควบคุมเครื่องผ่านการเชื่อมต่อเครือข่าย

แอปอุปกรณ์เคลื่อนที่ที่ใช้กับคุณสมบัติ Smart Control ของเครื่องซักผ้า Samsung Smart Washer

Samsung Smart Home

ด้วย แอป Samsung Smart Home ที่ออกแบบใหม่ คุณสามารถเข้าถึงเครื่องซักผ้าขณะที่คุณเดินทาง และควบคุมหรือตรวจสอบสถานะการทำงานของเครื่องได้

ดาวน์โหลดแอป “**Samsung Smart Home**” จาก Play Store หรือ Apple Store และติดตั้งในโทรศัพท์เคลื่อนที่ของคุณ

Samsung Smart Washer

แอป Samsung Smart Washer ช่วยให้คุณสามารถควบคุมการทำงานของเครื่องซักผ้าทางอุปกรณ์เคลื่อนที่ได้สองแบบด้วยกัน: ในอาคารและกลางแจ้ง

ดาวน์โหลดแอป “**Samsung Smart Washer**” จาก Play Store หรือ Apple Store และติดตั้งในโทรศัพท์เคลื่อนที่ของคุณ

การตั้งค่า Smart Control ที่เครื่องซักผ้า

ในการเปิดใช้คุณสมบัติ Smart Control ให้เลือกวิธีการเชื่อมต่อกับแอปของอุปกรณ์เคลื่อนที่

แตะที่ไอคอน Setup จากนั้นเลือก Smart Control ในเมนูเครือข่าย

1. เลือกวิธีการเชื่อมต่อสำหรับแอปของอุปกรณ์เคลื่อนที่

2. เลือก “Samsung Smart Home” ถ้าคุณต้องการควบคุมเครื่องซักผ้าผ่านแอปในตัวของ Samsung

   เลือก “Samsung Smart Washer” ถ้าคุณต้องการควบคุมเครื่องซักผ้าผ่านแอปเครื่องซักผ้าของ Samsung

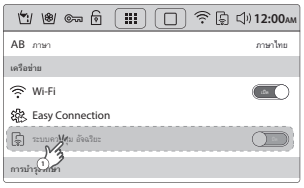

3. เมื่อตั้งค่าเสร็จ การเปลี่ยนแปลงจะมีผลและคุณอาจต้องเชื่อมต่อใหม่

- Samsung Smart Home (ค่าเริ่มต้น)
- Samsung Smart Washer

- โดยค่าเริ่มต้น ผลิตภัณฑ์นี้จะใช้ แอป Samsung Smart Home ที่ออกแบบใหม่เป็นวิธีการเชื่อมต่อ ซึ่งเป็นตัวเลือกที่แนะนำ
- สำหรับ iPhone แอป Samsung Smart Home มีกำหนดการเปิดให้ใช้งานได้ที่ Apple Store ในช่วงปลายปี 2014
- ในบางประเทศ แอป Samsung Smart Home อาจไม่มีให้บริการ ในกรณีนี้ โปรดใช้ แอป Samsung Smart Washer แทน

Untitled-47 36 2015-01-26 3:28:52

แอปพลิเคชัน Samsung Smart Home

เมื่อใช้แอป Samsung Smart Home โปรดตรวจสอบว่าได้เลือก “**Samsung Smart Home**” ไว้ในเมนู Setup

แอปพลิเคชัน Samsung Smart Home จะช่วยให้คุณสามารถเข้าถึงและควบคุมเครื่องซักผ้าได้ในขณะที่ไม่อยู่บ้าน

การติดตั้ง

1. เข้าสู่ Google Play Store สำหรับอุปกรณ์ Android หรือ Apple App Store สำหรับอุปกรณ์ iOS และค้นหา Samsung Smart Home เพื่อเลือก
2. ดาวน์โหลดและติดตั้งแอปพลิเคชัน Samsung Smart Home ในอุปกรณ์เคลื่อนที่ของคุณ

- แอปพลิเคชัน Samsung Smart Home สนับสนุน Android OS 4.0 (ICS) หรือหลังจากนั้นที่ปรับให้เหมาะสมกับสมาร์ทโฟน Samsung (Galaxy S และ Galaxy Note ซีรี่ส์) ฟังก์ชันบางอย่างของแอปพลิเคชันนี้อาจทำงานต่างออกไปในอุปกรณ์อื่น
- แอปพลิเคชันนี้สนับสนุน iOS 7 ขึ้นไปสำหรับ iPhone รุ่นต่างๆ
- เพื่อให้มีประสิทธิภาพสูงสุด การออกแบบส่วนติดต่อของแอปพลิเคชันนี้อาจมีการเปลี่ยนแปลงโดยไม่ได้แจ้งให้ทราบ
- สำหรับรุ่น iPhone แอปพลิเคชันนี้มีกำหนดออกเผยแพร่ในช่วงปลายปี 2014 ที่ Apple App Store

การจัดเตรียม

1. ในการเปิดใช้งานแอปพลิเคชันนี้ คุณจะต้องป้อนบัญชี Samsung ของคุณ คุณจะได้รับคำแนะนำในการสร้างบัญชี Samsung ในแอปพลิเคชันโดยตรง ถ้ายังไม่มีบัญชี การดำเนินการนี้ไม่จำเป็นต้องใช้แอปพลิเคชันอื่น
2. ในการเปิดใช้งานแอปพลิเคชัน ขั้นแรกให้ลงทะเบียนเครื่องซักผ้ากับบริการ Samsung Smart Home
   1) เลือกเครื่องซักผ้าในรายการอุปกรณ์ของแอปพลิเคชัน Samsung Smart Home
   2) ป้อนข้อมูลที่จำเป็นเกี่ยวกับ AP ไร้สายที่คุณใช้สำหรับการเชื่อมต่อไร้สาย
   3) ปฏิบัติตามคำแนะนำบนหน้าจอเพื่อกำหนดค่าสำหรับเครื่องซักผ้า
   4) บนเครื่องซักผ้า ให้เลือก **การตั้งค่า > การเชื่อมต่อแบบง่าย** เพื่อกำหนดค่าเครือข่าย
   5) เมื่อดำเนินการเสร็จ คุณจะเห็นไอคอนเครื่องซักผ้าในแอปพลิเคชัน

ข้อควรระวัง

- เราเตอร์ Wi-Fi ที่ไม่ผ่านการรับรองอาจไม่สามารถเชื่อมต่อได้
- ถ้ามีการติดตั้งเครื่องซักผ้าหรือ AP ใกล้กับเตาไมโครเวฟหรือเครื่องเป่าผม Smart Control อาจไม่ทำงานอย่างถูกต้อง เนื่องจากการรบกวนสัญญาณ
- เครื่องซักผ้าสนับสนุนเฉพาะโปรโตคอล Wi-Fi 2.4Ghz
- สภาพแวดล้อมอาจมีผลกับประสิทธิภาพของเครือข่ายไร้สาย

- ถ้าคุณเรียกใช้แอปพลิเคชันโดยไม่เข้าสู่ระบบ คุณจะพบหน้าจอ Account guidance (คำแนะนำของบัญชี) เมื่อเข้าสู่ระบบแล้ว คุณจะสามารถเปลี่ยนการตั้งค่าบัญชีได้ใน **Settings (การตั้งค่า) > Account (บัญชี)**
- ผู้ใช้ สมาร์ทโฟนของ Samsung จะสามารถเข้าสู่ระบบของแอปพลิเคชันโดยอัตโนมัติเมื่อลงทะเบียนบัญชีใน **Settings (การตั้งค่า)**

Untitled-47 37 2015-01-26 3:28:52

การใช้แอปพลิเคชัน Samsung Smart Home

คุณสมบัติหลัก

- **การควบคุมอุปกรณ์ Samsung Smart Appliances อย่างครบวงจร**

  ลงทะเบียนอุปกรณ์สมาร์ท Samsung ของคุณกับบริการ Samsung Smart Home เพื่อให้สามารถใช้งานได้อย่างสะดวก เลือกไอคอนเครื่องซักผ้าในแอปพลิเคชันเพื่อเข้าถึงคุณสมบัติหลักของเครื่องซักผ้าได้แม้ขณะเดินทาง

- **Master key (มาสเตอร์คีย์)**

  มาสเตอร์คีย์ประกอบด้วย 4 โหมด: Going out (ออกนอกบ้าน), Coming home (กลับบ้าน), Good night (ราตรีสวัสดิ์) และ Good morning (อรุณสวัสดิ์)

- **Chat controls (ควบคุมการแชท)**

  แชทระหว่างอุปกรณ์สมาร์ทและรับข้อมูลเพื่อควบคุมอุปกรณ์

- **Home monitoring (ตรวจติดตามบ้าน)**

  ใช้กล้องในตัวของอุปกรณ์สมาร์ทเพื่อตรวจติดตามห้องนั่งเล่นได้ขณะที่เดินทาง

- **Customer support (บริการลูกค้า)**

  ดาวน์โหลดคู่มือผลิตภัณฑ์หรือขอรับบริการซ่อมบำรุง

คุณสมบัติบางอย่างของบริการนี้อาจไม่มีให้กับเครื่องซักผ้า

แอปพลิเคชัน Samsung Smart Home Washing Machine

ควบคุมและติดตามเครื่องซักผ้าทั้งขณะอยู่บ้านและขณะเดินทาง

1. ลงทะเบียนเครื่องซักผ้ากับแอปพลิเคชัน Samsung Smart Home
2. ในการใช้งานระยะไกล ให้เปิด ระบบควบคุมอัจฉริยะ ที่เครื่องซักผ้า
3. เลือกไอคอนเครื่องซักผ้าที่อุปกรณ์เคลื่อนที่ และแตะ **Start (เริ่ม)**

Samsung Smart Home

ผลิตภัณฑ์นี้เป็นเครื่องซักผ้าแบบสมาร์ทที่สนับสนุนบริการ Samsung Smart Home

สำหรับข้อมูลเพิ่มเติม โปรดไปที่ www.samsung.com

Untitled-47 38 2015-01-26 3:28:52

แอปพลิเคชั่น Samsung Smart Washer

เมื่อใช้แอป Samsung Smart Washer โปรดตรวจสอบว่าได้เลือก “**Samsung Smart Washer**” ไว้ในเมนู Setup

แอปพลิเคชั่น Samsung Smart Washer จะช่วยให้คุณสามารถควบคุมฟังก์ชั่นบางอย่างของเครื่องซักผ้าจากอุปกรณ์เคลื่อนที่ของคุณ

ดาวน์โหลด

1. ค้นหา Samsung Smart Washer ที่ Play Store หรือ Apple Store
2. ดาวน์โหลดและติดตั้งแอปพลิเคชั่นบนอุปกรณ์เคลื่อนที่
3. เรียกใช้แอปพลิเคชั่น Samsung Smart Washer บนอุปกรณ์เคลื่อนที่ของคุณ

เชื่อมต่อกับเครื่องซักผ้า

ต้องเชื่อมต่อเครื่องซักผ้ากับเครือข่าย Wi-Fi

การควบคุมภายในอาคาร

หากต้องการเปิดใช้งานโหมดนี้ ต้องเชื่อมต่ออุปกรณ์เคลื่อนที่กับเครือข่ายเดียวกับเครื่องซักผ้า

1. แตะ **การควบคุมภายในอาคาร** บนอุปกรณ์เคลื่อนที่เพื่อแสดงรายการรุ่นของเครื่องซักผ้าที่สามารถใช้ได้
2. แตะชื่อรุ่นของเครื่องซักผ้าเพื่อเชื่อมต่อ แล้วแตะ **ตกลง** หน้าต่างการตรวจสอบสิทธิ์จะปรากฏขึ้น
3. แตะ **การตั้งค่า** บนเครื่องซักผ้า และเลื่อนแถบ **ระบบควบคุมอัจฉริยะ** ไปที่ **เปิด** กระบวนการตรวจสอบสิทธิ์จะเริ่มต้นขึ้น

ต้องมีการตรวจสอบสิทธิ์สำหรับการใช้งานครั้งแรก โดยจะดำเนินการเพียงครั้งเดียว

การควบคุมกลางแจ้ง

หากต้องการเปิดใช้งานโหมดนี้ ต้องลงทะเบียนเครื่องซักผ้าในเว็บไซต์ **Samsung Smart Appliance** (www.samsungsmartappliance.com)

1. แตะ **การตั้งค่า** บนเครื่องซักผ้า และเลื่อนแถบ **ระบบควบคุมอัจฉริยะ** ไปที่ **เปิด**
2. แตะ **การควบคุมกลางแจ้ง** บนอุปกรณ์เคลื่อนที่ และระบุข้อมูลประจำตัวสำหรับการเข้าสู่ระบบ
   รายการอุปกรณ์ที่ลงทะเบียนไว้จะปรากฏขึ้น
3. แตะอุปกรณ์ที่คุณต้องการควบคุมจากรายการ ในขณะนี้ การเชื่อมต่อระยะไกลจะเริ่มต้นขึ้นโดยอัตโนมัติระหว่างเครื่องซักผ้าและอุปกรณ์เคลื่อนที่

ไม่จำเป็นต้องมีการตรวจสอบสิทธิ์

Untitled-47 39 2015-01-26 3:28:52

การลงทะเบียน

ลงทะเบียนเครื่องซักผ้าในเว็บไซต์ Samsung Smart Appliance (www.samsungsmartappliance.com) และรับการเข้าถึงเครื่องซักผ้าจากระยะไกล ต้องเชื่อมต่อเครื่องซักผ้ากับเครือข่าย Wi-Fi

1. ไปที่เว็บไซต์ **Samsung Smart Appliance** (www.samsungsmartappliance.com)
2. ระบุข้อมูลประจำตัวสำหรับบัญชี Samsung เพื่อเข้าสู่ระบบ ถ้าเป็นผู้ใช้ที่ไม่เคยลงทะเบียนไว้ ให้คลิก สร้างบัญชี Samsung และดำเนินการตามคำแนะนำบนหน้าจอ
3. คลิก **My Page (หน้าของฉัน) > Add device (เพิ่มอุปกรณ์)** และระบุ MAC address ของเครื่องซักผ้า
   หากต้องการตรวจสอบ MAC address ให้แตะ **การตั้งค่า > เครือข่าย** บนเครื่องซักผ้า
4. คลิก **Get Approval (รับการอนุมัติ)**
5. แตะ **การตั้งค่า** บนเครื่องซักผ้า และแตะ **ตกลง** ถ้าระบบสอบถามให้รับการอนุมัติ
   เครื่องซักผ้าที่ลงทะเบียนจะปรากฏในรายการอุปกรณ์ของเว็บไซต์

Samsung Electronics ประกาศ ณ ที่นี้ว่าเครื่องซักผ้านี้เป็นไปตามข้อกำหนดอันเป็นสาระสำคัญและข้อบัญญัติอื่นๆ ที่เกี่ยวข้องของข้อบังคับ 1999/5/EC

คำประกาศความสอดคล้องอย่างเป็นทางการมีอยู่ที่ http://www.samsung.com ไปที่ การสนับสนุน > ค้นหาการสนับสนุนผลิตภัณฑ์และป้อนชื่อรุ่น

อุปกรณ์โทรคมนาคมนี้สอดคล้องกับข้อกำหนดด้านเทคนิคของ NTC

Untitled-47 40 2015-01-26 3:28:52

การบำรุงรักษา

โปรดรักษาให้เครื่องซักผ้าสะอาดอยู่เสมอเพื่อป้องกันประสิทธิภาพลดลงและเพื่อให้มีอายุการใช้งานที่ยาวนาน

ล้างถังซัก

โปรดใช้โปรแกรมนี้เป็นประจำเพื่อล้างถังซักและกำจัดแบคทีเรียออก

1. แตะ **โปรแกรม** > **ล้างถังซัก**
2. เลื่อนไปยังหน้าจอหลัก และแตะ **เริ่ม**

อุณหภูมิของน้ำสำหรับ ล้างถังซัก มีการตั้งค่าไว้ที่ 70 °C ซึ่งจะไม่สามารถเปลี่ยนแปลงได้

ข้อควรระวัง

โปรดอย่าใช้สารทำความสะอาดเพื่อทำความสะอาดถังซัก สารเคมีตกค้างในถังซักจะทำให้ประสิทธิภาพในการซักลดลง

การเตือนของโปรแกรมล้างถังซัก

- การเตือนของโปรแกรม ล้างถังซัก จะปรากฏบนหน้าจอหลักหนึ่งครั้งเมื่อซักครบ 40 ครั้ง ขอแนะนำให้ใช้โปรแกรม ล้างถังซัก เป็นประจำ
- เมื่อคุณเห็นการเตือนนี้เป็นครั้งแรก คุณสามารถไม่รับการเตือน (สูงสุด 6 ครั้ง) ด้วยการแตะ **แจ้งเตือนในภายหลัง** ตั้งแต่การซักครั้งที่ 7 เป็นต้นไป การแจ้งเตือนจะไม่ปรากฏอีก แต่จะปรากฏอีกครั้งเมื่อซักครบ 40 ครั้งเป็นรอบที่สอง

Untitled-47 41 2015-01-26 3:28:52

ท่อทิ้งน้ำฉุกเฉิน

ในกรณีที่เกิดไฟฟ้าดับ ให้ระบายน้ำภายในถังซักก่อนนำผ้าออก

1. ถอดปลั๊กสายไฟของเครื่องซักผ้าออกจากเต้ารับหลัก
2. ค่อยๆ กดบริเวณด้านบนของที่ปิดตัวกรองเพื่อเปิด

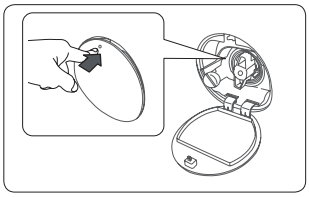

3. ค่อยๆ ดึงท่อทิ้งน้ำฉุกเฉินออกมา

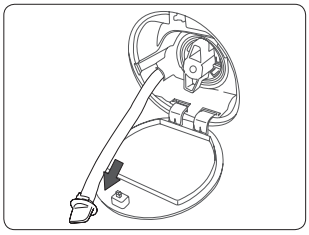

4. ในขณะที่ถือส่วนปลายของท่อทิ้งน้ำ ให้เปิดฝาปิดท่อ

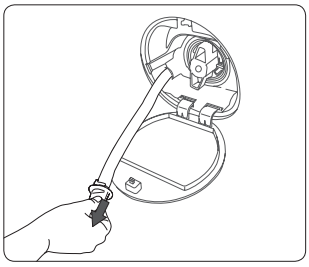

5. ปล่อยให้น้ำไหลลงสู่ภาชนะ
6. ปิดฝาปิดท่อและใส่ท่อทิ้งน้ำกลับเข้าที่
7. ปิดที่ปิดตัวกรอง

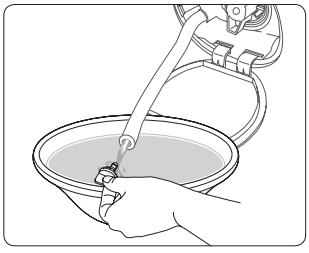

Untitled-47 42 2015-01-26 3:28:52

การทำความสะอาด

พื้นผิวของเครื่องซักผ้า

ใช้ผ้านุ่มเช็ดที่มีน้ำยาทำความสะอาดที่ไม่มีสารขัดถู ห้ามฉีดน้ำลงบนเครื่องซักผ้า

ตะแกรงตัวกรอง

ทำความสะอาดตะแกรงตัวกรองของท่อจ่ายน้ำหนึ่งหรือสองครั้งต่อปี

1. ปิดเครื่องซักผ้า และถอดปลั๊กสายไฟ
2. ปิดก๊อกน้ำ
3. คลายและปลดท่อจ่ายน้ำจากด้านหลังของเครื่องซักผ้า หุ้มท่อด้วยผ้าเพื่อป้องกันน้ำไหลออก

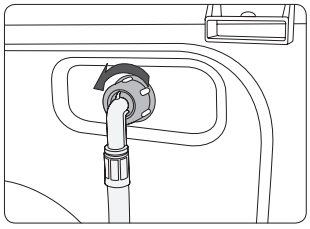

4. ใช้คีมเพื่อดึงตะแกรงตัวกรองออกจากช่องวาล์วน้ำเข้า
5. จุ่มตะแกรงตัวกรองลงในน้ำให้มิดเพื่อให้ข้อต่อที่เป็นเกลียวจมน้ำด้วย
6. ตากตะแกรงตัวกรองให้แห้งสนิทภายในร่ม
7. ใส่ตะแกรงตัวกรองกลับเข้าไปในท่อจ่ายน้ำ และวางท่อจ่ายน้ำไว้ในตำแหน่งเดิม
8. เปิดก๊อกน้ำ

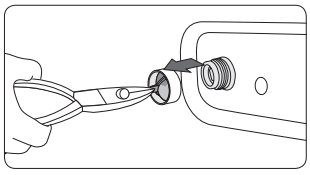

ถ้าตะแกรงตัวกรองอุดตัน รหัสข้อผิดพลาด “**4E**” จะปรากฏบนหน้าจอ

Untitled-47 43 2015-01-26 3:28:53

ตัวกรอง

ขอแนะนำให้ทำความสะอาดตัวกรอง 5 หรือ 6 ครั้งต่อปีเพื่อป้องกันการอุดตัน ตัวกรองที่อุดตันอาจลดประสิทธิภาพของการซักฟอก

1. ปิดเครื่องซักผ้า และถอดปลั๊กสายไฟ
2. ระบายน้ำที่เหลืออยู่ภายในถังซักออก โดยดูที่ "**ท่อทิ้งน้ำฉุกเฉิน**" ในหน้า **42**
3. เปิดที่ปิดตัวกรองโดยใช้เหรียญหรือกุญแจ
4. หมุนฝาปิดตัวกรองไปทางซ้าย และระบายน้ำที่เหลืออยู่ออกให้หมด
5. ถอดตัวกรองออก

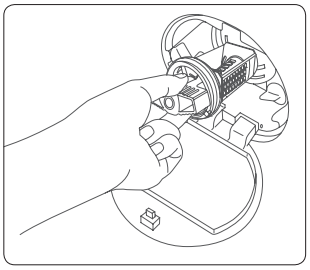

6. ทำความสะอาดตัวกรองโดยใช้แปรงขนนุ่ม ตรวจสอบว่าใบพัดของปั๊มน้ำทิ้งภายในตัวกรองไม่อุดตัน
7. ใส่ตัวกรองกลับเข้าที่ และหมุนฝาปิดตัวกรองไปทางขวา

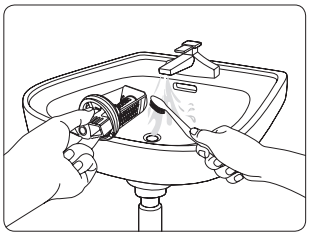

- หากต้องการเปิดฝาปิดตัวกรองอย่างปลอดภัย ให้ดันเข้าและหมุนทวนเข็มนาฬิกา สปริงของฝาปิดจะทำให้สามารถเปิดฝาได้
- หากต้องการปิดฝาปิดตัวกรองอย่างปลอดภัย ให้หมุนตามเข็มนาฬิกา สปริงจะมีเสียงกริ๊กๆ ซึ่งเป็นการทำงานปกติ

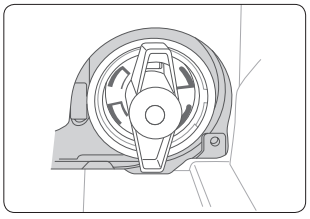

- ถ้าตัวกรองอุดตัน รหัสข้อผิดพลาด "**5E**" จะปรากฏบนหน้าจอ

ข้อควรระวัง

- โปรดปิดฝาปิดตัวกรองอย่างเหมาะสมหลังจากทำความสะอาดตัวกรอง มิฉะนั้นอาจทำให้เกิดน้ำรั่ว
- โปรดใส่ตัวกรองอย่างเหมาะสมหลังจากทำความสะอาดตัวกรอง มิฉะนั้นตัวกรองอาจไม่ทำงานหรืออาจทำให้เกิดน้ำรั่ว

Untitled-47 44 2015-01-26 3:28:53

อุปกรณ์ระบบจ่ายอัตโนมัติ

ต้องทำความสะอาดอุปกรณ์ระบบจ่ายอัตโนมัติเป็นประจำเพื่อให้แน่ใจว่าจะสามารถทำงานได้อย่างเหมาะสมตลอดเวลา

1. ถอดอุปกรณ์ระบบจ่ายอัตโนมัติออกจากเครื่องซักผ้า

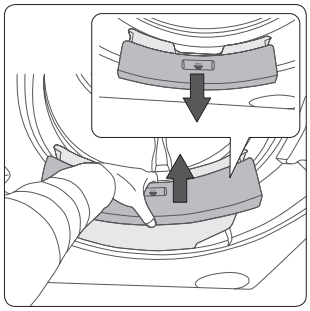

2. เช็ดช่องของอุปกรณ์ระบบจ่ายอัตโนมัติโดยใช้ผ้าแห้ง

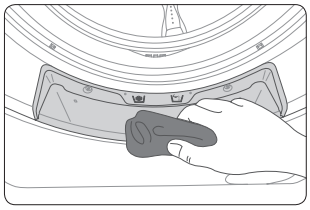

3. ถอดปุ่มบิดสองปุ่มของอุปกรณ์ระบบจ่ายอัตโนมัติออก และถอดฝาปิดสองฝาที่ด้านล่างด้วย แล้วปล่อยน้ำไหลผ่านอุปกรณ์ระบบจ่ายอัตโนมัติเพื่อทำความสะอาดบริเวณด้านใน ห้ามเขย่าอุปกรณ์ระบบจ่ายอัตโนมัติเนื่องจากน้ำอาจกระเซ็นจากช่องของอุปกรณ์ระบบจ่ายอัตโนมัติ
4. ใส่ปุ่มบิดและฝาปิดกลับเข้าที่เดิม
5. ใส่อุปกรณ์ระบบจ่ายอัตโนมัติกลับเข้าที่เดิม

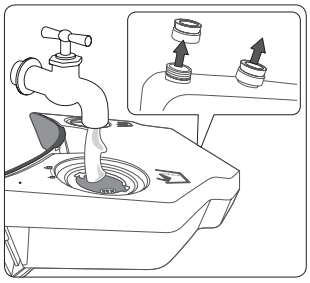

Untitled-47 45 2015-01-26 3:28:53

การคืนสภาพจากการเป็นน้ำแข็ง

เครื่องซักผ้าอาจกลายเป็นน้ำแข็งเมื่ออุณหภูมิต่ำกว่า 0 °C

1. ปิดเครื่องซักผ้า และถอดปลั๊กสายไฟ
2. เทน้ำอุ่นบนก๊อกน้ำเพื่อคลายท่อจ่ายน้ำให้หลวม
3. ถอดท่อจ่ายน้ำ และแช่ในน้ำอุ่น
4. เทน้ำอุ่นลงในถังซักและปล่อยทิ้งไว้เป็นเวลาประมาณ 10 นาที
5. ต่อท่อจ่ายน้ำเข้ากับก๊อกน้ำอีกครั้ง

ถ้าเครื่องซักผ้ายังคงไม่ทำงานตามปกติ ให้ดำเนินการซ้ำตามขั้นตอนข้างต้นจนกว่าจะสามารถทำงานได้ตามปกติ

การดูแลเมื่อไม่ได้ใช้งานเป็นเวลานาน

โปรดหลีกเลี่ยงการไม่ใช้เครื่องซักผ้าเป็นเวลานาน

ถ้าเกิดกรณีนี้ขึ้น ให้ระบายน้ำออกจากเครื่องซักผ้าและถอดปลั๊กสายไฟ

1. บนหน้าจอหลัก ให้แตะ **โปรแกรม** > **ผ้าฝ้าย** พร้อมกับใช้ตัวเลือก **ซักเร็ว**
2. แตะ **เริ่ม** ในขณะที่ถังซักว่างเปล่า
3. เมื่อโปรแกรมดำเนินการเสร็จ ให้ปิดก๊อกน้ำและถอดท่อจ่ายน้ำ
4. ปิดเครื่องซักผ้า และถอดปลั๊กสายไฟ
5. เปิดประตูเพื่อให้มีอากาศไหลเวียนในถังซัก

Untitled-47 46 2015-01-26 3:28:53

การแก้ไขปัญหา

จุดตรวจสอบ

ถ้าคุณพบว่าเกิดปัญหากับเครื่องซักผ้า โปรดตรวจสอบที่ตารางด้านล่างนี้ก่อนและลองดำเนินการตามคำแนะนำ

ปัญหา	การดำเนินการ
เครื่องซักผ้าไม่เริ่มทำงาน	• ตรวจสอบว่าเสียบปลั๊กเรียบร้อย • ตรวจสอบว่าประตูปิดเหมาะสมแล้ว • ตรวจสอบว่าก๊อกน้ำเปิดอยู่ • แตะ **เริ่ม** อีกครั้งบนหน้าจอหลัก
การจ่ายน้ำไม่เพียงพอ หรือไม่มีการจ่ายน้ำ	• เปิดก๊อกน้ำเต็มที่ • ตรวจสอบว่าท่อจ่ายน้ำไม่จับตัวเป็นน้ำแข็ง • ตรวจสอบว่าท่อจ่ายน้ำไม่บิดงอหรืออุดตัน • ทำความสะอาดตัวกรองที่ท่อจ่ายน้ำ
เครื่องซักผ้าสั่นมากหรือเกิดเสียง	• ตรวจสอบว่าเครื่องซักผ้าตั้งอยู่บนพื้นที่เรียบเสมอกัน ถ้าพื้นที่เรียบเสมอกัน ให้ใช้ขาตั้งปรับระดับเพื่อปรับระดับ • ตรวจสอบว่านำหมุดสำหรับการขนส่งออกแล้ว • ตรวจสอบว่าเครื่องซักผ้าไม่ได้สัมผัสกับวัตถุอื่น • ตรวจสอบว่าปริมาณผ้าอยู่ในถังอย่างสมดุล
เครื่องซักผ้าไม่ทิ้งน้ำ และ/หรือปั่นหมาด	• ตรวจสอบว่าท่อทิ้งน้ำเหยียดตรงตลอดเส้นทางไปยังระบบระบายน้ำ • ตรวจสอบว่าตัวกรองเศษผ้าไม่อุดตัน
ประตูไม่เปิด	• แตะ **เริ่ม** เพื่อหยุดการทำงานของเครื่องซักผ้า • ประตูเครื่องซักผ้าจะล็อคระหว่างรอบการให้ความร้อนของโปรแกรมการฆ่าเชื้อโรค • อาจใช้เวลาหลายวินาทีเพื่อปลดกลไกการล็อค
เครื่องซักผ้าสร้างฟองจำนวนมาก	• ตรวจสอบว่ามีการระบุการตั้งค่า เติมน้ำยาซักผ้าอัตโนมัติ และ เติมน้ำยาปรับผ้านุ่มอัตโนมัติ ไว้อย่างถูกต้องแล้ว • โปรดใช้น้ำยาซักผ้าประเภทที่แนะนำตามความเหมาะสม
ฉันไม่สามารถเทผงซักฟอกเพิ่มได้	• ตรวจสอบปริมาณน้ำยาซักผ้าและน้ำยาปรับผ้านุ่มที่เหลืออยู่เพื่อดูว่ามีปริมาณถึงขีดจำกัดแล้วหรือยัง • โปรดตรวจสอบว่าได้เปิดใช้งาน ระบบจ่ายอัตโนมัติ พร้อมกับใช้การตั้งค่าทั้ง ความกระด้างของน้ำ และ ความเข้มข้น ที่ระบุไว้อย่างเหมาะสม

ถ้าปัญหาเหล่านี้ยังคงอยู่ โปรดติดต่อศูนย์บริการของ Samsung ในพื้นที่

Untitled-47 47 2015-01-26 3:28:53

รหัสข้อมูล

ถ้าเครื่องซักผ้าไม่ทำงาน คุณสามารถดูรหัสข้อมูลบนหน้าจอได้ โปรดตรวจสอบตารางด้านล่างและลองดำเนินการตามคำแนะนำ

ปัญหา	การดำเนินการ
DE	• ตรวจสอบว่าประตูปิดเหมาะสมแล้ว • ตรวจสอบว่าผ้าไม่ได้ติดอยู่ที่ประตู
4E	• ตรวจสอบว่าก๊อกน้ำเปิดอยู่ • ตรวจสอบว่าเครื่องซักผ้าต่อกับแหล่งจ่ายน้ำที่มีแรงดันเพียงพอ • ทำความสะอาดตะแกรงตัวกรองเมื่อมีการอุดตัน
5E	• ทำความสะอาดตัวกรองเมื่อมีการอุดตัน • ตรวจสอบว่าท่อทิ้งน้ำไม่บิดงอตลอดเส้นทางไปยังระบบระบายน้ำ • ทำความสะอาดตะแกรงตัวกรองเมื่อมีการอุดตัน
UE	• ผ้าไม่สมดุล กระจายผ้าให้เท่าๆ กัน
CE/3E/UC	• ผู้ใช้ไม่สามารถแก้ไขได้เอง โปรดติดต่อศูนย์บริการของ Samsung ในพื้นที่

ถ้ารหัสข้อมูลยังคงปรากฏบนหน้าจอ โปรดติดต่อศูนย์บริการของ Samsung ในพื้นที่

Untitled-47 48 2015-01-26 3:28:53

ข้อมูลจำเพาะ

การปกป้องสิ่งแวดล้อม

- อุปกรณ์นี้ได้รับการผลิตจากวัสดุรีไซเคิล หากคุณต้องการทิ้งอุปกรณ์นี้ โปรดปฏิบัติตามระเบียบการทิ้งขยะของพื้นที่ ตัดสายไฟเพื่อป้องกันไม่ให้มีการต่อสายไฟกับเครื่องใช้ไฟฟ้านี้อีก ถอดประตูออก เพื่อป้องกันไม่ให้สัตว์หรือเด็กติดอยู่ภายใน
- อย่าใช้ผงซักฟอกเกินปริมาณที่แนะนำโดยผู้ผลิตผงซักฟอก
- ใช้สารขจัดคราบและสารฟอกขาวก่อนการซักเฉพาะเมื่อจำเป็นเท่านั้น
- ประหยัดน้ำและไฟฟ้าโดยซักเต็มถัง (ปริมาณผ้าขึ้นอยู่กับโปรแกรมที่ใช้)

Untitled-47 49 2015-01-26 3:28:53

ผังการดูแลผ้า

สัญลักษณ์ต่อไปนี้เป็นคำแนะนำในการดูแลผ้า ฉลากการดูแลผ้าประกอบด้วยสัญลักษณ์สี่อย่างตามลำดับ: การซัก การฟอกขาว การอบแห้ง และการรีด (ตลอดจนการซักแห้ง ถ้าจำเป็น) การใช้สัญลักษณ์ช่วยให้มีความสม่ำเสมอระหว่างผู้ผลิตเสื้อผ้าแต่ละรายทั้งสำหรับผ้าในประเทศและผ้าที่นำเข้า โปรดปฏิบัติตามฉลากการดูแลเพื่อยืดอายุการใช้งานของผ้าและลดปัญหาในการซัก

	ผ้าหนา		ห้ามรีด
	ผ้าบาง		ซักแห้งด้วยสารทำละลายใดก็ได้
	ซักผ้าได้ที่ความร้อน 95 °C		ซักแห้ง
	ซักผ้าได้ที่ความร้อน 60 °C		ซักแห้งด้วยเปอร์คลอไรด์ น้ำมันไฟแช็ก แอลกอฮอล์บริสุทธิ์ หรือ R113 เท่านั้น
	ซักผ้าได้ที่ความร้อน 40 °C		ซักแห้งด้วยน้ำมันเครื่องบิน แอลกอฮอล์บริสุทธิ์ หรือ R113 เท่านั้น
	ซักผ้าได้ที่ความร้อน 30 °C		ห้ามซักแห้ง
	ซักมือเท่านั้น		ห้ามแขวน
	ซักแห้งเท่านั้น		แขวนได้
	ใช้สารฟอกขาวในน้ำเย็นได้		ตากด้วยไม้แขวนเสื้อ
	ห้ามใช้สารฟอกขาว		ใช้เครื่องอบ ความร้อนปกติ
	สามารถรีดที่ความร้อนสูงสุด 200 °C		ใช้เครื่องอบ ความร้อนต่ำ
	สามารถรีดที่ความร้อนสูงสุด 150 °C		ห้ามใช้เครื่องอบ
	สามารถรีดที่ความร้อนสูงสุด 100 °C		

Untitled-47 50 2015-01-26 3:28:55

ข้อมูลจำเพาะ

ประเภท			เครื่องซักผ้าฝาหน้า
ชื่อรุ่น			WW10H9*****
ขนาด			ก 600 x ล 600 x ส 850 (มม.)
แรงดันน้ำ			50 kPa ~ 800 kPa
ปริมาณน้ำ			68 ล.
น้ำหนักสุทธิ			87 กก.
ความจุในการซักและการปั่นหมาด			10.0 กก.
การใช้พลังงานไฟฟ้า	ขณะซัก	220 โวลต์	150 วัตต์
		240 โวลต์	150 วัตต์
	ซักและอบร้อน	220 โวลต์	2000 วัตต์
		240 โวลต์	2300 วัตต์
	ปั่นหมาด	220~240โวลต์	700 วัตต์
	ปั๊ม		30 วัตต์
การหมุนปั่นหมาด		รอบต่อนาที	1400, 1600

Untitled-47 51 2015-01-26 3:28:55

SAMSUNG

ถ้าคุณมีคำถามหรือข้อคิดเห็น

ประเทศ	โทรศัพท์	หรือเยี่ยมชมเว็บไซต์ของเราที่
THAILAND	0-2689-3232 1800-29-3232	www.samsung.com/th/support

DC68-03377L-01